

DST Setting Module : 5123

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>



To return to the Timekeeping Mode from any other mode, hold down (C) button for about two seconds.

1.



Keep (A) button depressed for about five seconds. The Second Hand will move to the city code.

2.



STD or DST

Press (B) button to toggle STD and DST.

3.



Press (A) button to return to the Timekeeping Mode.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>