


## CLEANING THE IMAGING GUIDE AND PAPER SENSORS

1. Remove dust and debris from this area by using a Staticide wipe or a small brush. Be careful not to scratch the glass when cleaning.
2. Wipe the imaging guide with a Staticide wipe.

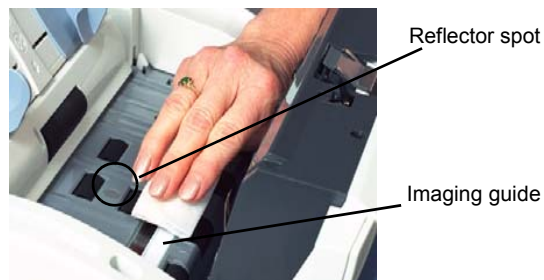

**IMPORTANT:** *Staticide wipes contain isopropanol which can cause eye irritation and dry skin. Wash your hands with soap and water after performing maintenance procedures. Refer to the User's Guide for MSDS acquisition.*

3. Wipe the imaging guide again with an almost-dry Staticide wipe to remove any streaks.
4. Clean the reflector spot using the almost-dry Staticide wipe to remove any dust or streaks.

## K NUMBER, SERIAL NUMBER AND DATA-PLATE LOCATION

The K Number, Serial Number and Dataplate can be found on the bottom of the scanner.

To access the dataplate:

- Carefully tilt the scanner back until you can see the dataplate on the bottom of the scanner.



Dataplate

Serial number and  
K number

## SUPPLIES\*

CAT No.	Description
174 7849	Kodak Feed Module / for i30/i40 Scanners
853 5981	Kodak Digital Science Roller Cleaning Pads (qty 24)
896 5519	Staticide Wipes for Kodak Scanners (qty 144)

\* Items are subject to change.

## Kodak i30/i40 Scanners



## Quick Tips

[www.kodak.com](http://www.kodak.com)

**Kodak Service**  
**1-800-822-1414**

**Kodak Parts Services**  
**1-800-471-0803**  
**1-585-724-6042**

**Kodak Professional Services**  
**1-800-525-6325**

COMMERCIAL  
IMAGING




EASTMAN KODAK COMPANY  
Document Imaging  
Rochester, New York 14650

Kodak and Digital Science are trademarks of Eastman Kodak Company.

© Eastman Kodak Company, 2004  
A-61526

## SCANNER DISPLAY AND FRONT PANEL

**Function window** — displays 1-9. These numbers correspond to a defined function or application. This window may also display error codes. See the User's Guide for more information.

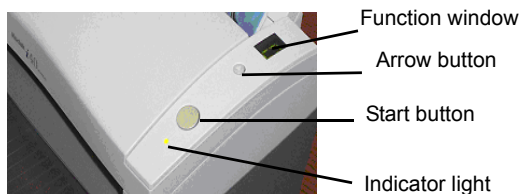

**Arrow button** — allows you to select or scroll through predefined functions or applications for scanning.

**Start button** — initiates the event that has been associated with the Function window. This is assigned in the Kodak Launch Software.

**Indicator light** — illuminates or flashes indicating scanner status.

- **Steady green:** scanner is ready to scan.
- **Flashing green:** scanner lamps are warming up, preparing to scan.
- **Flashing red:** error indication such as, Scanner Cover Open, in conjunction with the Function window displaying an "E" with a corresponding error code.

Error Code	Description
0	USB cable not connected or PC not on
1-5, 7 and 8	Call Service
6	The scanner cover is open
9	Document jam

## POWER SWITCH AND CONNECTORS



**Power switch** — turns the scanner on and off.

**Power port** — connects the power cord to the scanner.

**USB port** — connects the scanner to the PC.

**NOTE:** It is preferable to connect to a USB 2.0 PC port for better performance.

## CLEANING AND MAINTENANCE

For detailed cleaning and replacement procedures, see the *Maintenance* section in the User's Guide.

### OPENING THE SCANNER COVER

1. Turn off the scanner.
2. Press the release button to open the cover.
3. Pull up to open the scanner.



4. Close the door when finished cleaning internal components or replacing parts.
5. Turn on the scanner.

### CLEANING THE FEED MODULE

For cleaning the feed module and rollers we recommend using the *Kodak Digital Science* Roller Cleaning Pads.

1. Open the Scanner cover.
2. To remove the feed module, squeeze the plastic clamps that hold the feed module in place and lift the feed module out of position.
3. Wipe the feed module from top to bottom.




4. Inspect the feed module. If worn or multi-feeding continues to occur after cleaning, replace the feed module.
5. Insert the feed module by aligning the module into the slots and pushing it in until both clamps snap into place.
6. Close the scanner cover.

## CLEANING THE ROLLERS

The scanner transport rollers and imaging guide should be cleaned routinely for optimum performance. Some paper types and operating environments require cleaning more often than specified in the User's Guide. Whenever paper feeding and image quality are less than desirable follow these steps.

1. Turn off the scanner.
2. Open the scanner cover.
3. With a roller cleaning pad, wipe the feed roller from side to side. Rotate the feed rollers to clean the entire surface.

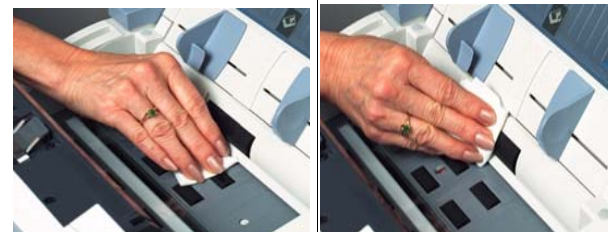

**IMPORTANT:** The Roller Cleaning Pad contains sodium lauryl ether sulfate which can cause eye irritation. Refer to the User's Guide for MSDS acquisition.

4. Dry the rollers with a lint-free cloth.

## REPLACING THE FEED MODULE

1. Open the scanner cover.
2. To remove the feed module, squeeze the plastic clamps that hold the feed module in place and lift the feed module out of position.



3. Insert the new feed module by aligning the new module into the slots and pushing it in until both clamps snap into place.
4. Close the scanner cover.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>