

1



2



3



4



5



6

7



8



9



10



UK

Kompersnaß GmbH · Burgstraße 21 · D-44867 Bochum · www.kompersnaß.com
ID No.: KH5501-06/06-V1

**Balance KH 5501 hair trimmer
for nose, ears and sideburns**

1. Intended use

You can use this hair trimmer for
- gently removing hair from the nose and ears
- trimming beard and sideburns.
This appliance is intended exclusively for private use.
It is not intended for commercial applications.

Technical Data

Power supply: 1x 1.5V DC (type "AA")
Protection rating: IPX 4

To prevent injuries:

- ⚠ Insert the appliance into the nostril or ear only as far as the narrow tip will reach.
- ⚠ Do not use the appliance if the blades are warped or damaged.
- ⚠ Protect the blades from knocks and do not use excessive force. This will prevent the blades from becoming damaged.
- ⚠ Do not open the casing: there are no operating elements inside.
- ⚠ Do not allow children or elderly persons to play with the appliance unsupervised. These are not always able to assess possible dangers correctly.

2. Delivery contents/appliance description

- 1 Cleaning brush
- 2 Moustache comb
- 3 Protective cap
- 4 Hand unit with on-off switch
- 5 Battery compartment
- 6 Battery compartment lid
- 7 Blade attachment for sideburns and beard
- 8 Blade attachment for nasal and ear hairs
- 9 Blade oil
- 10 Base unit for handy storage

3. Inserting the battery

- ⇒ Turn the battery compartment lid anticlockwise to open the battery compartment.
 - ⇒ Insert one AA/UM3 type battery. Observe the correct polarity (this is indicated in the battery compartment).
 - ⇒ Close the battery compartment.
- For the best results, we recommend using alkaline batteries.
The battery is not included in the package contents.

4. Changing the blade attachment

- ⇒ Select a blade attachment.
- ⇒ Set the attachment on the hand unit, offset at an angle of about 45°.
- ⇒ Turn the attachment clockwise to fasten.
- ⇒ Turn the attachment anticlockwise to release and remove.

5. Removing nasal and ear hairs

- ⇒ Attach the blade attachment for nose/ear hair as described in section 4.
- ⇒ Make sure that the attachment is correctly fastened before using.
- ⇒ Only then switch on the hand unit, using the on-off switch (switch to position 1).
- ⇒ Carefully insert the tip of the blade attachment into the nostril / ear. The rotating precision blades remove your hair painlessly.
- ⇒ Switch off the appliance after use (switch to position "0").

6. Trimming beard and sideburns.

- ⇒ Attach the blade attachment for side burns and beard as described in section 4.
- ⇒ Make sure that the attachment is correctly fastened before using.
- ⇒ Only then switch on the hand unit, using the on-off switch (switch to position 1).
- ⇒ Run the blade attachment over the skin without using excessive force. Hold the attachment vertically to the skin.
- ⇒ Switch off the appliance after use (switch to position "0").

7. Cleaning and care

- ⇒ Remove the attached blade attachment from the hand unit and clean it under running water.
Warning: The hand unit is only protected against splashed water. Never submerge it in water.
- ⇒ Dry the blade attachment completely.
- ⇒ Using the brush, clean off any hairs remaining on the attachment blades.
- ⇒ Periodically lubricate the blades on the attachments, using the blade oil supplied.
- ⇒ Do not use cleaning agents or solvents. These can damage the plastic surfaces.
- ⇒ Keep the appliance in a cool dry place.
- ⇒ Remove the battery if you are not going to use the appliance for a long period.

8. Disposal



Do not dispose of the device in normal domestic waste.

Dispose of the device over a registered waste disposal firm or through your communal waste disposal facility. Observe the currently valid regulations. In case of doubt, consult your waste disposal facility.
Batteries may not be disposed of with normal domestic waste. All consumers are statutorily obliged to dispose of batteries at the collection point in their community/district or with the original supplier.
Only dispose of batteries when they are fully discharged.

9. Warranty & Service

The warranty conditions and the service address can be found on the warranty slip.

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Hand over the manual to anyone, whom you pass on the appliance to.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>