

## Wireless Mobile Utility (iOS) User's Manual

Install the Wireless Mobile Utility on your iOS device (iPhone, iPad, or iPod touch) to download pictures from a camera or take pictures remotely.

The Wireless Mobile Utility supports the following cameras. Some feature built-in Wi-Fi, while others require an optional wireless mobile adapter. See the section for your camera for more information on using the Wireless Mobile Utility.

**A** *D600, D7100, D5200*

 [2-21](#)

**B** *D3200, COOLPIX A*

 [22-41](#)

**C** *Nikon 1: V2, J3, S1*

 [42-59](#)

**D** *COOLPIX: P520, P330, S9500, S6600, S6500, S5200, AW110*

 [60-79](#)

Save where otherwise noted, the camera illustrations in this manual show the D3200.


### Trademark Information

Wi-Fi is a registered trademark of the Wi-Fi Alliance. IOS is a trademark or registered trademark of Cisco in the U.S.A. and other countries and is used under license. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective holders.

This section describes the options available when the Wireless Mobile Utility and an optional wireless mobile adapter are used to connect to D600, D7100, and D5200 cameras.


## Features

Use the Wireless Mobile Utility to:

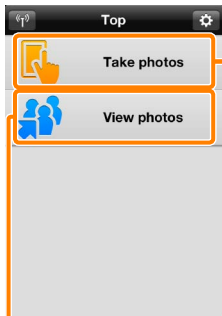

**Take pictures remotely** (📖 6): Tap the shutter icon in the Wireless Mobile Utility to take pictures and download them to the iOS device.

**Download pictures as they are taken** (📖 9): Take pictures with the camera and save them to the iOS device.

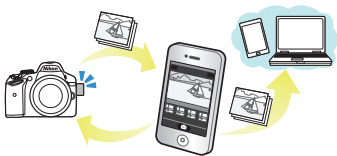

**View pictures** (📖 11): View the pictures stored on the iOS device or the camera memory card.

**Download pictures** (📖 14): Download existing pictures from the camera memory card.

**Share pictures** (📖 17): Share pictures via e-mail or upload pictures to photo-sharing sites.

For information on inserting the adapter, see page [4](#).

## Notices

- No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in this manual at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this manual may contain.

## System Requirements

Before installing the Wireless Mobile Utility, confirm that your iOS device meets the following system requirements:

<b>OS</b>	iOS 6.0 or later
<b>Wireless LAN</b>	11b/g/n

### Using This Application for the First Time

Read the terms of use (page [21](#)) before connecting.

### The Wireless Mobile Adapter

While the adapter is inserted, the camera exposure meters will not turn off; monitor the camera battery level to ensure that the camera does not power off unexpectedly. In addition, some camera menu items may be grayed out and unavailable and the camera can not be used for playback or live view. Movie recording can not be used.

## Installing the App



- 1 Locate the app on the App Store.**  
Connect to the App Store on the iOS device and search for "Wireless Mobile Utility".
- 2 Install the app.**  
Install the Wireless Mobile Utility.

## Establishing a Wireless Connection

- 1 Connect the wireless mobile adapter.**  
Attach the wireless mobile adapter to the camera and turn the camera on. See the manual supplied with the wireless mobile adapter for details.
- 2 Enable Wi-Fi on the iOS device.**  
If Wi-Fi is off, turn it on.
- 3 Select the appropriate SSID.**  
The default SSID begins with "Nikon". iOS-compliant devices can not be connected using WPS.
- 4 Launch the Wireless Mobile Utility.**  
After selecting **On** for **Privacy > Photos > WMU**, launch the Wireless Mobile Utility. When a connection is established, the LED on the wireless mobile adapter will glow green and the main dialog for the Wireless Mobile Utility will be displayed on the iOS device. For information on taking pictures, see page [6](#). For information on viewing pictures, see page [11](#).

## Connection Status

Connection status is shown by an icon in the home display:

- : Connection established.
- : No connection. Tap the icon to open the iOS device settings menu and check Wi-Fi settings.



## Taking Photos


Take pictures remotely from the iOS device, or take pictures with the camera and save them to the iOS device.

### Remote Photography

Follow the steps below to take photos from the iOS device.

#### **1** Tap **Take photos**.

The camera viewfinder will go dark and the iOS device will display the view through the camera lens.

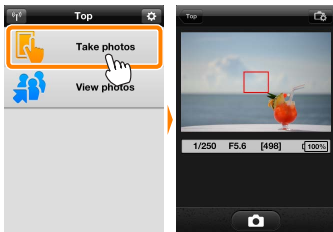


#### **2** Focus.

In normal- and wide-area AF AF-area modes, tap the subject in the display to focus (if subject-tracking AF is selected, the camera will focus using wide-area AF).

### 3 Tap the shutter icon.

The shutter will be released after you remove your finger from the icon; the resulting photo is first saved to the camera memory card and then downloaded to the iOS device. There is no need to point the iOS device at the wireless mobile adapter.

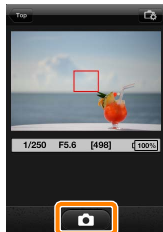


#### Remote Photography

Remote photography ends automatically when the battery in the camera or iOS device runs low. Note that using remote photography for an extended period may cause the camera's internal temperature to rise; if necessary, remote photography will end automatically to minimize damage to camera circuits.


The iOS device can not be used to adjust camera settings; use camera controls to adjust settings before starting Step 1. Regardless of the release mode selected with the camera, only one picture will be taken each time you tap the shutter icon. Note that the display may not update smoothly depending on the device and network conditions.

A shutter speed of "Time" is available in mode **M**. Choose a shutter speed of **bulb** on the camera and select **Shoot > WMU** on the iOS device (page 8), then tap the shutter icon to open the shutter. Shooting ends when the icon is tapped again.

## The Remote Photography Display

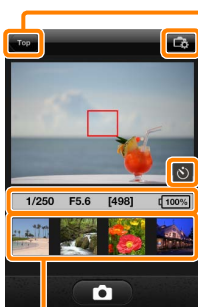

**Top:** Return to the top display.

: Display the following photography-related options.

- **Shoot:** Choose whether to take pictures using the iOS device (**WMU**) or the camera (**Camera**).
- **Live view:** Turn the live view display on or off.
- **Download after shooting:** Choose whether pictures are automatically downloaded to the iOS device. Available only when **WMU** is selected for **Shoot**.
- **Self-timer:** If **On** is selected, the camera shutter will be released 2 s after you tap the shutter icon. The timer turns off automatically after the shutter is released.

**Self-timer icon:** Displayed when the self-timer is on.

**Camera settings:** Shutter speed, aperture, etc. Not displayed when device is in landscape orientation.


**Thumbnail area:** Downloaded pictures.




## Downloading Photos as They Are Taken

Take photos with the camera and save them to the iOS device.


### 1 Tap Take photos.

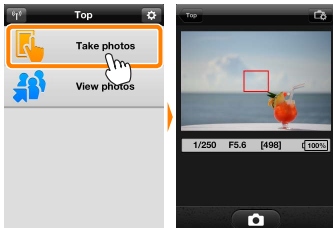

### 2 Tap .

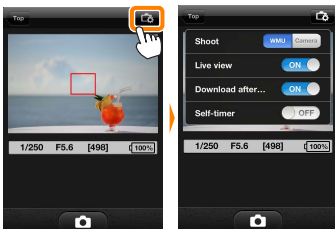

### 3 Tap Camera.

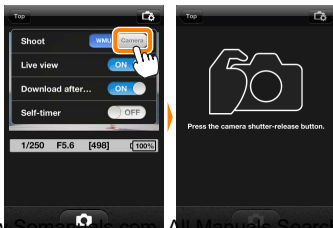


#### 4 Take photos.


Frame photos in the camera viewfinder and shoot. Photos are downloaded to the iOS device after being saved to the camera memory card.



#### The Photo Capture Display

The photo capture display is shown below.

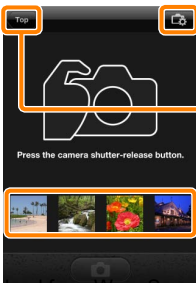

: Display **Shoot** options and choose whether to take pictures using the iOS device (**WMU**) or the camera (**Camera**).

**Top**: Return to the top display.

**Thumbnail area**: Downloaded pictures.


## Viewing Photos

Tap **View photos** to view the pictures stored on the iOS device. You can also view the pictures on the camera memory card and download selected images to the iOS device.

### Viewing Pictures


View the pictures in camera memory or on the iOS device.

#### **1** Tap **View photos**.

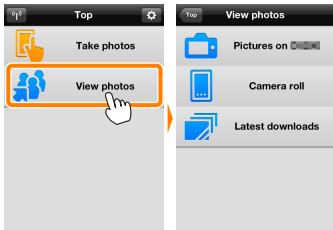

## 2 Choose a device.

Tap **Pictures on camera** to view the pictures on the camera memory card, **Camera roll** to view the pictures stored in the camera roll on the iOS device. The pictures will be displayed as small “thumbnail” images.

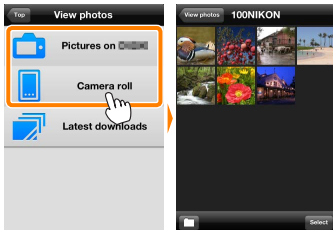

## 3 View pictures.

Tap a thumbnail to display the picture full frame. You can then swipe left or right to view additional pictures, or tap **i** to view information about the current image.




## ❑ Movies


The Wireless Mobile Utility can not be used to view or download movies.

## ❑ Deleting Pictures

Pictures can not be deleted using the Wireless Mobile Utility, but pictures can be deleted from the camera roll on the iOS device.

## ❑ Choosing a Folder


The iOS device will either show a folder list or display the pictures on the camera memory card as small “thumbnail” images. When thumbnails are displayed, the folders can be viewed by tapping the  icon, while folders are displayed, you can tap a folder to view its contents in a thumbnail list.

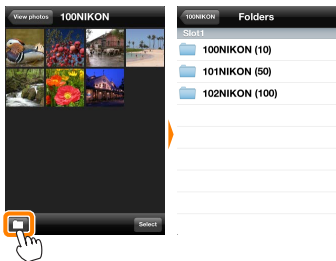

## Downloading Existing Pictures


Download pictures to the camera roll on the iOS device.

### 1 Tap View photos.

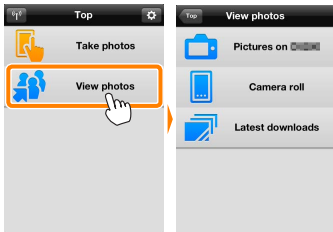

### 2 Tap Pictures on camera.

Tap Pictures on camera to view the pictures on the camera.

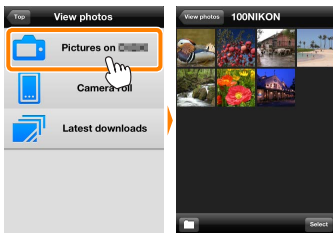


### Dropped Connections


If the wireless connection is lost while a picture is being downloaded, the picture will not be saved to the iOS device (connection loss may occur if, for example, the camera turns off during download). Any pictures downloaded before the connection was interrupted are unaffected.

### 3 Select pictures for download.

Tap **Select** and then thumbnails to select or deselect (to deselect all pictures, tap **ALL**). Selected pictures are indicated by a check mark.

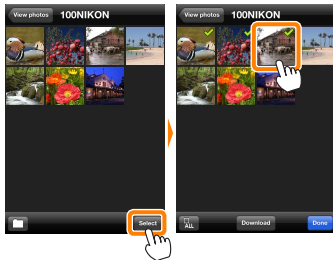

Alternatively, you can select pictures by tapping a picture in the thumbnail list to display it full frame and then tapping the check mark to select or deselect. Swipe left or right to view additional pictures or tap the folder name to return to the thumbnail list.

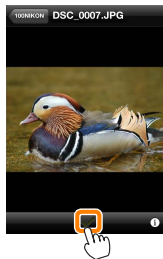


### ✓ Downloading Existing Pictures

NEF (RAW) images are converted to JPEG format; if the images were recorded using an NEF (RAW) + JPEG option, only the JPEG copy will be downloaded. Exif data will be adapted to iOS specifications.

#### 4 Tap Download.

Tap **Download** to download the selected pictures to the camera roll on the iOS device.

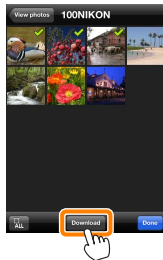

If multiple pictures are selected, a confirmation dialog will be displayed; tap **Yes** to download the pictures at the size selected for **Image size** in the **Settings** menu (page [19](#)).



If only one picture is selected, you will be prompted to choose the size at which the picture will be copied to the iOS device. Choose a size (page [19](#)) and then tap **Download** to download the picture.




#### Image Size

 Regardless of the size selected, pictures may sometimes be downloaded at their original size.

#### Location Data

The options shown at right will be displayed if **Settings > Embed location data > View photos** is enabled (page [20](#)).






## Sharing Pictures


Before sharing pictures, connect to a network with Internet access.

### 1 Tap View photos.

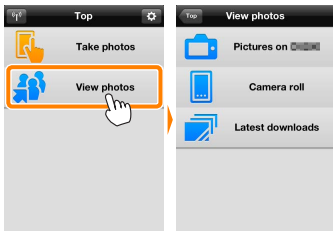

### 2 Choose Camera roll or Latest downloads.

Tap **Camera roll** to view the pictures already downloaded to the iOS camera roll, **Latest downloads** to view the most recently downloaded photos (up to 12) at their original image quality and size.

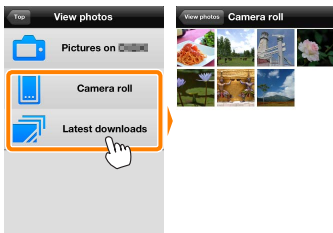


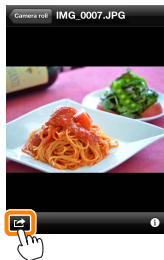
### 3 View pictures.

Tap a thumbnail to view the picture full frame.




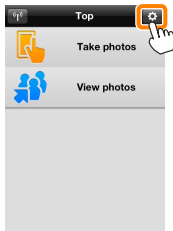
### 4 Tap .

After displaying a picture you want to share, tap  and choose from a list of picture-sharing apps and functions (the specific contents of the list vary from device to device).



## Wireless Mobile Utility Options

The options listed below can be accessed by tapping the  icon in the Wireless Mobile Utility top display.



## Connection Status

Option	Description
Camera	The model name and battery level for the camera currently connected.
Wireless Mobile Adapter	View the wireless mobile adapter product name and firmware version.

## Settings

Option	Description
Synchronize clock	Synchronize the camera clock with the iOS device.
Set camera clock	Synchronize the camera clock with the iOS device.
Set automatically	If <b>On</b> is selected, the camera clock will automatically be synchronized with the iOS device when a connection is established.
Thumbnails	Choose the size of the thumbnails in the playback display.
Image size	When downloading multiple images, select <b>Recommended size</b> or <b>VGA</b> to copy images at sizes approximately equivalent to 1920 × 1080 or 640 × 480, respectively.

Option	Description
<b>WMA settings (Wireless Mobile Adapter settings)</b>	Adjust network settings for the wireless mobile adapter.
<b>SSID</b>	Choose an SSID for the wireless mobile adapter. The iOS device displays the SSID when you connect to the network manually.
<b>Authentication</b>	Choose the authentication method used for connection to the network.
<b>Password</b>	Enter a password. The password type is selected using <b>Advanced settings &gt; Password entry</b> : choose <b>ASCII</b> for an 8- to 63-character alphanumeric password, <b>HEX</b> for a 64-digit hexadecimal password.
<b>Channel</b>	Choose the wireless channel used by the network.
<b>Auto power-off delay</b>	Choose the delay before the wireless mobile adapter enters sleep when there is no wireless connection.
<b>Advanced settings</b>	<ul style="list-style-type: none"> <li>• <b>Password entry</b>: Choose the password type.</li> <li>• <b>Sub-net mask</b>: Enter a subnet mask.</li> <li>• <b>DHCP server IP address</b>: Enter the wireless mobile adapter IP address.</li> <li>• <b>DHCP client IP address</b>: Enter the iOS device IP address.</li> </ul>
<b>Format settings</b>	Restore default settings.
<b>Embed location data</b>	Choose whether to embed iOS location data in pictures not already containing location data provided by the camera. Location data will not be embedded if the iOS device is unable to acquire its current location.

## **Battery Warning Level**

Remote photography will end automatically when the camera or iOS device battery reaches the selected level.

## **Help**

<b>Option</b>	<b>Description</b>
<b>Instructions</b>	View instructions for using the Wireless Mobile Utility.
<b>Support websites</b>	Access the support site for the Wireless Mobile Utility.
<b>App version</b>	View Wireless Mobile Utility version information.

## **Terms of Use**


View the Wireless Mobile Utility terms of use.

## B D3200, COOLPIX A

This section describes the options available when the Wireless Mobile Utility and an optional wireless mobile adapter are used to connect to D3200 and COOLPIX A cameras.


### Features

Use the Wireless Mobile Utility to:

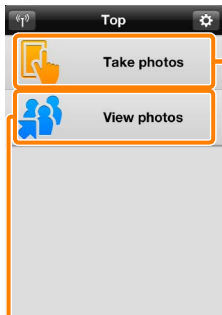

**Take pictures remotely** (📖 26): Tap the shutter icon in the Wireless Mobile Utility to take pictures and download them to the iOS device.

**Download pictures as they are taken** (📖 29): Take pictures with the camera and save them to the iOS device.

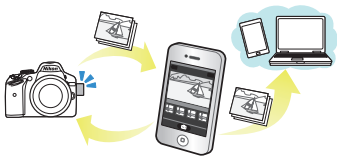

**View pictures** (📖 31): View the pictures stored on the iOS device or the camera memory card.

**Download pictures** (📖 34): Download existing pictures from the camera memory card.

**Share pictures** (📖 37): Share pictures via e-mail or upload pictures to photo-sharing sites.

For information on inserting the adapter, see page [24](#).

## Notices

- No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in this manual at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this manual may contain.

## System Requirements

Before installing the Wireless Mobile Utility, confirm that your iOS device meets the following system requirements:

<b>OS</b>	iOS 6.0 or later
<b>Wireless LAN</b>	11b/g/n

### Using This Application for the First Time

Read the terms of use (page [41](#)) before connecting.

### The Wireless Mobile Adapter

While the adapter is inserted, the camera exposure meters will not turn off; monitor the camera battery level to ensure that the camera does not power off unexpectedly. In addition, some camera menu items may be grayed out and unavailable and the camera can not be used for playback or live view. Movie recording can not be used.

## Installing the App

- 1 Locate the app on the App Store.**  
Connect to the App Store on the iOS device and search for "Wireless Mobile Utility".
- 2 Install the app.**  
Install the Wireless Mobile Utility.



## Establishing a Wireless Connection

- 1 Connect the wireless mobile adapter.**  
Attach the wireless mobile adapter to the camera and turn the camera on. See the manual supplied with the wireless mobile adapter for details.
- 2 Enable Wi-Fi on the iOS device.**  
If Wi-Fi is off, turn it on.
- 3 Select the appropriate SSID.**  
The default SSID begins with "Nikon". iOS-compliant devices can not be connected using WPS.
- 4 Launch the Wireless Mobile Utility.**  
After selecting **On** for **Privacy > Photos > WMU**, launch the Wireless Mobile Utility. When a connection is established, the LED on the wireless mobile adapter will glow green and the main dialog for the Wireless Mobile Utility will be displayed on the iOS device. For information on taking pictures, see page [26](#). For information on viewing pictures, see page [31](#).



## Connection Status

Connection status is shown by an icon in the home display:

- : Connection established.
- : No connection. Tap the icon to open the iOS device settings menu and check Wi-Fi settings.



## Taking Photos


Take pictures remotely from the iOS device, or take pictures with the camera and save them to the iOS device.

### Remote Photography

Follow the steps below to take photos from the iOS device.


#### **1** Tap Take photos.

The camera viewfinder will go dark and the iOS device will display the view through the camera lens.

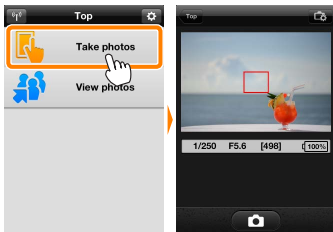

#### **2** Tap the shutter icon.

Tap the shutter. If the camera is able to focus, the shutter will be released after you remove your finger from the icon; the resulting photo is first saved to the camera memory card and then downloaded to the iOS device. There is no need to point the iOS device at the wireless mobile adapter.

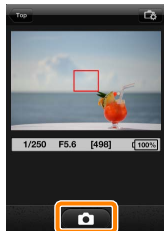

## Remote Photography


Remote photography ends automatically when the battery in the camera or iOS device runs low. Note that using remote photography for an extended period may cause the camera's internal temperature to rise; if necessary, remote photography will end automatically to minimize damage to camera circuits.

The iOS device can not be used to adjust camera settings; use camera controls to adjust settings before starting Step 1. Regardless of the release mode selected with the camera, only one picture will be taken each time you tap the shutter icon. Note that the display may not update smoothly depending on the device and network conditions.

In normal- and wide-area AF AF-area modes, the camera will focus on the subject in the focus area selected with the camera; if subject-tracking AF is selected, the camera will focus using wide-area AF.

## The Remote Photography Display

**Top:** Return to the top display.


: Display the following photography-related options.

- **Shoot:** Choose whether to take pictures using the iOS device (**WMU**) or the camera (**Camera**).
- **Download after shooting:** Choose whether pictures are automatically downloaded to the iOS device. Available only when **WMU** is selected for **Shoot**.
- **Self-timer:** If **On** is selected, the camera shutter will be released 2 s after you tap the shutter icon. The timer turns off automatically after the shutter is released.

**Self-timer icon:** Displayed when the self-timer is on.

**Camera settings:** Shutter speed, aperture, etc. Not displayed when device is in landscape orientation.


**Thumbnail area:** Downloaded pictures.

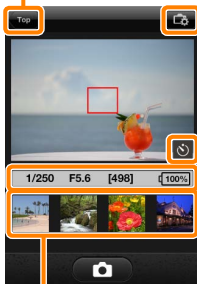


## Downloading Photos as They Are Taken

Take photos with the camera and save them to the iOS device.


### 1 Tap Take photos.

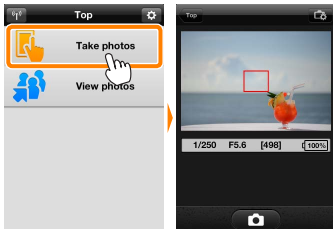

### 2 Tap .

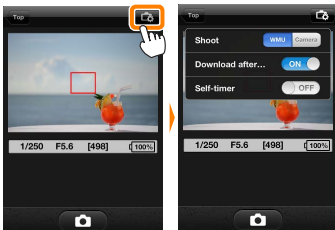

### 3 Tap Camera.

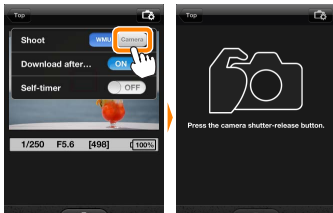


## 4 Take photos.


Frame photos in the camera viewfinder and shoot. Photos are downloaded to the iOS device after being saved to the camera memory card.



### The Photo Capture Display

The photo capture display is shown below.

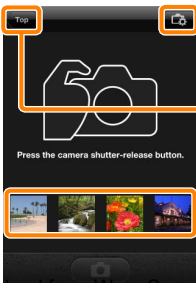

: Display **Shoot** options and choose whether to take pictures using the iOS device (**WMU**) or the camera (**Camera**).

**Top**: Return to the top display.

**Thumbnail area**: Downloaded pictures.


## Viewing Photos

Tap **View photos** to view the pictures stored on the iOS device. You can also view the pictures on the camera memory card and download selected images to the iOS device.

### Viewing Pictures


View the pictures in camera memory or on the iOS device.

#### **1** Tap **View photos**.

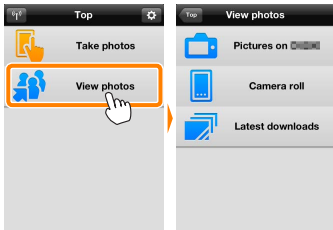

## 2 Choose a device.

Tap **Pictures on camera** to view the pictures on the camera memory card, **Camera roll** to view the pictures stored in the camera roll on the iOS device. The pictures will be displayed as small “thumbnail” images.

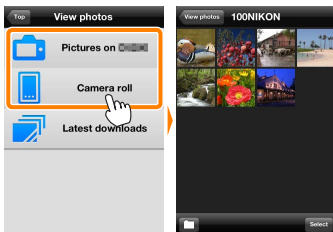

## 3 View pictures.

Tap a thumbnail to display the picture full frame. You can then swipe left or right to view additional pictures, or tap **i** to view information about the current image.






## ❑ Movies


The Wireless Mobile Utility can not be used to view or download movies.

## ❑ Deleting Pictures

Pictures can not be deleted using the Wireless Mobile Utility, but pictures can be deleted from the camera roll on the iOS device.

## ❑ Choosing a Folder


The iOS device will either show a folder list or display the pictures on the camera memory card as small “thumbnail” images. When thumbnails are displayed, the folders can be viewed by tapping the  icon, while folders are displayed, you can tap a folder to view its contents in a thumbnail list.

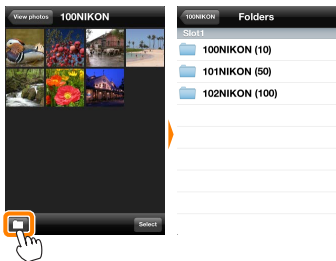

## Downloading Existing Pictures


Download pictures to the camera roll on the iOS device.

### 1 Tap View photos.

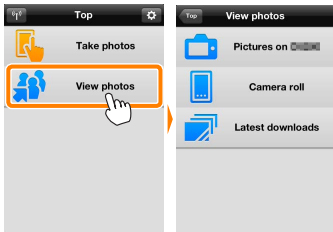

### 2 Tap Pictures on camera.

Tap Pictures on camera to view the pictures on the camera.

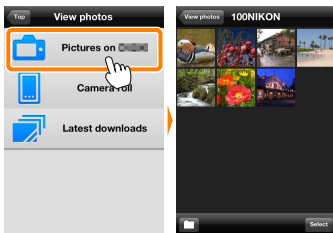


### Dropped Connections


If the wireless connection is lost while a picture is being downloaded, the picture will not be saved to the iOS device (connection loss may occur if, for example, the camera turns off during download). Any pictures downloaded before the connection was interrupted are unaffected.

### 3 Select pictures for download.

Tap **Select** and then thumbnails to select or deselect (to deselect all pictures, tap **ALL**). Selected pictures are indicated by a check mark.

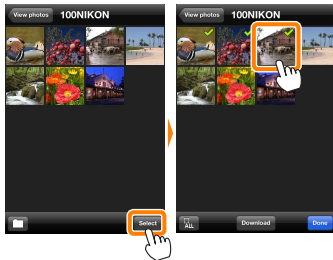

Alternatively, you can select pictures by tapping a picture in the thumbnail list to display it full frame and then tapping the check mark to select or deselect. Swipe left or right to view additional pictures or tap the folder name to return to the thumbnail list.

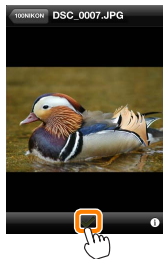


### ✓ Downloading Existing Pictures

NEF (RAW) images are converted to JPEG format; if the images were recorded using an NEF (RAW) + JPEG option, only the JPEG copy will be downloaded. Exif data will be adapted to iOS specifications.

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download

#### 4 Tap Download.


Tap **Download** to download the selected pictures to the camera roll on the iOS device.

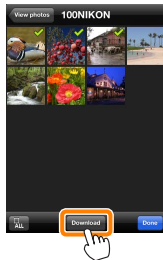

If multiple pictures are selected, a confirmation dialog will be displayed; tap **Yes** to download the pictures at the size selected for **Image size** in the **Settings** menu (page [39](#)).



If only one picture is selected, you will be prompted to choose the size at which the picture will be copied to the iOS device. Choose a size (page [39](#)) and then tap **Download** to download the picture.

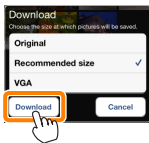


#### Image Size

Regardless of the size selected, pictures may sometimes be downloaded at their original size.

#### Location Data

 
The options shown at right will be displayed if **Settings > Embed location data > View photos** is enabled (page [40](#)).



## Sharing Pictures


Before sharing pictures, connect to a network with Internet access.

### 1 Tap View photos.

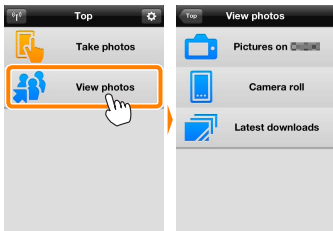

### 2 Choose Camera roll or Latest downloads.

Tap **Camera roll** to view the pictures already downloaded to the iOS camera roll, **Latest downloads** to view the most recently downloaded photos (up to 12) at their original image quality and size.

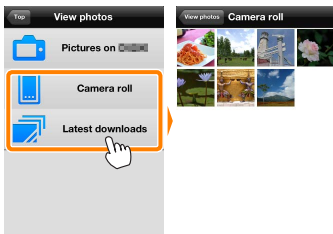


### 3 View pictures.

 Tap a thumbnail to view the picture full frame.




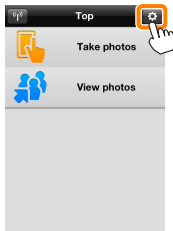
### 4 Tap .

After displaying a picture you want to share, tap  and choose from a list of picture-sharing apps and functions (the specific contents of the list vary from device to device).



## Wireless Mobile Utility Options

The options listed below can be accessed by tapping the  icon in the Wireless Mobile Utility top display.



## Connection Status

Option	Description
Camera	The model name and battery level for the camera currently connected.
Wireless Mobile Adapter	View the wireless mobile adapter product name and firmware version.

## Settings

Option	Description
Synchronize clock	Synchronize the camera clock with the iOS device.
Set camera clock	Synchronize the camera clock with the iOS device.
Set automatically	If <b>On</b> is selected, the camera clock will automatically be synchronized with the iOS device when a connection is established.
Thumbnails	Choose the size of the thumbnails in the playback display.
Image size	When downloading multiple images, select <b>Recommended size</b> or <b>VGA</b> to copy images at sizes approximately equivalent to 1920 × 1080 or 640 × 480, respectively.

Option	Description
<b>WMA settings (Wireless Mobile Adapter settings)</b>	Adjust network settings for the wireless mobile adapter.
<b>SSID</b>	Choose an SSID for the wireless mobile adapter. The iOS device displays the SSID when you connect to the network manually.
<b>Authentication</b>	Choose the authentication method used for connection to the network.
<b>Password</b>	Enter a password. The password type is selected using <b>Advanced settings &gt; Password entry</b> : choose <b>ASCII</b> for an 8- to 63-character alphanumeric password, <b>HEX</b> for a 64-digit hexadecimal password.
<b>Channel</b>	Choose the wireless channel used by the network.
<b>Auto power-off delay</b>	Choose the delay before the wireless mobile adapter enters sleep when there is no wireless connection.
<b>Advanced settings</b>	<ul style="list-style-type: none"> <li>• <b>Password entry</b>: Choose the password type.</li> <li>• <b>Sub-net mask</b>: Enter a subnet mask.</li> <li>• <b>DHCP server IP address</b>: Enter the wireless mobile adapter IP address.</li> <li>• <b>DHCP client IP address</b>: Enter the iOS device IP address.</li> </ul>
<b>Format settings</b>	Restore default settings.
<b>Embed location data</b>	Choose whether to embed iOS location data in pictures not already containing location data provided by the camera. Location data will not be embedded if the iOS device is unable to acquire its current location.



## **Battery Warning Level**

Remote photography will end automatically when the camera or iOS device battery reaches the selected level.

## **Help**

<b>Option</b>	<b>Description</b>
<b>Instructions</b>	View instructions for using the Wireless Mobile Utility.
<b>Support websites</b>	Access the support site for the Wireless Mobile Utility.
<b>App version</b>	View Wireless Mobile Utility version information.


## **Terms of Use**

View the Wireless Mobile Utility terms of use.


This section describes the options available when the Wireless Mobile Utility and an optional wireless mobile adapter are used to connect to Nikon 1 V2, J3, and S1 cameras.

## Features

Use the Wireless Mobile Utility to:

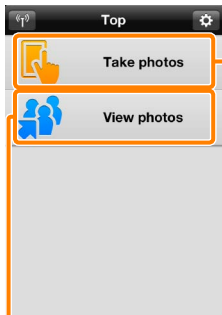

**Take pictures remotely** (📖 46): Tap the shutter icon in the Wireless Mobile Utility to take pictures and download them to the iOS device.

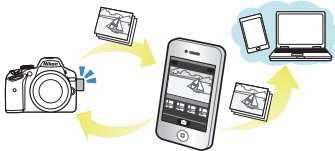

**View pictures** (📖 49): View the pictures stored on the iOS device or the camera memory card.

**Download pictures** (📖 52): Download existing pictures from the camera memory card.

**Share pictures** (📖 55): Share pictures via e-mail or upload pictures to photo-sharing sites.

For information on inserting the adapter, see page [44](#).

## Notices

- No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in this manual at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this manual may contain.

## System Requirements

Before installing the Wireless Mobile Utility, confirm that your iOS device meets the following system requirements:

<b>OS</b>	iOS 6.0 or later
<b>Wireless LAN</b>	11b/g/n

### Using This Application for the First Time

Read the terms of use (page [59](#)) before connecting.

### The Wireless Mobile Adapter

While the adapter is inserted, the camera exposure meters will not turn off; monitor the camera battery level to ensure that the camera does not power off unexpectedly. In addition, some camera menu items may be grayed out and unavailable and the camera can not be used for playback or live view. Movie recording can not be used.

## Installing the App



- 1 Locate the app on the App Store.**  
Connect to the App Store on the iOS device and search for “Wireless Mobile Utility”.
- 2 Install the app.**  
Install the Wireless Mobile Utility.

## Establishing a Wireless Connection

- 1 Connect the wireless mobile adapter.**  
Attach the wireless mobile adapter to the camera and turn the camera on. See the manual supplied with the wireless mobile adapter for details.
- 2 Enable Wi-Fi on the iOS device.**  
If Wi-Fi is off, turn it on.
- 3 Select the appropriate SSID.**  
The default SSID begins with “Nikon”. iOS-compliant devices can not be connected using WPS.
- 4 Launch the Wireless Mobile Utility.**  
After selecting **On** for **Privacy > Photos > WMU**, launch the Wireless Mobile Utility. When a connection is established, the LED on the wireless mobile adapter will glow green and the main dialog for the Wireless Mobile Utility will be displayed on the iOS device. For information on taking pictures, see page [46](#). For information on viewing pictures, see page [49](#).

## Connection Status

Connection status is shown by an icon in the home display:

- : Connection established.
- : No connection. Tap the icon to open the iOS device settings menu and check Wi-Fi settings.




## Taking Photos

Follow the steps below to take photos from the iOS device.


### 1 Tap Take photos.

The camera viewfinder will go dark and the iOS device will display the view through the camera lens.

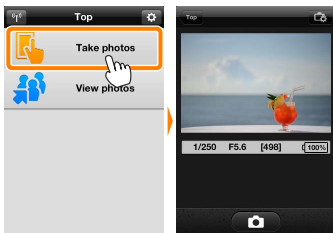

### 2 Tap the shutter icon.

The shutter will be released after you remove your finger from the icon and the camera focuses (note that no photo will be taken if the camera is unable to focus); the resulting photo is first saved to the camera memory card and then downloaded to the iOS device. There is no need to point the iOS device at the wireless mobile adapter.

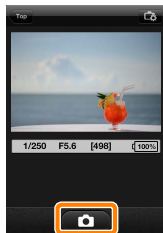

## ✔ Remote Photography


Remote photography ends automatically when the battery in the camera or iOS device runs low. Note that using remote photography for an extended period may cause the camera's internal temperature to rise; if necessary, remote photography will end automatically to minimize damage to camera circuits.

The iOS device can not be used to adjust camera settings; use camera controls to adjust settings before starting Step 1. Regardless of the release mode selected with the camera, only one picture will be taken each time you tap the shutter icon. Note that the display may not update smoothly depending on the device and network conditions.

Regardless of the settings selected with the camera, pictures will be taken in mode **P** (programmed auto) using single-servo autofocus (AF-S) and auto-area AF. **Face-priority AF** is disabled and the focus point is not displayed.

## The Remote Photography Display

**Top:** Return to the top display.


: Display the following photography-related options.

- **Download after shooting:** Choose whether pictures are automatically downloaded to the iOS device.
- **Self-timer:** If **On** is selected, the camera shutter will be released 2 s after you tap the shutter icon. The timer turns off automatically after the shutter is released.

**Self-timer icon:** Displayed when the self-timer is on.

**Camera settings:** Shutter speed, aperture, etc. Not displayed when device is in landscape orientation.

**Thumbnail area:** Downloaded pictures.

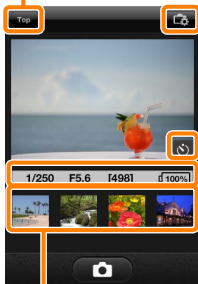




## Viewing Photos

Tap **View photos** to view the pictures stored on the iOS device. You can also view the pictures on the camera memory card and download selected images to the iOS device.

### Viewing Pictures


View the pictures in camera memory or on the iOS device.

#### **1** Tap **View photos**.

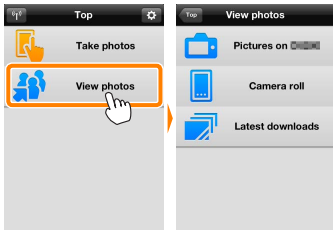


## 2 Choose a device.

Tap **Pictures on camera** to view the pictures on the camera memory card, **Camera roll** to view the pictures stored in the camera roll on the iOS device. The pictures will be displayed as small “thumbnail” images.

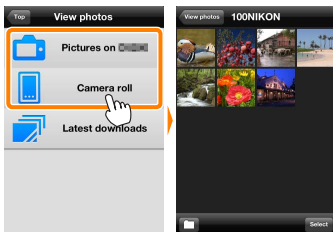

## 3 View pictures.

Tap a thumbnail to display the picture full frame. You can then swipe left or right to view additional pictures, or tap **i** to view information about the current image.

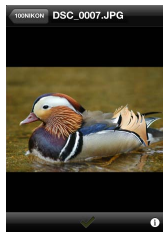


## ❑ Movies


The Wireless Mobile Utility can not be used to view or download movies.

## ❑ Deleting Pictures

Pictures can not be deleted using the Wireless Mobile Utility, but pictures can be deleted from the camera roll on the iOS device.

## ❑ Choosing a Folder


The iOS device will either show a folder list or display the pictures on the camera memory card as small “thumbnail” images. When thumbnails are displayed, the folders can be viewed by tapping the  icon, while folders are displayed, you can tap a folder to view its contents in a thumbnail list.

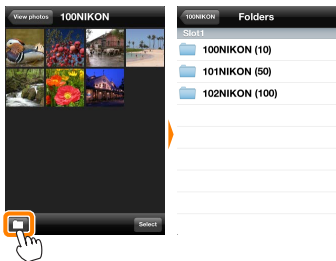

## Downloading Existing Pictures


Download pictures to the camera roll on the iOS device.

### 1 Tap View photos.

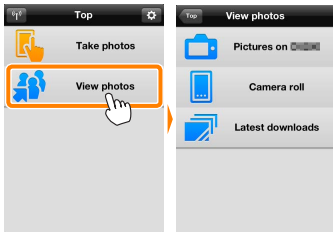

### 2 Tap Pictures on camera.

Tap Pictures on camera to view the pictures on the camera.

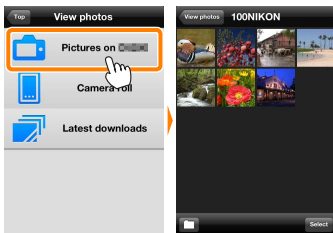


### Dropped Connections


If the wireless connection is lost while a picture is being downloaded, the picture will not be saved to the iOS device (connection loss may occur if, for example, the camera turns off during download). Any pictures downloaded before the connection was interrupted are unaffected.

### 3 Select pictures for download.

Tap **Select** and then thumbnails to select or deselect (to deselect all pictures, tap **ALL**). Selected pictures are indicated by a check mark.

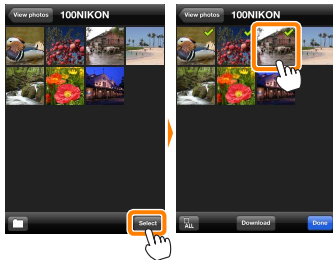

Alternatively, you can select pictures by tapping a picture in the thumbnail list to display it full frame and then tapping the check mark to select or deselect. Swipe left or right to view additional pictures or tap the folder name to return to the thumbnail list.

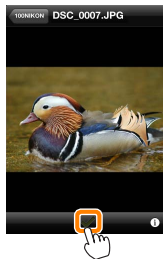


### ✓ Downloading Existing Pictures

NEF (RAW) images are converted to JPEG format; if the images were recorded using an NEF (RAW) + JPEG option, only the JPEG copy will be downloaded. Exif data will be adapted to iOS specifications.

#### 4 Tap Download.


Tap **Download** to download the selected pictures to the camera roll on the iOS device.

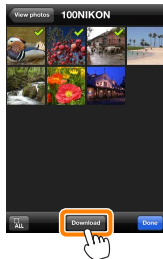

If multiple pictures are selected, a confirmation dialog will be displayed; tap **Yes** to download the pictures at the size selected for **Image size** in the **Settings** menu (page 57).



If only one picture is selected, you will be prompted to choose the size at which the picture will be copied to the iOS device. Choose a size (page 57) and then tap **Download** to download the picture.

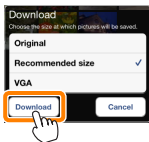


#### Image Size

Regardless of the size selected, pictures may sometimes be downloaded at their original size.

#### Location Data

 
The options shown at right will be displayed if **Settings > Embed location data > View photos** is enabled (page 58).



## Sharing Pictures


Before sharing pictures, connect to a network with Internet access.

### 1 Tap View photos.

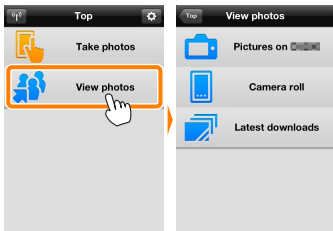

### 2 Choose Camera roll or Latest downloads.

Tap **Camera roll** to view the pictures already downloaded to the iOS camera roll, **Latest downloads** to view the most recently downloaded photos (up to 12) at their original image quality and size.

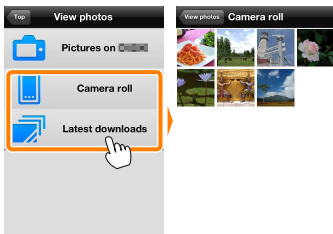


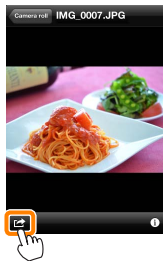
### 3 View pictures.

Tap a thumbnail to view the picture full frame.




### 4 Tap .


After displaying a picture you want to share, tap  and choose from a list of picture-sharing apps and functions (the specific contents of the list vary from device to device).





## Wireless Mobile Utility Options

The options listed below can be accessed by tapping the  icon in the Wireless Mobile Utility top display.

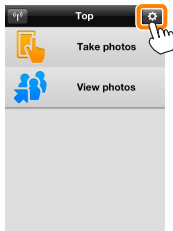

## Connection Status

Option	Description
Camera	The model name and battery level for the camera currently connected.
Wireless Mobile Adapter	View the wireless mobile adapter product name and firmware version.

## Settings

Option	Description
Synchronize clock	Synchronize the camera clock with the iOS device.
Set camera clock	Synchronize the camera clock with the iOS device.
Set automatically	If <b>On</b> is selected, the camera clock will automatically be synchronized with the iOS device when a connection is established.
Thumbnails	Choose the size of the thumbnails in the playback display.
Image size	When downloading multiple images, select <b>Recommended size</b> or <b>VGA</b> to copy images at sizes approximately equivalent to 1920 × 1080 or 640 × 480, respectively.

Option	Description
<b>WMA settings (Wireless Mobile Adapter settings)</b>	Adjust network settings for the wireless mobile adapter.
<b>SSID</b>	Choose an SSID for the wireless mobile adapter. The iOS device displays the SSID when you connect to the network manually.
<b>Authentication</b>	Choose the authentication method used for connection to the network.
<b>Password</b>	Enter a password. The password type is selected using <b>Advanced settings &gt; Password entry</b> : choose <b>ASCII</b> for an 8- to 63-character alphanumeric password, <b>HEX</b> for a 64-digit hexadecimal password.
<b>Channel</b>	Choose the wireless channel used by the network.
<b>Auto power-off delay</b>	Choose the delay before the wireless mobile adapter enters sleep when there is no wireless connection.
<b>Advanced settings</b>	<ul style="list-style-type: none"> <li>• <b>Password entry</b>: Choose the password type.</li> <li>• <b>Sub-net mask</b>: Enter a subnet mask.</li> <li>• <b>DHCP server IP address</b>: Enter the wireless mobile adapter IP address.</li> <li>• <b>DHCP client IP address</b>: Enter the iOS device IP address.</li> </ul>
<b>Format settings</b>	Restore default settings.
<b>Embed location data</b>	Choose whether to embed iOS location data in pictures not already containing location data provided by the camera. Location data will not be embedded if the iOS device is unable to acquire its current location.

## **Battery Warning Level**

Remote photography will end automatically when the camera or iOS device battery reaches the selected level.

## **Help**

<b>Option</b>	<b>Description</b>
<b>Instructions</b>	View instructions for using the Wireless Mobile Utility.
<b>Support websites</b>	Access the support site for the Wireless Mobile Utility.
<b>App version</b>	View Wireless Mobile Utility version information.


## **Terms of Use**

View the Wireless Mobile Utility terms of use.

This section describes the options available when the Wireless Mobile Utility is used to connect to COOLPIX P520, P330, S9500, S6600, S6500, S5200, and AW110 cameras.

## Features

Use the Wireless Mobile Utility to:

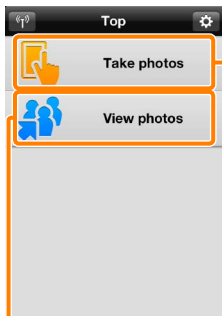

**Take pictures remotely** (📖 64): Tap the shutter icon in the Wireless Mobile Utility to take pictures and download them to the iOS device.

**Download pictures as they are taken** (📖 67): Take pictures with a compatible camera and save them to the iOS device.



**View pictures** (📖 69): View the pictures stored on the iOS device or the camera memory card.

**Download pictures** (📖 72): Download existing pictures from the camera memory card.

**Share pictures** (📖 75): Share pictures via e-mail or upload pictures to photo-sharing sites.

Note that an optional wireless mobile adapter is required when the app is used with cameras not equipped with built-in wireless; for information on inserting the adapter, see page 62.

## Notices

- No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in this manual at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this manual may contain.

## System Requirements

Before installing the Wireless Mobile Utility, confirm that your iOS device meets the following system requirements:

<b>OS</b>	iOS 6.0 or later
<b>Wireless LAN</b>	11b/g/n

### Using This Application for the First Time

Read the terms of use (page [79](#)) before connecting.

## Installing the App

- 1 Locate the app on the App Store.**

Connect to the App Store on the iOS device and search for “Wireless Mobile Utility”.
- 2 Install the app.**

Install the Wireless Mobile Utility.

## Establishing a Wireless Connection

The following applies only to cameras without built-in Wi-Fi. For information on cameras with built-in Wi-Fi, see the manual provided with the camera.

- 1 Connect the wireless mobile adapter.**

Attach the wireless mobile adapter to the camera and turn the camera on. See the manual supplied with the wireless mobile adapter for details.
- 2 Enable Wi-Fi on the iOS device.**

If Wi-Fi is off, turn it on.
- 3 Select the appropriate SSID.**

The default SSID begins with “Nikon”. iOS-compliant devices can not be connected using WPS.
- 4 Launch the Wireless Mobile Utility.**



After selecting **On** for **Privacy > Photos > WMU**, launch the Wireless Mobile Utility. When a connection is established, the LED on the wireless mobile adapter will glow green and the main dialog for the Wireless Mobile Utility will be displayed on the iOS device. Take and view pictures as described on pages [64](#) and [69](#), respectively.

## ❑ The Wireless Mobile Adapter (for Cameras Without Built-in Wi-Fi)

While the adapter is inserted, the camera exposure meters will not turn off; monitor the camera battery level to ensure that the camera does not power off unexpectedly. In addition, some camera menu items may be grayed out and unavailable and the camera can not be used for playback or live view. Movie recording can not be used.

### 🔍 Connection Status

Connection status is shown by an icon in the home display:

- : Connection established.
- : No connection. Tap the icon to open the iOS device settings menu and check Wi-Fi settings.



## Taking Photos


Take pictures remotely from the iOS device, or take pictures with the camera and save them to the iOS device.

### Remote Photography

Follow the steps below to take photos from the iOS device.

#### 1 Tap Take photos.

The camera viewfinder will go dark and the iOS device will display the view through the camera lens.

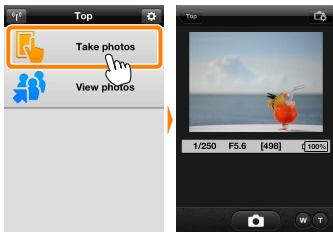

#### 2 Tap the shutter icon.

The shutter will be released after you remove your finger from the icon and the camera focuses; the resulting photo is first saved to the camera memory card and then downloaded to the iOS device. There is no need to point the iOS device at the wireless mobile adapter.






## Remote Photography


Remote photography ends automatically when the battery in the camera or iOS device runs low. Note that using remote photography for an extended period may cause the camera's internal temperature to rise; if necessary, remote photography will end automatically to minimize damage to camera circuits.

The iOS device can not be used to adjust camera settings; use camera controls to adjust settings before starting Step 1. Regardless of the release mode selected with the camera, only one picture will be taken each time you tap the shutter icon. Note that the display may not update smoothly depending on the device and network conditions.

Regardless of the settings selected with the camera, pictures will be taken in  (auto) mode using target finding autofocus. The focus point is not displayed.

## The Remote Photography Display

**Top:** Return to the top display.

: Display the following photography-related options.


- **Shoot\***: Choose whether to take pictures using the iOS device (**WMU**) or the camera (**Camera**).
- **Download after shooting**: Choose whether pictures are automatically downloaded to the iOS device. Available only when **WMU** is selected for **Shoot**.
- **Self-timer**: If **On** is selected, the camera shutter will be released 2 s after you tap the shutter icon. The timer turns off automatically after the shutter is released.

**Self-timer icon**: Displayed when the self-timer is on.

**Camera settings**: Shutter speed, aperture, etc. Not displayed when device is in landscape orientation.

**Optical zoom**: Tap **T** to zoom in, **W** to zoom out.


**Thumbnail area**: Downloaded pictures.

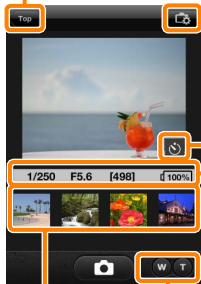


## Downloading Photos as They Are Taken

Take photos with any of the following cameras and save them to the iOS device: S6600.

### 1 Tap Take photos.

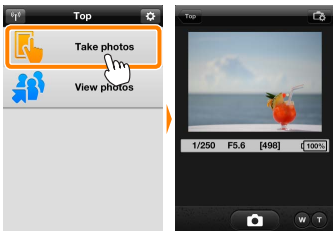

### 2 Tap .

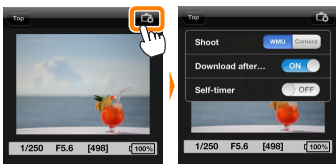

### 3 Tap Camera.




#### 4 Take photos.


Use the camera to frame and shoot photos. Photos are downloaded to the iOS device after being saved to the camera memory card.



#### The Photo Capture Display

The photo capture display is shown below.

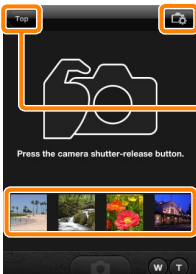

: Display **Shoot** options and choose whether to take pictures using the iOS device (**WMU**) or the camera (**Camera**).

**Top**: Return to the top display.

**Thumbnail area**: Downloaded pictures.


## Viewing Photos

Tap **View photos** to view the pictures stored on the iOS device. You can also view the pictures on the camera memory card and download selected images to the iOS device.

### Viewing Pictures


View the pictures in camera memory or on the iOS device.

#### **1** Tap **View photos**.

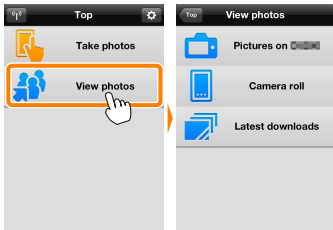

## 2 Choose a device.

Tap **Pictures on camera** to view the pictures on the camera memory card, **Camera roll** to view the pictures stored in the camera roll on the iOS device. The pictures will be displayed as small “thumbnail” images.

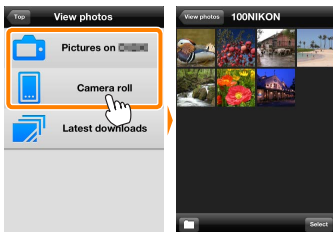

## 3 View pictures.

Tap a thumbnail to display the picture full frame. You can then swipe left or right to view additional pictures, or tap **i** to view information about the current image.




## ❑ Movies


The Wireless Mobile Utility can not be used to view or download movies.

## ❑ Deleting Pictures

Pictures can not be deleted using the Wireless Mobile Utility, but pictures can be deleted from the camera roll on the iOS device.

## ❑ Choosing a Folder


The iOS device will either show a folder list or display the pictures on the camera memory card as small “thumbnail” images. When thumbnails are displayed, the folders can be viewed by tapping the  icon, while folders are displayed, you can tap a folder to view its contents in a thumbnail list.

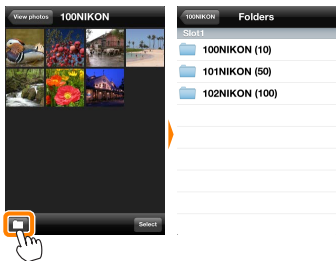

## Downloading Existing Pictures


Download pictures to the camera roll on the iOS device.

### 1 Tap View photos.

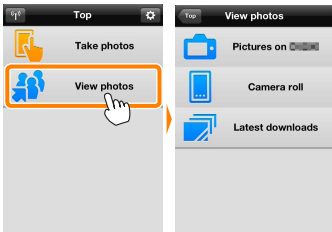

### 2 Tap Pictures on camera.

Tap Pictures on camera to view the pictures on the camera.

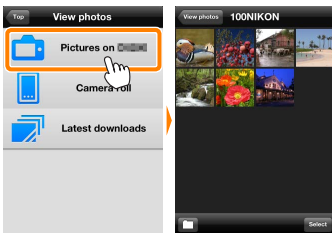


### Dropped Connections

If the wireless connection is lost while a picture is being downloaded, the picture will not be saved to the iOS device (connection loss may occur if, for example, the camera turns off during download). Any pictures downloaded before the connection was interrupted are unaffected.




### 3 Select pictures for download.

Tap **Select** and then thumbnails to select or deselect (to deselect all pictures, tap **ALL**). Selected pictures are indicated by a check mark.

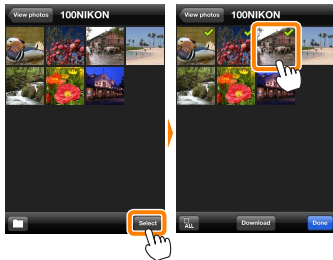

Alternatively, you can select pictures by tapping a picture in the thumbnail list to display it full frame and then tapping the check mark to select or deselect. Swipe left or right to view additional pictures or tap the folder name to return to the thumbnail list.

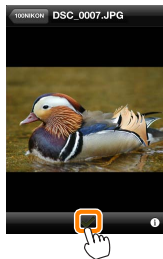


#### ✓ Downloading Existing Pictures

NEF (RAW) images are converted to JPEG format; if the images were recorded using an NEF (RAW) + JPEG option, only the JPEG copy will be downloaded. 3D images are converted to 2D JPEG images. Exif data will be adapted to iOS specifications.

#### 4 Tap Download.


Tap **Download** to download the selected pictures to the camera roll on the iOS device.

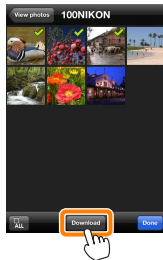

If multiple pictures are selected, a confirmation dialog will be displayed; tap **Yes** to download the pictures at the size selected for **Image size** in the **Settings** menu (page [77](#)).



If only one picture is selected, you will be prompted to choose the size at which the picture will be copied to the iOS device. Choose a size (page [77](#)) and then tap **Download** to download the picture.

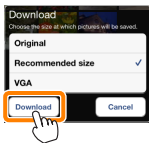


#### Image Size

Regardless of the size selected, pictures may sometimes be downloaded at their original size.

#### Location Data

 
The options shown at right will be displayed if **Settings > Embed location data > View photos** is enabled (page [78](#)).



## Sharing Pictures


Before sharing pictures, connect to a network with Internet access.

### 1 Tap View photos.

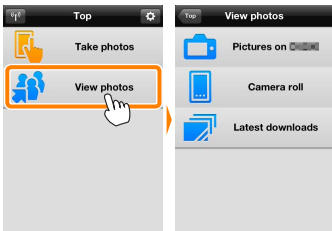

### 2 Choose Camera roll or Latest downloads.

Tap **Camera roll** to view the pictures already downloaded to the iOS camera roll, **Latest downloads** to view the most recently downloaded photos (up to 12) at their original image quality and size (3D images are however converted to 2D JPEG images).

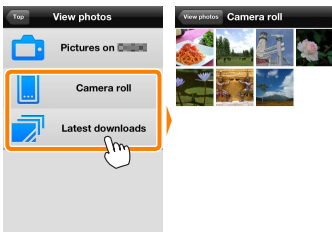


### 3 View pictures.

Tap a thumbnail to view the picture full frame.




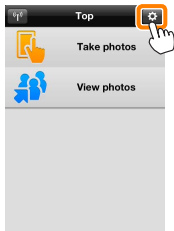
### 4 Tap .

After displaying a picture you want to share, tap  and choose from a list of picture-sharing apps and functions (the specific contents of the list vary from device to device).



## Wireless Mobile Utility Options

The options listed below can be accessed by tapping the  icon in the Wireless Mobile Utility top display.



## Connection Status

Option	Description
Camera	The model name and battery level for the camera currently connected.
Wireless Mobile Adapter	View the wireless mobile adapter product name and firmware version. Not available with cameras that feature built-in Wi-Fi.

## Settings

Option	Description
Synchronize clock	Synchronize the camera clock with the iOS device.
Set camera clock	Synchronize the camera clock with the iOS device.
Set automatically	If <b>On</b> is selected, the camera clock will automatically be synchronized with the iOS device when a connection is established.
Thumbnails	Choose the size of the thumbnails in the playback display.
Image size	When downloading multiple images, select <b>Recommended size</b> or <b>VGA</b> to copy images at sizes approximately equivalent to 1920 × 1080 or 640 × 480, respectively.

Option	Description
<b>WMA settings (Wireless Mobile Adapter settings)</b>	Adjust network settings for the wireless mobile adapter. Not available with cameras that feature built-in Wi-Fi.
<b>SSID</b>	Choose an SSID for the wireless mobile adapter. The iOS device displays the SSID when you connect to the network manually.
<b>Authentication</b>	Choose the authentication method used for connection to the network.
<b>Password</b>	Enter a password. The password type is selected using <b>Advanced settings &gt; Password entry</b> : choose <b>ASCII</b> for an 8- to 63-character alphanumeric password, <b>HEX</b> for a 64-digit hexadecimal password.
<b>Channel</b>	Choose the wireless channel used by the network.
<b>Auto power-off delay</b>	Choose the delay before the wireless mobile adapter enters sleep when there is no wireless connection.
<b>Advanced settings</b>	<ul style="list-style-type: none"> <li>• <b>Password entry</b>: Choose the password type.</li> <li>• <b>Sub-net mask</b>: Enter a subnet mask.</li> <li>• <b>DHCP server IP address</b>: Enter the wireless mobile adapter IP address.</li> <li>• <b>DHCP client IP address</b>: Enter the iOS device IP address.</li> </ul>
<b>Format settings</b>	Restore default settings.
<b>Embed location data</b>	Choose whether to embed iOS location data in pictures not already containing location data provided by the camera. Location data will not be embedded if the iOS device is unable to acquire its current location.

## **Battery Warning Level**

Remote photography will end automatically when the camera or iOS device battery reaches the selected level.

### **Help**

<b>Option</b>	<b>Description</b>
<b>Instructions</b>	View instructions for using the Wireless Mobile Utility.
<b>Support websites</b>	Access the support site for the Wireless Mobile Utility.
<b>App version</b>	View Wireless Mobile Utility version information.

### **Terms of Use**

View the Wireless Mobile Utility terms of use.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>