



ReflexAction
SHAVING SYSTEM



5842/41XL
Rechargeable
Cord/Cordless Razor



PHILIPS

IMPORTANT SAFETY INSTRUCTIONS

When using an electric razor, basic precautions should always be followed, including the following:
Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a razor that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store razor where it can fall or be pulled into a tub or sink. Do not place or drop into water or other liquid.
4. Always unplug this razor from the electrical outlet immediately after use, except when razor is (re)charging.
5. Unplug this razor before cleaning.
6. When **discarding** razor, unplug razor and remove rechargeable batteries. See Battery Removal instructions.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this razor is used by, on, or near children or invalids.
2. Use this razor for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this razor if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the razor to an Authorized Norelco Service Location for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not charge or plug in razor outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

7. Do not use this razor with a damaged or broken comb, as facial injury may occur.
8. Always attach plug to razor first, then to outlet. Be certain that plug is inserted firmly into razor, up to mark indicated on plug. To disconnect, turn razor off then remove plug from outlet.
9. Never put the razor in direct sunlight or store in a pouch at a temperature above 140°F.
10. To prevent possible damage to the cord, do not wrap cord around the razor.

SAVE THESE INSTRUCTIONS

IMPORTANT

Your razor contains NICKEL-CADMIUM RECHARGEABLE BATTERIES. See Battery Removal instruction sheet for battery disposal information.



60 - DAY MONEY-BACK GUARANTEE

To enjoy the closest and most comfortable shave from your new Norelco Men's Razor, the razor should be used exclusively for 3 weeks. This allows your hair and skin enough time to adapt to the Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Norelco Men's Razor, send the product back and we'll refund you the full purchase price.

The razor must be shipped prepaid by insured mail, insurance prepaid, and have the sales slip, indicating purchase price and the date of purchase, enclosed. The razor must be postmarked no later than 60 days after the date of purchase. Norelco reserves the right to verify the purchase price of the razor and limit refunds not to exceed suggested retail price.

Send dated sales slip, your complete name and address as indicated below, and the razor, prepaid to:

Norelco Consumer Products Company
A Division of Philips Electronics North America Corporation
P.O. Box 1116
Skokie, IL 60076

Please allow 4-6 weeks for delivery of check. (Please Print)

Name _____
Address _____
City _____
State _____ Zip _____
Telephone No. (____) _____
AREA CODE

REASON FOR RETURNING: _____

TABLE OF CONTENTS

| | |
|-------------------------------------|------------|
| FEATURES | 2 - 3 |
| INDICATIONS | 4 |
| CHARGING | 4 - 5 |
| PUT IT TO THE TEST & SHAVING TIPS | 5 - 6 |
| HOW TO SHAVE WITH AN ELECTRIC RAZOR | 6 |
| TRIMMING | 6 - 7 |
| CLEANING | 7 - 9 |
| ASSISTANCE | 10 |
| ACCESSORIES | 10 |
| BATTERY REMOVAL | 10 |
| WARRANTY | Back Cover |

2.

FEATURES

Reflex Action Shaving System

Razor Head Assembly

Protective Razor Head Cap


Individually Floating Heads

Razor Head Release Button


Hair Chamber captures shaven hair

Locking ON/OFF Switch

LED Battery Charge Meter
• Shows amount of charge remaining in batteries, Battery Full and Low Battery Indicators

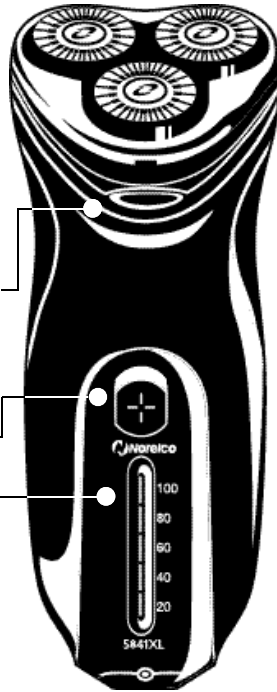


How the Norelco  Lift and Cut® Patented Shaving System Makes Close Comfortable:

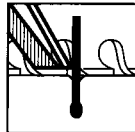

Groove channels beard closer to cutting system



Lifter raises hair

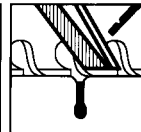

Blade cuts hair which then drops below skin level

3.



Pop-Up Trimmer

Automatic Worldwide Voltage

Cleaning Brush

Travel/Storage Pouch

Rechargeable-Initial 4-hour Full Charge for up to 45 minutes of cordless shave time

Quick Charge


Cord/Cordless-To shave with or without a cord

Full 2-Year Warranty

60-Day Money-Back Guarantee

4.

INDICATIONS

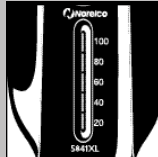

- ▶ **LED Battery Charge Meter**
The number (percentage) on the display indicates approximately how much power there is left in the batteries.
- ▶ **Low Battery Indicator**
When "20" lights red and briefly blinks, this indicates it is time to recharge razor.
- ▶ **Charging Indicator**
When you charge razor, the "20" section on the display turns Red after approximately 3 minutes, it will then turn green and blink. As charging continues, more and more sections of the display meter will briefly blink green and stay lit to indicate what level (percentage) of the batteries have been charged.
- ▶ **Full Charge Indicator**
When the batteries have been fully charged, all sections on the display (20-100) will briefly blink green and stay lit for approximately 8 seconds when razor is turned ON or OFF, and then will disappear.

CHARGING

- ▶ Battery performance is best if you recharge only when the batteries are (almost) completely empty.
- ▶ Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of batteries.
- ▶ Continuously recharging or continuously using as a corded razor will reduce life of batteries.
- ▶ You may also shave using the cord provided. This razor will not recharge while being used corded.
- ▶ Recharge razor only when the red light is ON and "20" starts blinking.
- ▶ Do not charge razor in pouch.

5.

- 1 Connect cord to razor. Plug into any 120V to 240V AC/DC outlet. Use only the cord provided. When you charge razor, the "20" section on the display turns Red after approximately 3 minutes, it will then turn green and blink. As charging continues, more and more sections of the display meter will briefly blink green and stay lit to indicate what level (percentage) of the batteries have been charged.
 - ▶ An adaptor plug may be necessary for cord usage in some foreign countries. Your new razor will automatically convert internally to work on 100V to 240V AC/DC Systems.

- 2 First time charging and recharging after non-use for 1 month or more requires a full 4 hours. When batteries have been fully charged, all sections on the display will briefly blink green and stay lit for approximately 8 seconds.

Recharging

- 1 After initial 4-hour charge, recharging requires approximately 1 hour.
- 2 Disconnect the cord. Do not keep razor permanently connected to the outlet.

Quick Charge

When batteries are totally depleted, recharging the razor for approximately 6 minutes gives enough energy for a 3 minute cordless shave.

PUT IT TO THE TEST & SHAVING TIPS

- ▶ 21 Day Trial and Conversion Process. It is a fact that your skin and beard need to adjust to a new shaving system.
- ▶ Use your new razor exclusively for 3 weeks to fully enjoy the closeness of a Norelco shave.*
- ▶ At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new razor.

- * Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Norelco shaving system.
- ▶ If you are still not convinced after 21 days, Norelco will refund you the full purchase price, guaranteed.

HOW TO SHAVE WITH AN ELECTRIC RAZOR



- ▶ Shaving with a clean, dry face gives the best results.
- 1 Turn razor ON. Shave against the direction of beard growth using both straight and circular movements.
 - 2 Stretch your skin with your free hand so blades can lift and cut whiskers. Gently press razor to skin, so the floating heads can follow the contours of your face. DO NOT press too hard. Too much pressure can pinch the skin into the combs.
 - 3 Turn razor OFF.
 - 4 Put the protective razor head cap on the razor to protect razor heads.
 - 5 Replace your Norelco Reflex Action razor heads (model # HQ5) once a year for optimal shaving results.

TRIMMING

- ▶ To groom sideburns and moustache:

- 1 Turn razor ON.
- 2 Push up Trimmer Slide Switch. The Trimmer can be activated while the razor is running.




- 3 Hold Trimmer as shown and move in downward strokes with gentle pressure.
- 4 Close Trimmer by sliding Trimmer switch down.
- 5 Turn razor OFF.


CLEANING

- ▶ Once A Week: Razor

- 1 Always turn razor OFF, unplug from outlet and remove cord from razor before cleaning.

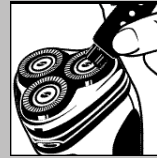

- 2 Clean the top of the razor with the supplied brush.

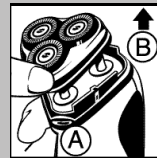


- 3 Press Razor Head Release Button and remove Razor Head Assembly from the razor unit.

- 4 Brush the inside of housing and Razor Head Assembly.
- 5 Replace the Razor Head Assembly back on razor.

- ▶ Every Two Months: Razor Heads

- 1 Turn razor OFF and disconnect from outlet.

8.

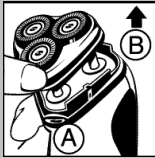

2 Press the Razor Head Release Button and remove Razor Head Assembly from the razor unit.


3 Brush the inside of the razor housing.

4 Turn Razor Head Assembly over so that underside is exposed.




5 Press down and turn wheel of frame counterclockwise.

6 Remove the frame and brush clean.

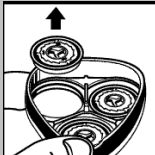

7 Remove and clean one cutter and head at a time.
• Be careful not to mix up cutters and heads. They are a matched set and if interchanged, it will greatly affect shaving performance.


8 Separate the cutter from the head.

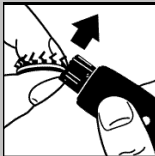

9 Only brush the cutter in an upward motion. Use the short bristled side of the brush.

9.


10 Brush the slots of the razor head.
For optimum performance, razor cutters and heads should be cleaned in a degreasing liquid (e.g. Norelco Razor Cleaner model RC1776 or alcohol) and lubricated with Norelco Razor Lubricant, model AL80, or one drop of mineral oil (in the center of the head).

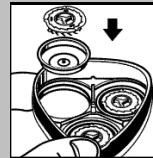

11 Replace the cutter and razor head in the Head Assembly.

12 Repeat the process for the other two razor heads (cutters and heads).

13 Replace the frame.

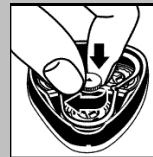

14 Press down and turn the wheel clockwise until it locks into place.

15 Replace the Razor Head Assembly back on razor.

► **After Each Use: Trimmer**

1 Turn razor OFF.

2 Push Trimmer Slide Switch up to pop up Trimmer.

3 Clean Trimmer with the brush after each use.

4 Lubricate the Trimmer teeth with Norelco Razor Lubricant (model AL80), or with one drop of mineral oil every 6 months.

5 Close Trimmer by sliding Trimmer switch down.

10.

ASSISTANCE

- ▶ For assistance or the Authorized Norelco Service Location nearest you, call toll free:

1-800-243-3050
or visit our website: www.norelco.com

- ▶ Authorized Norelco Service Location information is available 24 hours a day, 7 days a week.

ACCESSORIES

- ▶ **Replacement Heads**
 - **Model HQ5** - For maximum razor performance, replace your Norelco Reflex Action razor heads once a year.
- ▶ **Razor Cleaner**
 - **RC1776** - Norelco Razor Cleaner
- ▶ **Razor Lubricant**
 - **AL80** - Norelco Razor Lubricant

Norelco Razor Accessories may be purchased at a store near you, an Authorized Norelco Service Location, on our website www.norelco.com or by using the order form enclosed.

BATTERY REMOVAL

- ▶ This Norelco razor contains rechargeable Nickel-Cadmium batteries, which must be disposed of properly.
- ▶ Batteries should only be removed when razor is to be discarded.
- ▶ Refer to Battery Removal instruction sheet for directions on removing the rechargeable batteries.

FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Norelco Product, Model 5842/5841XL (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.* Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE. NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply take or ship the product postage prepaid to the nearest Authorized Norelco Service Location. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:
Norelco Consumer Products Company
A Division of Philips Electronics North America Corporation
1010 Washington Blvd., Stamford, CT 06912-0015



MADE IN HOLLAND.



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco, Reflex Action, Lift and Cut, and  are Registered Trademarks of Philips Electronics North America Corporation.



is a Trademark of Philips Electronics North America Corporation.

PHILIPS and Philips Shield are Registered Trademarks of Koninklijke Philips Electronics N.V.

© 2001 Philips Electronics North America Corporation. All Rights Reserved. Rev. 1-2/01



4222 001 86971

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>