

REMINGTON®

MICROFLEX® 800



***Use and
Care Guide***

R-9190
R-9290

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while it is plugged in.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as is described in this manual. Do not use attachments not recommended by manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not plug or unplug this appliance when your hands are wet.
- Do not wrap the cord around the appliance.
- Always attach the plug to the appliance, then to the outlet. To disconnect, turn all controls to OFF, then remove plug from outlet. Detach removable power cords from appliances for storage.
- Do not use this appliance with a damaged or broken screen or cutters, as injury may occur.

SAVE THESE INSTRUCTIONS


Contents

English1
 Spanish15
 French29

Product Features

Shaver Parts

 - (A) Head guard
- (B) Head & cutter assembly
- (C) On/off button
- (D) Percentage of charge 6 LED's (R-9290)
- (E) Trimmer button
- (F) Cleaning brush
- (G) Storage pouch
- (H) Charger

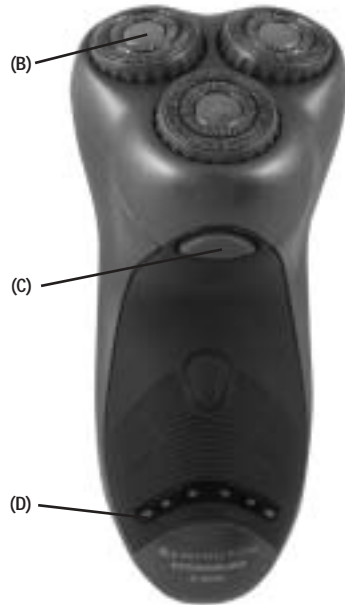

Easy-View® Trimmer

Which model is yours?

	Power system	Run time	Quick charge	Indicator lights			Worldwide voltage
				Charging	Low battery	Fuel	
R-9190	Cord/cordless	60 min	x	x	x		x
R-9290	Cord/cordless	60 min	x			x	x



- R-9190
- Charging indicator (blue)
- Low-charge indicator (red)



- R-9290
- Full battery gauge

How To Use

 
Getting a Close, Comfortable Shave

Congratulations on your purchase of a premium Remington® shaver. The Titanium MicroFlex® 800 has Revolutionary Titanium Shaving Technology.


The Best Technique

It's simple to get a great shave from your new shaver. Here are a few tips for getting the closest shave possible:

Always use a clean, dry shaver. Make sure that the cutter head assembly is in the locked position.

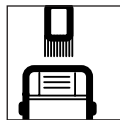

 Wait at least 15 minutes after getting up before shaving, to ensure the face is free of puffiness that may be present from sleeping.

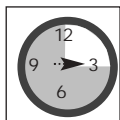


Make sure your face is clean and dry before starting.



To Shave

 Push the on/off button to activate the shaver for shaving.



The MicroFlex® needs no adjustments to the heads or cutters before you shave. The floating heads will automatically adjust to the contours of your face.



It is not necessary to apply pressure while shaving...let the shaver glide lightly on your skin. This gentle touch makes shaving easier and helps avoid possible skin irritation.

Use short, circular strokes. Use your free hand to stretch your skin. This encourages your whiskers to stand out, making it easier for them to enter the cutting chamber.



To Trim

To use the Easy-View® pop-up trimmer, simply push the trimmer button up. The trimmer will pop-up for use. Hold the shaver as shown in the illustration. To conserve battery energy (on rechargeable shavers only), it is recommended to use the trimmer only when needed for trimming. When through using, push the trimmer button downward to lock into the off position.



- Always keep the protective head guard on the cutter head and keep the trimmer in the "off" position when the shaver is not in use. The head guard must be put on with the rear tab to the back of the shaver.

Trim Sideburns

Simply touch the comb-edge of the trimmer to the desired line for neat, clean sideburns.



Trim Mustache

Hold shaver at desired trim line for a quick, easy, professional trim. The trimmer can also be used to trim the upper edge of your mustache.



Usage Tips

Before using read the important safety instruction section in front of the manual.

Charging

Prior to using your shaver for the first time, put it on charge for 24 hours.

To charge your shaver:

- Make sure your shaver is turned off.
- Connect the cord to the shaver and then the charging adapter to the electric outlet. A charging indicator light will come on.
- Your shaver cannot be overcharged, so you can leave it plugged in and charging between shaves.
- Use only the charging adapter supplied with the shaver.
- Special feature allows you to run the shaver directly off the cord. Your shaver will not recharge while you are shaving, so after shaving directly from the cord, turn the unit off and set aside to charge.
- Provides up to two weeks worth of shaving after a one hour charge or a single shave after five minutes of charging.

Model R-9190

A blue indicator light shows charging. A red low-battery indicator illuminates to show when the shaver needs recharging. This also indicates approximately 5 minutes of shaving time left when indicator first comes on.

Model R-9290

A blue lighted fuel gauge displays the amount of charge remaining in 20% increments. When only 20% of the charge remains, the recharge red warning light illuminates.

Troubleshooting:

- If your R-9190/9290 shaver battery is completely dis-charged or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this condition occurs, charge the shaver for approximately five minutes before shaving.
- Your cord/cordless shaver should not be used strictly as a cord-operated shaver, as continued cord only use will result in reduction of battery life.
- In order to preserve the life of the batteries, they should be fully discharged every six months and then fully charged for 24 hours.

Worldwide Voltage (all MicroFlex® models)

You can take your shaver with you when you travel to just about anywhere in the world. Your shaver features worldwide automatic dual voltage conversion providing AC current between 100-240 volts AC, 50-60 Hz. Just plug it in to the local outlet (you may need an adapter plug) and use as usual. Your shaver will convert automatically to the local current requirements.

 
Cleaning & Maintenance

Cleaning your shaver

TO ASSURE OPTIMAL PERFORMANCE, IT IS RECOMMENDED THAT YOU CLEAN YOUR SHAVER AFTER EACH USE. The cutting system of this shaver was designed to be cleaned by rinsing under warm running water or by brushing.


Cleaning your Remington® branded shaver is easy.

- Open the hair pocket by pressing the release button and rotating away from the body of the shaver. You may blow out the stubble thoroughly, or rinse the shaver head in water. Rinse both sides of the head assembly.

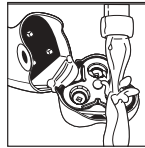


■ At Least Once a Week:

 For more complete cleaning, remove the cutter retainer assembly from the hair pocket by turning the center knob approximately 1/4 turn counter clockwise. Hold cutter retainer assembly as shown, and remove head by turning approximately 1/8 turn in the direction shown. Brush clean both the head and the cutter. Reassemble head to cutter retainer assembly by aligning and turning head 1/8 turn in the opposite direction. Repeat this process for each of the 3 heads. Clean each head and cutter set one

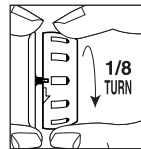

 at a time to prevent mixing cutter components. (These should be kept as sets). After cleaning, place cutter retainer assembly in the hair pocket, and secure by turning center knob approximately 1/4 turn clockwise.

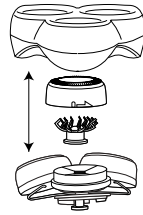

Caution: Never put the shaver completely under water. Do not use any aggressive cleansing agent as this may destroy the shaver coatings.

- To clean and lubricate your shaver's cutters and head assembly, apply Remington® Shaver Saver® (SP-4) Lubricant. The lubricant helps remove hair clippings while reducing wear. A quick spray after each shave keeps your shaver operating at peak performance.

Caution: Do not remove or replace the head assembly while shaver is running or plugged into an electrical outlet as it may cause damage to the unit's cutters.

- Worn or damaged parts should be replaced with Remington® branded replacement parts only.

When is it time to replace your heads and cutters?

It is very important to replace your heads and cutters when necessary to insure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed.

Irritation

As the heads get excessively worn there may be some skin irritation. This would be especially noticed when applying after shave lotion.

Pulling

When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

The replacement part for this shaver is model #SP-21. U.S. residents: To order, contact us at 800-736-4648, visit us at www.remington-products.com or visit your local retailer.

Canadian residents: For any shaver accessory requirements, please call (800) 268-6531 or write: Remington Products (Canada) Inc., P.O. Box 601, Postal Station "T," Dept. A-100, 3019 Dufferin St., Toronto, Ontario, Canada M6B3T7.

Performance Guarantee

Performance Guarantee

Spectrum Brands, Inc. Money-Back Offer

If within 30 days after you have purchased your Remington® brand product, you are not satisfied with it and would like a refund, just return it, together with the sales receipt, to the retailer from whom it was purchased.

Spectrum Brands, Inc. will reimburse all retailers who accept such appliances within 30 days from date of purchase. If you have any questions regarding this money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

Full Two-Year Warranty

Spectrum Brands, Inc. is a global consumer products company with a diverse portfolio of world-class brands, including Remington®-branded electric shavers. Spectrum Brands, Inc. warrants that this product is free from defect in material and workmanship for two years after its original purchase date—except for damage as specified below and these parts meant to be replaced during regular maintenance:

■ SHAVERS: head assembly

If the product should become defective within the warranty period, Spectrum Brands, Inc. will repair it or elect to replace it free of charge. We will return your product, shipping charges prepaid, if you do the following within two years of the purchase date:

1. Return the complete product in person or by mail, postage paid, to Customer Service, Spectrum Brands, Inc., 601 Rayovac Dr., Madison, WI 53711
2. Include the original purchase receipt with the product.
3. Include a description of the problem or defect.
4. Do not return the product to the store that sold it to you.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of it
 - Servicing by unauthorized persons
 - Use with unauthorized accessories
 - Connecting it to incorrect current and voltage
 - Any other conditions beyond our control
- No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.

U.S. residents:

To order shaver accessories contact us at 800-736-4648, visit us at www.remington-products.com, or visit your local retailer.

Canadian residents:

To order shaver accessories, please call 800-268-0425 or visit us at www.remington-products.com

Warranty

Warranty Service

In the U.S. and Canada, service is provided by authorized service dealers. For the address of your nearest authorized service dealer, contact us at 800-736-4648 (in U.S.), 800-268-0425 (in Canada), visit our website at www.remington-products.com or consult your local Yellow Pages under "Shaver-Electric-Repair."

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

Questions or comments:

Call 800-736-4648 in U.S. or 800-268-0425 in Canada.
Or visit www.remington-products.com

100-240 VAC 50/60 Hz

REMINGTON, MICROFLEX, EASY VIEW and SHAVER SAVER are trademarks of ROVCAI, INC.

 
 
© 2005 ROVCAI, INC.
07/05 Job #CS27661
U.S. Patent D447,284 and Patents Pending.

Spectrum Brands, Inc.
800-736-4648
Rayovac Canada
800-268-0425


MADE IN CHINA

T22-17154





REMINGTON®

 

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>