

# YO-P5

 
## OPERATION MANUAL

### NOTICE

SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.

SHARP assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, such as stolen credit card numbers, loss or alteration of stored data, etc. The information provided in this manual is subject to change without notice.

### Part Names

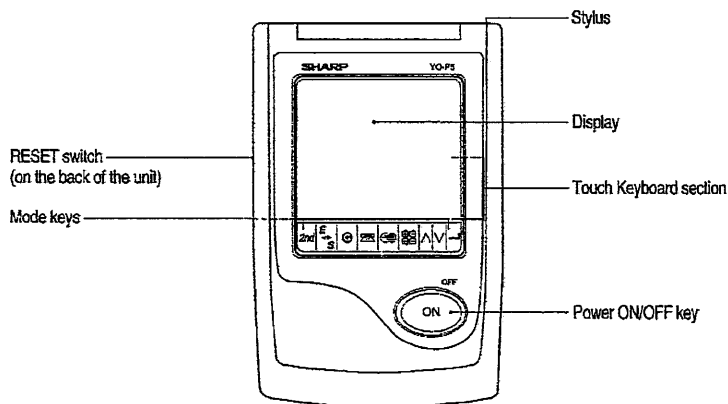

### Key Assignments

<b>2nd</b> Function key	(CLOCK): Home Clock/World Clock mode key
Activates the second function specifically assigned to the next key tapped.	(CALCONV): Calculation/Conversion mode key
<b>E/S</b> (E+S): English-Spanish word translator mode key	(SEARCH): Search keys
<b>G</b> (GAME): Game mode key	(ENTER): Enter key
(SCHEDULE/MEMO): Telephone/Schedule/Memo mode key	

\* In this manual, these Mode keys are represented with icons in parentheses.

### 3. Using World clock

- Tap **CLOCK** once or twice to display the World clock (without "★").
- Tap or to select the desired city.

### 4. Changing the cities between Home and World clocks

You can change the home city for a city in another time zone without adjusting the stored correct time.

- Tap **CLOCK** once or twice to display the World clock (without "★").
- Tap or and select the desired city to be set as the new home city.
- Tap **2nd EDIT** to change the cities between Home and World clocks.
  - The previous home city is now set as the world city (without "★").
- Tap **CLOCK** to check the home city.
  - The selected city in step 2 is set as the home city (with "★").
- Tap **CLOCK** to recheck the world city, and tap or to select the new world city, if needed.

### 5. Setting daylight saving time (DST: summer time)

- Tap **CLOCK** once or twice to display the Home or the World clock.
- Tap **DST**. "S" is displayed. The time is set 1 hour ahead. To clear DST, tap **DST** to clear "S". The time is set 1 hour behind.

#### Notes

- DST can be set independently in either Home or World clock.
- When DST is set for one world city, it is used for all cities displayed in World clock.

### 6. Setting alarms

The Organizer has 3 types of alarms:

- Daily alarm ..... beeps every day at the alarm time (for 1 minute), when "☺" is turned on.
- Hourly alarm ..... beeps every hour when minutes reach "00", when "4" is turned on.
- Schedule alarm ..... beeps at the time for all the schedule entries (for 1 minute), when "☺" is turned on. (Refer to "Schedule Mode".)

Tap any key to stop the alarm beeping.

### Setting/Changing the daily alarm time

- Tap **CLOCK** once or twice to display Home clock (with "★").
- Tap **4** to display the daily alarm screen.
 

ALARM  
A12-00

(The display differs between the 12-hour and 24-hour clock.)
- Tap **2nd EDIT**.
- Enter the time.
  - The daily alarm time is set.

### Turning the alarms on and off

An alarm sounds only when the respective symbol (☺, 4, or ☺) is turned on.

Display Home clock (tap **CLOCK** once or twice) and tap **4** to display the daily alarm screen. Each time you tap **4** while the daily alarm screen is displayed, the combination of symbols switches.

#### Note

- Alarms sound even when the Organizer is turned off.

### Telephone Mode

Telephone mode is composed of two directions of storage memory. Tap **TELSCHEDULEMEMO** to select "1" and "2" on the display. Use these files for convenience, e.g. business and private files.

A telephone entry consists of name, address, E-mail address, web address (URL) and number fields.

### Storing telephone entries

- Tap **TELSCHEDULEMEMO** several times to display the Telephone mode screen.
 

NAME?
- Enter name, e.g. SMITH **SPACE** ROBERT, and tap **ENTER**.
- Enter address, e.g. **2nd 18 SPACE 2nd EAST SPACE ROAD**, and tap **ENTER**.
- Enter E-mail address, e.g. SROB **SMALL**

@harpsec.com\_

- Enter phone number, and fax number if needed, e.g.
 

NUMBER?  
2-3456-7890  
3456-7891

**2nd F SPACE SPACE SPACE 2nd 3456-7891**, and tap **ENTER**.

- "STORED!" appears briefly, then the Telephone mode screen is displayed. The telephone entry is now stored.

Field	Number of characters	Allowable characters
The 1st line: Name, address, E-mail address and web address (URL)	36 characters or under	Alphabetic letters, numbers, symbols, "+-x+", space
The 2nd and the 3rd lines: Phone number		Numbers, space, -, F (Fax), P (Pager)

## WORD TRANSLATION MODE

The Organizer offers an English-Spanish bi-directional word translation function.

1. Tap **[E↔S]** to enter the English → Spanish translation mode.

ENG → SPA

Tap **[E↔S]** twice (or **[E↔S]** then **[↔]**) to enter Spanish → English mode.

2. Enter the desired source word and tap **[ENTER]**. "English..." or "Spanish..." is displayed while conducting search. The matching English or Spanish word will then be displayed.
  - When the symbol "►" appears, more letters exist. To view remaining letters of long words that cannot be accommodated on the screen, use **[▶]** to scroll right.

- If there is no matching word, "NOT FOUND!" is displayed. The word next in alphabetical order will then be displayed.
- Tap **[▲]** or **[▼]** to scroll through word list, or edit entry using the keyboard, and tap **[ENTER]** for another search.
- Tap **[←]** or **[→]** to return to the source word.

### Caution

- Spanish words stored in this device are those of Spain.
- Only the masculine form of the noun will be displayed for nouns with both masculine and feminine forms.
- Sometimes, two identical words will appear in the word list.
- Enter European characters and spaces correctly. Otherwise, the unit may not be able to complete the search.

## Memory Storage

### 1. Checking memory storage

1. Tap **[TEL SCHEDULE MEMO]** several times to display "NAME?", "SCHEDULE?", or "MEMO?".
2. Tap **[END] [MENU]**, select "MEMORY CHECK" by using **[▲]** or **[▼]**, and tap **[ENTER]**. The number of remaining bytes is displayed briefly.

FREE OK  
%  
99

#### Notes

- The Organizer can store up to 34070 bytes in the memory (excluding the Calculator mode memory).
- One byte is required per character (in the 1st line) for telephone, schedule, and memo entries.
- One byte is required for 2 digits in the number part (in the 2nd and the 3rd lines) of telephone and memo entries. (When there is an odd number of digits in a number entry, the last digit occupies 1 byte.)
- In addition to the memory size for characters (in the

1st line) and numbers (in the 2nd and the 3rd lines), each entry requires the following memory size:  
 Telephone entry ..... 6 bytes  
 Schedule entry ..... 8 bytes (including date and time)  
 Memo entry ..... 3 bytes

### 2. Deleting all the memory contents

Perform steps 2 and 3 as described in the section, "Using the Organizer for the First Time".

- To cancel the deletion operation, tap any key EXCEPT **[END] [ENTER]** in step 3.

conversion (editable) and 9 types of unit conversion

### LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Sharp shall be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

<b>Your Product:</b>	Electronic Organizer
<b>Warranty Period for this Product:</b>	One (1) year parts and labor from date of purchase.
<b>Additional Items Excluded from Warranty Coverage:</b>	Any consumable items such as paper, maintenance cartridge, ink cartridges supplied with the Product or to any equipment or any hardware, software, firmware, fluorescent lamp, power cords, covers, rubber parts, or peripherals other than the Product.
<b>Where to Obtain Service:</b>	At a Sharp Authorized Servicer located in the United States. To find out the location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.
<b>What to do to Obtain Service:</b>	Ship (prepaid) or carry in your Product to a Sharp Authorized Servicer. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL 1-800-BE-SHARP.

### PRODUCT SUPPORT

If you have read the ORGANIZER operation manual, but you still require product support, you can:

**Call Sharp Customer Assistance Center**  
 630-378-3590  
 (7am to 7pm CST M-F)

**Visit our Web Site**  
[www.sharpsusa.com](http://www.sharpsusa.com)

**Send an E-mail**  
[pdasupport@sharpsec.com](mailto:pdasupport@sharpsec.com)

**Write to our Customer Assistance Center**  
 SHARP Electronics Corp.  
 Customer Assistance Center  
 Attn: WIZARD HELP  
 1300 Naperville Drive  
 Romeoville, IL 60446

**SHARP**  
 SHARP ELECTRONICS CORPORATION  
 Sharp Plaza, Mahwah, New Jersey 07430-1163

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>