

THE
SHARPER
IMAGE

ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for the life of the original purchaser from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

SI PRODUCTS Consumer Relations
Service Center Dept. 168
3000 Pontiac Trail
Commerce Township, MI 48390
No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit: www.siproducts.com

For service or repair - do not return this unit to the retailer.

Contact SI PRODUCTS Consumer Relations at 1-888-856-6781.

©The Sharper Image. All rights reserved. THE SHARPER IMAGE name and logo are registered trademarks.

©2009 THE SHARPER IMAGE and its affiliated companies, all rights reserved. THE SHARPER IMAGE is a registered trademark of THE SHARPER IMAGE and its affiliated companies.

All rights reserved.

Download from www.Somanuals.com. All Manuals Search And Download.

THE
SHARPER
IMAGE

Body Groomer



Instruction Manual and
Warranty Information

GR-G300

1 year
limited warranty

Experience the ultimate all-in-one groomer.

Thank you for purchasing The Sharper Image® Body Groomer. This product, along with the entire The Sharper Image collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment. Now getting a smoother shave is no longer such a stretch, thanks to the easy-reach, cordless, waterproof design of The Sharper Image Body Groomer.

IMPORTANT SAFEGUARDS:

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER

- To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- DO NOT place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.
- Keep dry - DO NOT operate in a wet or moist condition.
- ALWAYS store this appliance in a moisture-free area. Do not store it in temperatures exceeding 140°F(60°C).
- DO NOT use this appliance with damaged or broken cutters, as injury may occur.

Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.

WARNING - TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE OR INJURY TO PERSONS:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by The Sharper Image; specifically any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.

SAVE THESE INSTRUCTIONS

Body Groomer

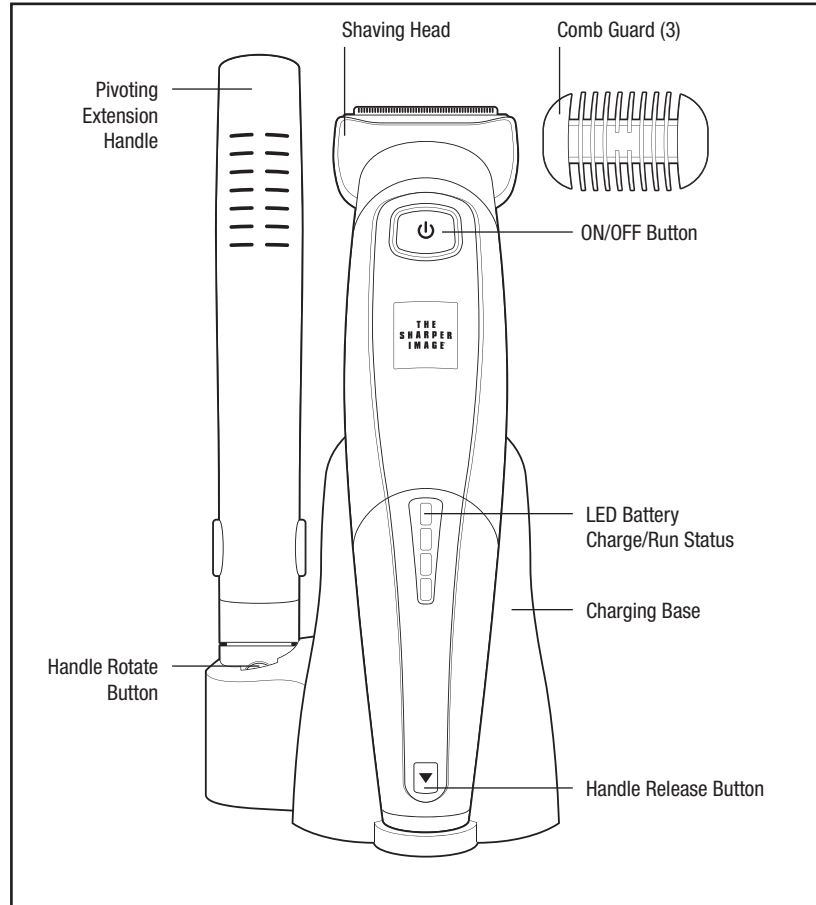


Fig. 1

Special Features: Body Groomer

- Shaves and trims all body zones
- Waterproof design – use in or out of shower
- Pivoting extension handle for hard-to-reach areas
- Hypo-allergenic foil with 2 titanium-coated blades on each side
- Rechargeable with LED charge indicator light
- Pivoting head for optimum positioning
- Includes three plastic comb guards
- Rinses clean in water

Getting Started Charging

1. Ensure the groomer is OFF.
2. Place the groomer on the charging base (Fig 1).
3. Connect the adaptor to the charging base.
4. The LED charge indicator will light up to show charge status. Eight hours of charging equals 50 minutes of cordless use.
5. For your convenience, the LED display shows the battery charge status.

Trimming

1. Trim **ONLY** when the unit is charged and off the base.
2. Press the **⏻** button to turn the unit ON or OFF.
3. **ALWAYS** cut hair with the trimmer blade first - **BEFORE** moving on to the shaver area for fine shaving.

Using the Extension Handle

The easy-to-use extension handle can be used to trim hair on your back.

1. Secure the extension handle into the end of the trimmer body until you hear a click sound (Fig. 2).
2. Turn ON the unit, hold the lower part of the handle and trim.
3. When finished using the extension handle, press button at bottom of groomer to remove extension handle.

Rotating & Pivoting for Optimum Reach

For maximum trimming results, the groomer head pivots 180 degrees to reach nearly any part of your body.

1. Press the "handle rotate button" and turn the unit to 180 degrees and stop when you hear a click sound (Fig. 2).
2. Press the button again to restore handle to the horizontal position.

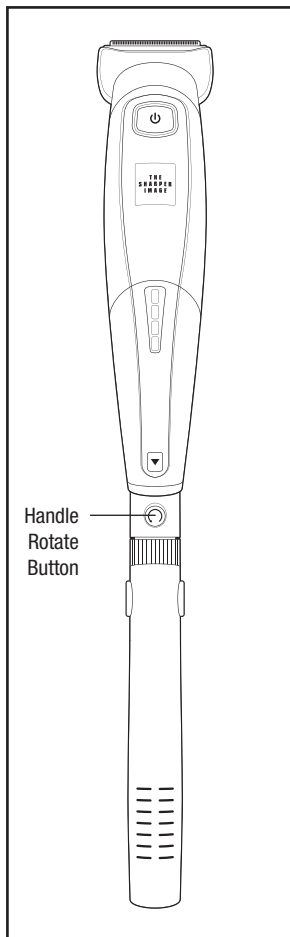


Fig. 2

Cleaning the Body Groomer

After each use, run under clean water to remove hair from blades. Use only a soft dry cloth to clean the enclosure of the groomer. NEVER use liquids or abrasive cleaner to clean.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>