

*Sunbeam*

X-Press<sup>®</sup>

# Cordless Beard Trimmer & Shaper

Instruction Booklet

MG6500

Please read these instructions carefully  
and retain for future reference.



# Contents

<b>Sunbeam's Safety Precautions</b>	<b>3</b>
<b>Features of your Cordless Beard Trimmer &amp; Shaper</b>	<b>6</b>
<b>Using your Cordless Beard Trimmer &amp; Shaper</b>	<b>8</b>
<b>Help Line</b>	<b>10</b>
<b>Battery Disposal</b>	<b>11</b>
<b>Care and Cleaning</b>	<b>11</b>

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığınızdan emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR CORDLESS BEARD TRIMMER & SHAPER

- Keep out of the reach of children
- For household use only
- Never touch the power plug with wet hands when plugging in or unplugging
- If the appliance is used with an extension cord or electrical portable outlet device, they should be positioned so they are not subject to splashing or moisture
- Do not place the blades in water or any other liquid.
- Do not use the appliance with a broken or damaged attachment
- Do not attempt to sharpen the blades
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

# Sunbeam's Safety Precautions

 
**Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

 
- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.

## Sunbeam's Safety Precautions continued

- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

# Features of your Cordless Beard Trimmer & Shaper

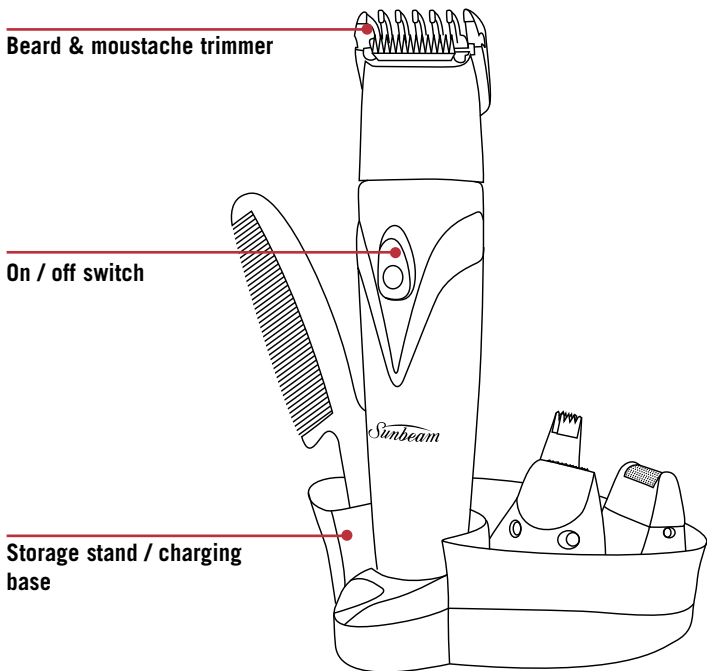


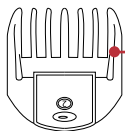


**Adjustable cutting guide**



 **Shaping blade**



**Nose & ear hair trimmer**

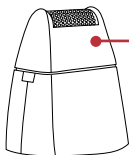 

**Shaving Head**



 
**Moustache comb**



**Cleaning brush**



**Oil**

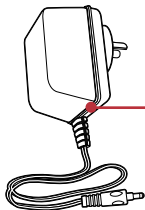

**Adaptor**

# Using your Cordless Beard Trimmer & Shaper

## Using for the first time

- The appliance must be fully charged before using for the first time.
- To reach the optimum recharge capacity, the batteries should be charged for 8.5 hours. Do not charge for longer than this time.
- Ensure that the Beard Trimmer & Shaper is switched off by pushing down the on / off switch.
- Insert the charger lead into the charging stand and place the Beard Trimmer & Shaper firmly into the slot location
- Plug the adaptor into a suitable mains outlet and switch on.
- The red light on the appliance will light up and will switch to green when charging is completed.
- The Beard Trimmer & Shaper will work for approximately 35 minutes on full charge.
- Recharging after each use is not needed if the 35 minute working period has not been fully used.
- It is not possible to use this appliance when the adaptor is plugged into the mains.

**Note:** Do not charge for longer than the recommended time of 8.5 hours.

## Using the nose & ear hair trimmer

- Attach the nose hair trimmer attachment by placing on the unit and turning clockwise until it clicks into place.



## Using your Cordless Beard Trimmer & Shaper continued

- Switch the appliance on.
- Insert the appliance into the ear or nose but no more than 6mm.
- Rotate in a circular movement.
- The appliance can also be used to trim stray eyebrow hairs. Move the appliance slowly and carefully keeping the unit away from the eye socket.
- Remove all attachments by twisting anticlockwise and pulling off.

### **Using the beard & sideburn trimmer**

- Attach the beard & sideburn trimmer attachment by placing on the unit and turning clockwise until it clicks into place.
- Choose the length of beard or moustache you require and attach the appropriate comb by placing over the head of the attachment and clicking into place.
- Move the switch on the comb to the required length. We recommend that you start with a longer length and then move to a shorter cut if necessary.
- Ensure that your beard or moustache is dry and using the comb provided, make sure that all the hairs are facing the same direction.
- Switch the appliance on.
- Start under the chin and follow your jaw line moving in an upward direction.

## Using your Cordless Beard Trimmer & Shaper continued

- This attachment can also be used to trim sideburns.

### **Using the beard shaping blade**

- Attach the beard shaping attachment by placing on the unit and turning clockwise until it clicks into place.
- Switch the appliance on.
- Use this blade to create smooth lines and edges or your own unique beard design.

### **Using the shaver head**

- Attach the shaver head attachment by placing on the unit and turning clockwise until it clicks into place.
- Switch the appliance on.
- Use to tidy the back of the neck and to create defined beard edges around the jaw line.

---

## Help Line

If you have any additional questions about using the Cordless Beard Trimmer & Shaper, please call the Sunbeam help line in Australia on 1800 025 059.

In New Zealand, please call 0800 786 232.

# Battery Disposal

At the end of the product's life, the Cordless Beard Trimmer & Shaper must be returned to a Sunbeam Service Centre for correct disposal of the Nimh rechargeable battery.

The battery must be removed from the appliance before it is scrapped. The battery is to be disposed of safely.

---

## Care and Cleaning

- Do not immerse the appliance in water or any other liquid.
- The appliance can be wiped with a cloth dampened in water and a mild detergent. Rinse and dry thoroughly.
- Remove hair from the blades after each use with the cleaning brush supplied.
- The adjustable cutting guide can be washed under a running tap.
- Do not rinse the entire unit in water – only the adjustable cutting guide.
- Store in a cool, dry place.
- The blades of the attachment must be oiled regularly to maintain their performance. Wipe the blades with a few drops of the oil supplied and remove any excess before using.

# Sunbeam

## Consumer Hotline

Australia

1800 025 059

New Zealand

0800 786 232

[www.sunbeam.com.au](http://www.sunbeam.com.au)

'Sunbeam', is a registered trademark of Sunbeam Corporation.

Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 2 Year Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2005.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.

**Australia 1800 025 059**

**New Zealand 0800 786 232.**

06/05



is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2005.

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>