



MS5006W Troubleshooting Guide

No Audio

- Check for any physical damage to speaker.
- Verify Speaker wires are connected properly.
- Verify Radio controls (balance, fader, volume and mute) are properly set for the speaker.
- Verify with a meter there is power output going to speaker.
- Connect a known good speaker to the radio to verify operation.

Distortion

- Check for any physical damage to speaker.
- Verify a proper application/location is suitable for speaker operation.
- Verify if the distortion is at all levels of volume.
- Verify radio control settings are not causing issue.
- Connect a known good speaker to the radio to verify operation.

Crackling

- Check for any physical damage to speaker.
- Verify speaker wires have solid connections.
- Check for any possible shorts in the speaker wiring.
- Connect a known good speaker to the radio to verify operation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>