


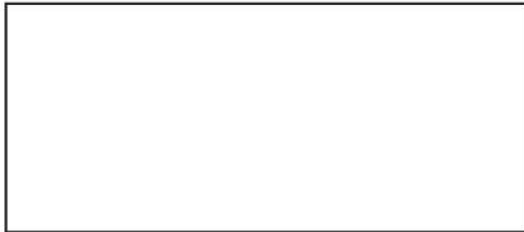

Bedienungsanleitung PDF

Lesen Sie die Empfehlungen in der Anleitung, dem technischen Handbuch oder der Installationsanleitung für BOSCH PSA326B20E. Hier finden Sie die Antworten auf alle Ihre Fragen über die BOSCH PSA326B20E in der Bedienungsanleitung (Informationen, Spezifikationen, Sicherheitshinweise, Größe, Zubehör, etc.). Detaillierte Anleitungen zur Benutzung finden Sie in der Bedienungsanleitung.

Bedienungsanleitung BOSCH PSA326B20E
Gebrauchsanweisung BOSCH PSA326B20E
Gebrauchsanleitung BOSCH PSA326B20E
Betriebsanleitung BOSCH PSA326B20E
Benutzerhandbuch BOSCH PSA326B20E



en	Operating instructions	3
de	Gebrauchsanweisung	16
fr	Mode d'emploi	29
es	Instrucciones de funcionamiento	42
pt	Manual de utilização	55
nl	Gebruiksaanwijzing	68
tr	Kullanma Kilavuzu	81



Robert Bosch Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München
Cod. 9000346900 F

www.bosch-home.com



[Ihr Benutzerhandbuch](#)
[BOSCH PSA326B20E](#)

Handbuch Zusammenfassung:

Do not subject the appliance to draughts. These might blow out the burners. This appliance leaves the factory set to the type of gas that is indicated on the specifications plate. If this must be changed, read the Assembly instructions. Do not tamper with the appliance's interior. If necessary, call our Technical Assistance Service. These operating and installation instructions should be retained, and passed onto the buyer if the appliance is sold. Do not switch on the appliance if it is damaged in any way. Contact our Technical Assistance Service. The surfaces of cooking appliances heat up during use.

Care must be taken when using these appliances. Keep children well away from this appliance. This appliance is only intended for cooking purposes, not as a heating system. 5 Fat or oil which is overheated can catch fire easily. Do not leave oil or fats to heat up unattended.

If oil or fats do catch fire, never use water to put the fire out. Risk of burns! Put the fire out by covering the pan with a lid and switch off the hotplate. In the event of a malfunction, turn off the appliance's gas and electricity supply. For repairs, call our Technical Assistance Service. If one of the control knobs will not turn, do not force it.

Call the Technical Assistance Service immediately, so that they can repair or replace it. Never place unstable pans on the hob or the burners, as they may accidentally tip over. Do not clean the hob using a steam cleaner. Risk of electrocution! This appliance is class 3 type, according to the EN 30-11 standard for gas appliances: built-in appliance. Do not store or use corrosive chemicals, steamers, flammable materials or non-food products below or near this domestic appliance. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Never leave the appliance unattended during operation. The graphics in this instruction manual are given as a guide only. The manufacturer is exempt from all responsibility if the requirements of this manual are not complied with. 6 Your new appliance Burner (up to 3 kW) Pan support Pan support Burner (up to 1.

75 kW) Control knob Double flame burner (up to 3.6 kW) Pan support Control knob 7 The gas burners Operation Fig. 1 There are indications to show which burner each control knob operates. Fig. 1. Fig. 2 It is essential to ensure that all the burner parts and pan supports are correctly installed for the appliance to work correctly. Fig. 2-3-4. Fig.

3 Fig. 4 Switching on manually 1. Press the chosen burner control knob and turn it anticlockwise to the required setting. 2. Use any type of lighter or flame (cigarette lighter, matches, etc.

) and bring it close to the burner. Switching on automatically If your hob can be switched on automatically (ignition sparkers): 1. Press the chosen burner control knob and turn it anticlockwise to the maximum power setting. While the control knob is still pressed down, sparks are produced on all burners. The flame ignites (it is no longer necessary to press down the control knob).

8 2. Turn the control knob to the required setting. If it does not come on, turn the control knob to the off setting and repeat the steps above. This time, press and hold the control knob for longer (up to 10 seconds). Warning! If after 15 seconds the flame does not ignite, switch off the burner and open a nearby window or door. Wait at least one minute before trying to switch the burner on. Safety system Depending on the model, your hob may have a safety system (thermocouple) that prevents the flow of gas if the burners accidentally switch off. To ensure that this device is active, switch on the burner as usual and, without releasing the control knob, press and hold it down firmly for 4 seconds after lighting the flame. Termopar Ignition sparker Switching off a burner Power levels Setting Control off Maximum capacity or aperture and electricity on Minimum capacity or aperture Turn the corresponding control knob clockwise to the 0 setting..



[Ihr Benutzerhandbuch](#)
[BOSCH PSA326B20E](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>