




OPERATING & PROGRAMMING INSTRUCTIONS FOR XAF Series CONVECTION OVENS with DYNAMIC CONTROL PANEL

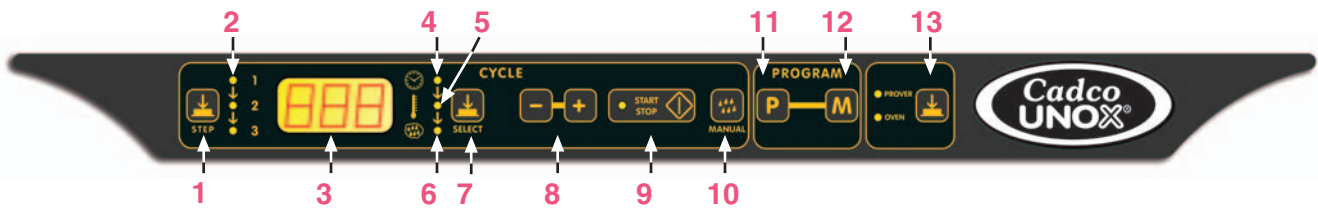

1. Multi step cooking
2. 3 steps available
3. (LED) Display cooking parameters
4. Time indicator
5. Temperature indicator
6. Humidity indicator
7. Time / temperature / humidity select
8. Increase / decrease cooking values
9. START / STOP
10. Add water, manually
11. Program recall
12. Program memorization
13. Select oven or proofer

PROGRAMMING INSTRUCTIONS:

- 1) Press Start/Stop Button (#9). LED display will read "000".
- 2) Press Program Button (#11).
- 3) Press Increase Button (#8). "PO1" will appear in LED display.
- 4) Press Select Button (#7). Time indicator will light (#4).
- 5) Press Increase Button (#8) to set desired cooking time.
- 6) Press Select Button (#7). Temperature indicator (#5) will light .
- 7) Press Increase Button (#8) to set desired cooking temperature.
- 8) Press Program Memory Button (#12) until unit BEEPS. Program is now stored in memory.

To set next program, use above steps.

To change to next program, press the Increase/Decrease Buttons (#8).

TO START PROGRAM:

- 1) Press START/STOP Button (#9). LED display will read "000".
- 2) Press Program recall Button (#11). "PO1" will appear in LED display.
- 3) Press Increase/Decrease Buttons (#8) to get desired program number (#8).
- 4) Press START/STOP Button (#9) to start program.

PROGRAM FEATURES:

- As oven preheats to program temperature, LED display will read "PRE".
- When oven is preheated to set program temperature, oven will BEEP, indicating that program is ready to start.
- To start program, open oven door and load product to be cooked.
- Closing the oven door will start the program.
- At completion of program cooking cycle, oven will BEEP, indicating program is complete.
- NOTE: if added time is required to finish product, minutes can be added by using the Increase/Decrease Buttons (#8).
- NOTE: When cooking cycle has ended and unit is beeping, opening the oven door will end the cooking cycle and extra minutes cannot be added.
- After cooking program cycle has ended, your oven has been programmed to go into a holding cycle. The LED display will read "INF" and the temperature will hold at 356° F.
- With oven in its holding program, when starting a new program the unit will go into its preheat mode to get the unit to its programmed temperature.
- If minutes have been added at the end of the program cycle (while unit is beeping), to have the oven go into its holding cycle upon completion of the added minutes, the START/STOP button (#9) must be pushed.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>