

Quick Start Guide

MPK8854AUK

www.curtisint.com



2. Music Play

- 1) Choose "Music" option on the main menu, click the icon to enter Playing Song Mode.
- 2) Click "◀ / ▶" icon to play the previous or next song.
- 3) Click "⏮" icon to return to the "Audio Files List" and select your desired
- 4) Click "⏭" icon to delete the chosen song.
- 5) Click "⏪" icon return to the main menu when the player is playing music.
- 6) Click "⚙️" icon to select the "Repeat set mode" or the "EQ set mode".
- 7) Push the "ON/OFF" button to set the "A-B" repeat function.
- 8) Click "⏸" icon to pause or play the song.

4. FM

- 1) Choose "FM" option on the main menu, click the icon to enter Playing Radio Mode.
- 2) Press "📶" to select an item in (Manual), (Preset), (mem), (Del) and (Auto)
 - a) Manual: press the "◀ / ▶", you can search the station manually.
 - b) Preset: Press the "◀ / ▶" to select Saved function,
 - c) mem: Save FM Channels
 - d) Del: Delete FM Channels
 - e) Auto: The player will automatically scan for FM channels

- 3) Press "📻" to enter recording

6. Record

- 1) Choose "Record" option on the main menu, click the icon to enter recording mode.
- 2) Click "🔴" icon to start the recording.
- 3) Click "⏸" icon to pause the recording
- 4) Click "💾" icon to save the recording file.
- 5) Click "⏪" icon to return the main menu.
- 6) Enter the "Audio File List" of the "Music" menu to choose and enter the "Voice" folder, then select and play your desired voice.

8. Explorer

- 1) Choose "Explorer" option on the main menu, click the icon the "Explorer Files List" and select your playing files.
- 2) Click "🗑️" icon to delete the chosen files.
- 3) Click "⏪" icon return to the main menu.

9. Game

- 1) Choose "Game" option on the menu, click the icon to enter "Game" interface. Choose a game to play.

2) Button Functions:



3. Video Play

- 1) Choose "Video" option on the main menu, click the icon to enter "Video Files List" and select your desired movie.
- 2) Click "⏮" icon to delete the chosen movie.
- 3) Click "◀ / ▶" icon to play the previous or next movie.
- 4) Click "⏪" icon return to main menu when the player is playing movie
- 5) Click and hold "◀ / ▶" icon to fast forwards or fast backwards.
- 6) Click "⏸" icon to pause or play the movie.

5. Photo view

- 1) Choose "Photo" option on the main menu, click the icon to enter "Photo Files List" and select your desired picture.
- 2) Click "🗑️" icon to delete the chosen picture.
- 3) Click "◀ / ▶" icon to play the previous or next picture.
- 4) Click "⏪" icon return to the main menu when the player is playing picture.
- 5) Click "📷" to setup the browsing of picture.
- 6) Touch the "📷", will browse automatically

7. E-book

- 1) Choose "E-book" option on the main menu, click the icon to enter "book Files List" and select your desired article.
- 2) Click "⬆ / ⬆" Up or Down to browse the chosen article on the full screen.
- 3) Click "📌" to save a bookmarker.
- 4) Click "📌" to load a bookmarker.

10. Setting

- 1) Choose "Setting" option on the main menu, click the icon the corresponding setting interface.
- 2) Music Play: Repeat mode, EQ Setup and User EQ set, play Mode.
- 3) Radio Setup: Stereo Switch, FM Region.
- 4) Record Setup: REC Quality, REC volume.
- 5) Display Setup: Backlight time, Lum, Backlight mode.
- 6) Auto play set: There are text and jpeg under this menu: 1s, 2s, 3s, 4s, 5s.
- 7) System Setup: Language Selection, About, Touching screen calibrate.
- 8) Power Off Time: Off, 10 min., 15 min., 30min., 60min. and 120min
- 9) Defaulted Set.
- 10) Firmware Upgrading.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>