



## BP130 Ni-MH Rechargeable Battery Pack

### Instruction Sheet

This Rechargeable Battery Pack is designed for use with the Fluke ScopeMeter Model 124 and with Model 123 if the installed software is of version V2.00 or higher.

Chapter 2 of the Users Manual of the ScopeMeter explains how to display the software version. This Chapter also explains how to exchange the Battery Pack.

After installation, charge the Battery Pack for at least 7 Hrs. with the ScopeMeter switched off.

- Nominal Voltage: 4.8 V
- Capacity: 3.0 Ah
- Lifetime: minimum 500 cycles at nominal charge of 500 mA
- Temperature Ranges:
  - Operating: 0 °C to 50°C
  - Quick Charging: 10°C to 40°C
  - Trickle Charging: 10°C to 45°C
  - Storage: -40°C to 60°C

Performing a Refresh Cycles every 3 months, will contribute to the lifetime of the Battery Pack.

To prevent damage to Equipment or Battery:

- Fully charge before use.
- Keep the battery cool
- Do not dispose in open fire
- Observe polarity
- Do not solder directly to the cells
- Do not short circuit
- Store Batteries outside the Instrument



## BP130 Ni-MH Rechargeable Battery Pack

### Instruction Sheet

This Rechargeable Battery Pack is designed for use with the Fluke ScopeMeter Model 124 and with Model 123 if the installed software is of version V2.00 or higher.

Chapter 2 of the Users Manual of the ScopeMeter explains how to display the software version. This Chapter also explains how to exchange the Battery Pack.

After installation, charge the Battery Pack for at least 7 Hrs. with the ScopeMeter switched off.

- Nominal Voltage: 4.8 V
- Capacity: 3.0 Ah
- Lifetime: minimum 500 cycles at nominal charge of 500 mA
- Temperature Ranges:
  - Operating: 0 °C to 50°C
  - Quick Charging: 10°C to 40°C
  - Trickle Charging: 10°C to 45°C
  - Storage: -40°C to 60°C

Performing a Refresh Cycles every 3 months, will contribute to the lifetime of the Battery Pack.

To prevent damage to Equipment or Battery:

- Fully charge before use.
- Keep the battery cool
- Do not dispose in open fire
- Observe polarity
- Do not solder directly to the cells
- Do not short circuit
- Store Batteries outside the Instrument



## BP130 Ni-MH Rechargeable Battery Pack

### Instruction Sheet

This Rechargeable Battery Pack is designed for use with the Fluke ScopeMeter Model 124 and with Model 123 if the installed software is of version V2.00 or higher.

Chapter 2 of the Users Manual of the ScopeMeter explains how to display the software version. This Chapter also explains how to exchange the Battery Pack.

After installation, charge the Battery Pack for at least 7 Hrs. with the ScopeMeter switched off.

- Nominal Voltage: 4.8 V
- Capacity: 3.0 Ah
- Lifetime: minimum 500 cycles at nominal charge of 500 mA
- Temperature Ranges:
  - Operating: 0 °C to 50°C
  - Quick Charging: 10°C to 40°C
  - Trickle Charging: 10°C to 45°C
  - Storage: -40°C to 60°C

Performing a Refresh Cycles every 3 months, will contribute to the lifetime of the Battery Pack.

To prevent damage to Equipment or Battery:

- Fully charge before use.
- Keep the battery cool
- Do not dispose in open fire
- Observe polarity
- Do not solder directly to the cells
- Do not short circuit
- Store Batteries outside the Instrument



Do not dispose the Battery Pack with other solid waste. Used batteries should be disposed of by a qualified recycler or hazardous materials handler. Contact your authorized FLUKE Service Center for recycling information.

To locate a Fluke Service Center, visit Fluke on the World Wide Web:

[www.fluke.com](http://www.fluke.com)

or call Fluke using any of the phone numbers listed below:

+1-888-993-5853 in U.S.A. and Canada  
+31-40-2675200 in Europe  
+1-425-446-5500

4822 872 30730

Sept 2002

© 2002, Fluke Corporation, All rights reserved.

Printed in the Netherlands

All product names are trademarks of their respective companies.



Do not dispose the Battery Pack with other solid waste. Used batteries should be disposed of by a qualified recycler or hazardous materials handler. Contact your authorized FLUKE Service Center for recycling information.

To locate a Fluke Service Center, visit Fluke on the World Wide Web:

[www.fluke.com](http://www.fluke.com)

or call Fluke using any of the phone numbers listed below:

+1-888-993-5853 in U.S.A. and Canada  
+31-40-2675200 in Europe  
+1-425-446-5500

4822 872 30730

Sept 2002

© 2002, Fluke Corporation, All rights reserved.

Printed in the Netherlands

All product names are trademarks of their respective companies.



Do not dispose the Battery Pack with other solid waste. Used batteries should be disposed of by a qualified recycler or hazardous materials handler. Contact your authorized FLUKE Service Center for recycling information.

To locate a Fluke Service Center, visit Fluke on the World Wide Web:

[www.fluke.com](http://www.fluke.com)

or call Fluke using any of the phone numbers listed below:

+1-888-993-5853 in U.S.A. and Canada  
+31-40-2675200 in Europe  
+1-425-446-5500

4822 872 30730

Sept 2002

© 2002, Fluke Corporation, All rights reserved.

Printed in the Netherlands

All product names are trademarks of their respective companies.



482287230730



482287230730



482287230730

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>