

C 1060 profi  
Art. 1815

**GB Operating Instructions**

Water Computer Profi

**S Bruksanvisning**

Bevattningscomputer

**NL Gebruiksaanwijzing**

Besproeiingscomputer

**D Gebrauchsanweisung**

Bewässerungscomputer

**FIN Käyttöohjeet**

Kasteluohjain

GB

S

NL

D

FIN

# GARDENA Water Computer C 1060 profi

Welcome to the Garden of GARDENA...



Please read these operating instructions carefully and observe the notes given. Use these instructions to familiarise yourself with the Water Computer and its proper use as well as the notes on safety.



For safety reasons, children and young people under 16 as well as anyone who is not familiar with these operating instructions must not use the Water Computer.

## Contents

→ Please keep these operating instructions in a safe place.

1. Where to Use Your GARDENA Water Computer .....	3
2. For Your Safety .....	3
3. Function .....	5
4. Putting Your Water Computer into Operation .....	8
5. Programming .....	11
6. Automatic Water Distributor (optional) .....	19
7. Cleaning .....	22
8. Trouble-Shooting .....	22

9. Putting Your Water Computer out of Operation .....	25
10. Accessories .....	25
11. Technical Data .....	26
12. Service .....	27

## 1. Where to Use Your GARDENA Water Computer

### Intended use

The GARDENA Water Computer C 1060 profi is intended for private use in domestic and hobby gardens, exclusively for outdoor use, to control sprinklers and watering systems.

### Please note



**The GARDENA Water Computer must not be used for industrial purposes or in conjunction with chemicals, foodstuffs, easily flammable and explosive materials.**

## 2. For Your Safety

### Battery:

To ensure the Water Timer runs safely, only a 9V alkaline manganese battery (alkaline)

type IEC 6LR61 must be used.

The battery must be exchanged in time to prevent the Water Computer failing due to a low battery when you are away for longer periods of time. Make sure that the time the battery has been in operation and the time you are planning to be away does not add up to more than a year.

### Setting up

**Warning!** The Water Computer must not be used indoors.

→ Only use the Water Computer outdoors.

The Water Computer may only be set up vertically with the sleeve nut to the top to prevent water penetrating into the battery compartment.

The minimum water output to ensure that the Water Computer functions correctly is 20 - 30 l/h.

For example, at least 10 x 2-litre Drip Heads are required to control the Micro-Drip-System.

At high temperatures (over 60 °C at the display) the LCD display may extinguish. This

does not affect the program in any way. When the computer cools down the LCD display illuminates again.

The max. temperature for the water flow is 40 °C.

→ Only use clear fresh water.

The minimum operating pressure is 0,5 bar, the maximum operating pressure is 12 bar.

Avoid tensile strain.

→ Do not pull the hose connected to the Water Computer.

### Programming

→ Program the Water Computer with the tap turned off.

In this way you can avoid getting wet when trying out the manual On/Off function (man. On/Off). You can remove the control unit from the housing to program the Water Computer.


## 3. Function

This GARDENA Water Computer C 1060 profi allows you to water your garden completely automatically any time you choose up to 6 times a day, whether you are using a sprinkler, a sprinkler system installation or a drip-head watering system.

Your Water Computer waters your garden completely automatically according to the program you choose. You can use your Water Computer to water your garden early in the morning or late at night when water evaporates the least or when you are on holiday.


You simply program the watering start, watering time and watering day(s) or cycles.

### Key-operated functions

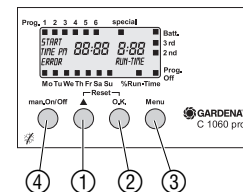

Key	Key-operated function
① ▲	Changes or moves on the input data. (If the ▲-key is held down, the figures change very quickly.)
② O.K.	Confirms the values set with the ▲-key.
③ Menu	Changes to the next program level.
④ man. On/Off	For switching the water throughput on or off manually.

## Displays

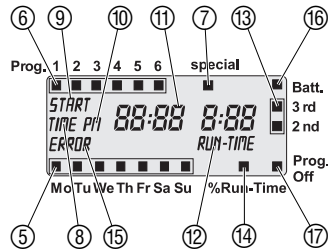

Display	Description
⑤ <b>Weekdays (Mo, Tu,...)</b>	Current weekday or programmed watering days.
⑥ <b>Prog.</b>	Program selected (1 to 6).
⑦ <b>special</b>	Only for controlling the Automatic Water Distributor Art.-No. 1198.
⑧ <b>TIME</b>	Flashes when in input mode for the current data (hours, minutes, day of the week).
⑨ <b>START</b>	Flashes when in input mode for watering start time.
⑩ <b>PM</b>	Display for 12-h-clock (e. g. in USA, Canada).
⑪ <b>(Time / Start time)</b>	Current time / Watering start time (display 13 h = 1 pm; e. g. in USA, Canada).
⑫ <b>RUN TIME</b>	Watering time (flashes when in input mode).
⑬ <b>3<sup>rd</sup>, 2<sup>nd</sup></b>	Watering cycles (3 <sup>rd</sup> every 3 <sup>rd</sup> day / 2 <sup>nd</sup> every 2 <sup>nd</sup> day).
⑭ <b>% Run-Time</b>	Budget function: the watering time of all watering programs can be reduced centrally in intervals of 10% from 100% to 0%.
⑮ <b>ERROR</b>	Error message for the <b>special</b> function if watering programs overlap.

## Display levels

- ⑯ **Batt.** If the battery indicator begins to flash, the battery is almost flat and watering programs will no longer run. Any valves that are still open are closed again even if the battery is almost flat. The battery indicator is reset as soon as you replace the battery with a new one.
- ⑰ **Prog. Off** Watering program inactive (Budget function: 0%)

The four display levels



- Level 1: **Normal display**
- Level 2: **Enter the current time and day of the week**
- Level 3: **Insert watering programs**
- Level 4: **% Run-Time / Prog. Off**

can be selected one after the other by pressing the **Menu**-key.

You can change display level at any time, even during programming. All the program data which have been confirmed up to that point with the **O.K.**-key are stored.

## 4. Putting Your Water Computer into Operation

### Insert battery:

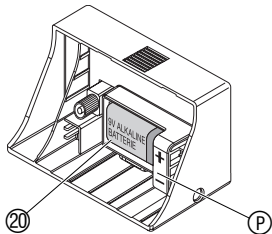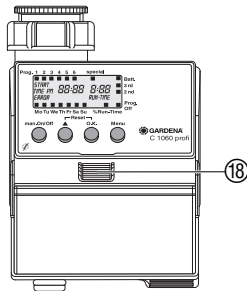

This Water Computer must only be powered by a 9V alkaline manganese (alkaline) battery type IEC 6LR61.


1. Press unlock button (18) and pull control unit (19) out of the Water Computer housing.

2. Insert battery (20) into battery compartment.

Ensure that the battery polarity (P) is correct.

*The display shows all the LCD-symbols for 2 seconds and then moves to the time / day of week level.*

3. Re-insert control unit (19) in housing.

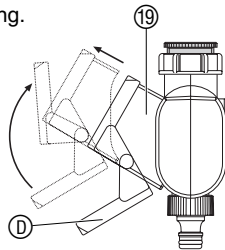


### Programming aid:

→ Stick the self-adhesive programming aid on the inside of the display cover (D).

The display cover can be folded up to protect the display against the weather.

### Connect Water Computer:

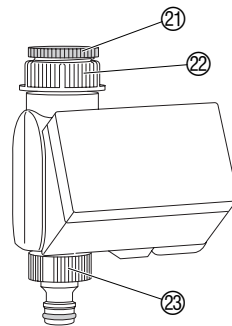

The Water Computer is fitted with a sleeve nut (22) for taps with G 1" (33.3 mm) thread. The adaptor supplied (21) allows the Water Computer to be connected to taps with a G 3/4" thread (26.5 mm).

### Connect Water Computer to water tap with G 1" (33.3 mm) thread:

1. Screw sleeve nut (22) of the Water Computer on to the tap thread by hand (do not use pliers).
2. Screw tap connector (23) on to the Water Computer.

### Connect Water Computer to tap with G 3/4" (26.5 mm) thread:


1. Screw adaptor (21) on to the tap manually (do not use pliers).
2. Screw sleeve nut (22) of the Water Computer on to the adaptor thread (21) by hand (do not use pliers).
3. Screw tap connector (23) on to the Water Computer.

### Compile watering plan:

Before you start entering the watering data in the computer we recommend that you write the data on one of the **watering plans in the appendix** to maintain more of an overview.

**Example:**


Program PROG	Starting time START TIME	Watering time RUN TIME	Watering days / Watering cycles									
			Mo	Tu	We	Th	Fr	Sa	So	2 <sup>nd</sup>	3 <sup>rd</sup>	
1	7:30	0:30	X		X				X			
2	19:00	0:20		X				X				
3	22:30	1:10	X			X				X		
4	4:00	0:15										X
5	-	-										
6	-	-										

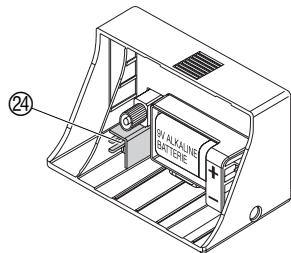**Connect soil moisture or rain sensor (optional):**

In addition to time-based watering, it is also possible to include the soil moisture or rain sensor in the watering programs.

If the soil is moist enough, the program will be stopped, or a program will be prevented from starting. Manual operation via **man. On/Off** is unaffected by this.


- Place soil moisture sensor **in** the watered area  
– or –  
place rain sensor (with extension cable if necessary) **outside** the watered area.
- Insert the sensor in the sensor connection 24 of the Water Computer.

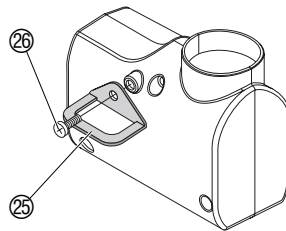**Fit anti-theft device (optional):**

To secure your Water Computer against theft, you can obtain the GARDENA anti-theft device art. no. **1815-00.791.00** from GARDENA Service.

- Screw clamp 25 with screw 26 firmly to the back of the Water Computer.
- Use clamp e.g. for fixing a chain.

 It is no longer possible to remove the screw after it has been screwed in.


**5. Programming****Set current time and day of week:**

1.

The control unit 19 can be removed from the housing for programming by pressing the unlock button 18 and programming can be undertaken whilst you are moving around (see 4. Putting Your Water Computer into Operation "Insert battery").

- Press **Menu**-key (not necessary if the battery has just been inserted).

 The hours display and **TIME** flash.



2. Set the time in hours with the ▲-key  
(example: **9** hours) and confirm with the **O.K.**-key.

*TIME and the minutes display flash.*

3. Set the time in minutes with the ▲-key  
(example: **30** minutes) and confirm with the **O.K.**-key.

*TIME and the day of the week display flash.*

4. Set the day of the week with the ▲-key  
(example: ■ **Sa** Saturday) and confirm with the **O.K.**-key.


*The display moves to the message **Insert watering programs** and program memory setting **1** flashes.*

#### Enter watering programs :

You must reset your Water Computer before selecting the special function (see 6. Automatic Water Distributor).

- **Reset:** Keep ▲-key and **O.K.**-key pressed simultaneous for 2 seconds.

Up to 6 watering programs can be inserted – **or** – the **special** function can be selected.

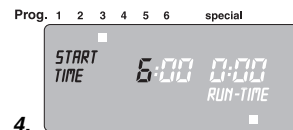

1. Press **Menu**-key twice  
(not necessary if the current time and day of the week has been entered).

*Program memory setting **1** flashes.*

2. **Only if the Automatic Water Distributor is used:**  
Select **special**-function with the ▲-key and confirm with the **O.K.**-key (continue with step 4).

*Program memory setting **1** is selected automatically, **START TIME** and the hours section flash on the display.*

 
3. Select program memory setting with the ▲-key  
(example: **Prog. 3** ■ program 3) and confirm with the **O.K.**-key.

***START TIME** and the hours section flash on the display.*

4. Set the hours for starting the watering time with the ▲-key  
(example: **6** hours) and confirm with the **O.K.**-key.


***START TIME** and the minutes section flash on the display.*

Prog. 1 2 3 4 5 6 special




5.

 Prog. 1 2 3 4 5 6 special




6.

 Prog. 1 2 3 4 5 6 special



 7.



8 (a)

5. Set the minutes for starting the watering time with the ▲-key (example: **20** minutes) and confirm with the **O.K.**-key.

**RUN TIME** and the hours for the watering time flash on the display.

6. Set the hours for the watering time with the ▲-key (example: **0** hours) and confirm with the **O.K.**-key.

**RUN TIME** and minutes for the watering time flash on the display.


7. Set watering time minutes with the ▲-key (example: **10** minutes) and confirm with the **O.K.**-key.

Watering cycle **3<sup>rd</sup>** flashes on the display.

8. (a) Select watering cycle with the ▲-key (example: **2<sup>nd</sup>**) and confirm with the **O.K.**-key (**2<sup>nd</sup>/3<sup>rd</sup>**: watering every 2<sup>nd</sup> day / 3<sup>rd</sup> day).

The display returns to step 3 and the next highest program memory setting flashes.

– or –

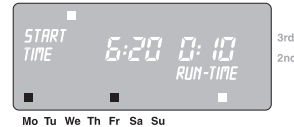

8. (b)

8. (b) Select respective watering days with the ▲-key (example: **Mo**, **Fr** Monday and Friday) and confirm with the **O.K.**-key. Press ▲-key until the **Su** disappears.

The display returns to step 3 and the next highest program memory setting flashes.

→ If you would like to water your garden every day, press the **OK** button to confirm each day one after another.

When the program has been created for program memory setting 6, the display moves to the message **% Run-Time / Prog. Off.**

You must select the **Run-Time** percentage you wish to activate before the watering programs can run.

**Activate watering programs:**



10.

9. Press **Menu**-key 3 times (not necessary if the program has just been compiled for program memory setting 6).
10. Select the percentage (see **Budget Function**) for the programmed watering time using the ▲ key (e.g. **60% Run-Time**) and then confirm your selection by pressing the **O.K.** key.
- The display moves to the **normal display.**

Programming the Water Computer has now been completed, i.e. the built-in valve opens/closes entirely automatically and thus undertakes watering at the programmed times.

 


Programmed watering time



%Run-Time

Watering program deactivated



Prog  
Off

### Read/modify watering programs:

### Manual operation:

### Budget-Function (% Run-Time):

The times of all stored watering programmes can be reduced centrally in intervals of 10%, from 100% down to 10%, without having to change each interval programme. This is ideal if you wish to water your garden less in the Autumn than in the Summer.

**10 - 100 % Run-Time = Watering program active**

**0 Prog. Off = Watering program inactive**

 
**Note:** If you change the watering time percentage, your Water Computer will still display the watering time you originally programmed for the individual watering programs.

If a program has already been set on one of the 6 program memory settings, this can be modified without having to compile it from the beginning again.


1. Press **Menu**-key twice.  
*Program memory setting 1 flashes.*
2. Press **O.K.**-key to move to the next program step – **or** – modify program data with the **▲**-key and confirm with the **O.K.**-key.

The valve can be **opened or closed manually at any time.** A program-controlled open valve can also be closed early without changing the program data (start time, watering duration and watering days).

1.



 2.




1. Press **man. On/Off**-key to open the valve manually (or to close an open valve).  
**RUN TIME** and the watering time in minutes (set to **30** minutes in the works) flash for 5 seconds on the display.
2. Whilst the watering time in minutes is flashing, the watering duration can be modified with the **▲**-key (between **0:00** and **0:59**) (example: **10** minutes).  
*The valve is opened.*
3. Press **man. On/Off**-key to close the valve early.  
*The valve is closed.*

The amended manual opening period is stored, i.e. each time the valve is opened manually in future the modified opening period is preset. If the manual opening period is amended to **0:00**, the valve is closed and also remains closed after the **man. On/Off**-key is pressed (child lock).

If the valve has been opened manually and a programmed start of a watering period overlaps the manual opening period, the programmed starting time is suppressed.

**Example:** The valve is **opened at 9.00 a.m. manually**, the opening period is 30 minutes. A program with a **start time (START TIME)** between **9.00 and 9.30 a.m.** will not be undertaken in this case.

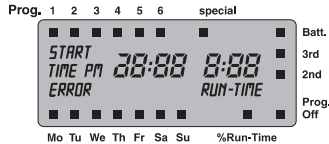**Reset**

The factory settings are restored.

→ Press **▲**-key and **O.K.**-key simultaneously for 2 seconds.

*All the LCD symbols are displayed for 2 seconds and the display moves to the normal display.*

- All the program data are set to zero.
- The manual watering period is set to **0:30** again.
- The time and day of the week are retained.

**Important notes :**


If no entry is made during programming for a period of more than 60 seconds, the normal display reappears.

With overlapping programs and identical watering days, the 1<sup>st</sup> watering starting time has priority and other programs are not initiated.

**Example :**

Program PROG	Starting time START TIME	Watering time RUN TIME	Watering days / Watering cycles									
			Mo	Tu	We	Th	Fr	Sa	So	2 <sup>nd</sup>	3 <sup>rd</sup>	
1	4:00	0:40	X	X								
2	4:30	1:00	X									

The first program is run on Monday, the 2<sup>nd</sup> program is cancelled.

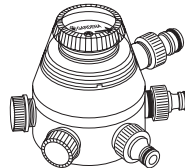**6. Automatic Water Distributor (optional)****Function**

Connecting the **GARDENA Automatic Water Distributor (Art. No. 1198)** allows you to control up to 6 watering lines with the Water Computer C 1060 profi.

Each of the 6 watering lines can only be actuated once a day. This is ideal where there is an insufficient amount of water or where individual areas of the garden have varying water requirements. It allows all watering lines to be operated one after another.

**Programming**

Using the **special** function, your Water Computer C 1060 profi is able to take into account the special requirements of the Automatic Water Distributor, when programming.

**Special function**

If program data have already been inserted beforehand, a RESET must be undertaken before the **special** function can be set.

→ Keep **▲**-key and **O.K.**-key pressed simultaneously for 2 seconds.

To ensure the Automatic Water Distributor switches safely there must be at least a 30 minute break between the programs entered in the Water Computer.

When you have confirmed the **special** function with **O.K.** and have entered the data for the first program (see 5. Programming) all the programmes which follow will be pre-programmed automatically.

The pre-programming takes into consideration the 30 minute break required between the programs as well as a minimum watering time of 30 seconds (display: **1** min.).

This watering time is required to allow the Automatic Water Distributor to switch to the next outlet and to ensure that the order of the watering programs to the appropriate watering line is retained.

The watering days entered for the watering program are valid for all other watering programs.

#### **Error message (ERROR)**

You can alter the watering starting times and watering times pre-programmed by the Water Computer to meet your personal requirements. However, if you do not take into account the break times mentioned above, any changes you make are not accepted and an error message appears on the display (**ERROR**).

Since it is very easy for watering times to overlap slightly, especially when the beginnings and ends of programs are very close together, it is sensible to RESET the Water Computer and to re-enter the watering data to prevent an error message appearing.

#### **On/Off Prog.**

If the watering programs are switched off after you have confirmed the **special** function (status indicator on **Off Prog.**) all the programs which begin in this time are shortened to the minimum watering time of 30 seconds (display: **1** min.) This ensures that the order of the watering programs to the appropriate outlet of the Automatic Water Distributor is retained.

#### **Soil Moisture Sensor / Rain Sensor**

By briefly opening the water flow the outlets on the Automatic Water Distributor are switched further so that when the watering programs are reactivated (**% Run-Time**) the original order of the outlets for the required watering program is retained.


When using the Water Computer C 1060 prof together with the Automatic Water Distributor, **Soil Moisture Sensor (Art. No. 1187)** or **Rain Sensor electronic (Art. No. 1189)** please note the following:

If the **special** function is activated and the Soil Moisture or Rain Sensor indicates sufficient moisture, watering is interrupted. The watering time of following watering programs is shortened to 30 seconds (display: **1** min.) until the Soil Moisture / Rain Sensor allows the watering programs to be resumed. The watering time originally entered then begins.

Shortening the watering time when the soil is sufficiently moist ensures that the automatic water distributor is switched to the next outlet and therefore ensures that the correct order of the watering program for the respective distributor outlet is retained.

## 7. Cleaning

### Clean filter:

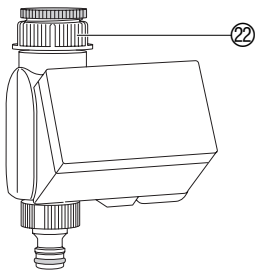

The filter should be checked regularly and cleaned when necessary.

1. Unscrew sleeve nut ② of the Water Computer by hand from the tap thread (do not use pliers).
2. Remove filter from sleeve nut ② and clean.
3. Screw sleeve nut ② of the Water Computer back on to the thread of the tap by hand (do not use pliers).

## 8. Trouble-Shooting

Fault	Possible Cause	Remedy
No display appears	Battery inserted incorrectly.	→ Check polarity markings match (+/-).
	Flat battery.	→ Insert new (alkaline) battery. → Check function by operating manually ( <b>man. On/Off</b> ).

Fault	Possible Cause	Remedy
No display appears	Temperature on the display is higher than 60 °C.	Display appears after temperature has dropped. → Check function by operating manually. ( <b>man. On/Off</b> ).
Programs cannot be entered	The current time and the day of the week were not entered completely.	→ Enter time and day of week (see 5. Programming).
Manual opening via the <b>man. On/Off</b> -key is not possible	Low battery power, <b>Batt.</b> indicator flashes	→ Insert new (alkaline) battery
	Manual watering period is set to <b>0:00</b> .	→ Set manual watering period to a figure greater than <b>0:00</b> (see 5. Programming).
	Tap turned off.	→ Turn tap on.
Watering program is not being undertaken (no watering)	Watering program has not been entered completely.	→ Read off watering program and modify if necessary.
	Programs deactivated ( <b>Prog. Off</b> ).	→ Activate program ( <b>% Run-Time</b> ).
	Program entry/modification during or just before the start pulse.	→ Make program entry/modification outside the programmed start times.

Fault	Possible Cause	Remedy
<b>Watering program is not being undertaken (no watering)</b>	Valve was opened manually previously.	→ Avoid possible program overlaps.
	Tap turned off.	→ Turn on tap.
	Program overlap (1 <sup>st</sup> watering start time has priority).	→ Enter new watering program without overlaps.
	Soil moisture or rain sensor reports sufficient moisture.	→ If dry, check setting/ location of soil moisture/ rain sensor.
	<b>Batt.</b> indicator flashes because battery is almost flat.	→ Insert new (alkaline) battery
<b>Water Computer does not close</b>	Minimum quantity of water drawn is less than 20 l/h.	→ Connect more drip heads

If you have any other problems with your Water Computer, please contact GARDENA Service.

## 9. Putting Your Water Computer out of Operation

**Over-wintering / storage:**



1. Press **Menu**-key 3 times, select **Prog. Off** with the **▲**-key and confirm with the **O.K.**-key.  
*The watering programs are deleted.*
  2. Store your Water Computer in a dry place where it is protected from frost.
- Please return flat batteries to a GARDENA dealer or dispose of them properly at your nearest recycling centre. Only dispose of batteries when they are **flat**.

## 10. Accessories

**Automatic control with:**

GARDENA Soil Moisture Sensor	<b>Art. No. 1187</b>
GARDENA Rain Sensor electronic	<b>Art. No. 1189</b>
GARDENA Automatic Water Distributor	<b>Art. No. 1198</b>

## 11. Technical Data

<b>Min./max. operating pressure:</b>	0,5 bar / 12 bar
<b>Flow medium:</b>	Clear fresh water
<b>Max. medium temperature:</b>	40 °C
<b>Number of program-controlled watering cycles per day:</b>	Up to 6
<b>Watering duration per program:</b>	1 min. to 9 hours 59 min.
<b>Battery required:</b>	1 × 9V alkaline manganese (alkaline) battery type IEC 6LR61
<b>Operating time of the battery</b>	approx. 1 year

## 12. Service

### *Warranty*

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults.

Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorized third party have attempted to repair the unit.

Damage caused by frost is not covered by the warranty.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Water Computer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet.

**GB** *Product Liability*

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

**S** *Produktansvar*

Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparerats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.

**NL** *Productaansprakelijkheid*

Wij wijzen er nadrukkelijk op, dat wij op grond van de wet aansprakelijkheid voor producten niet aansprakelijk zijn voor schade ontstaan door onze apparaten, indien deze door onvakkundige reparatie veroorzaakt zijn, of er bij het uitwisselen van onderdelen geen gebruik gemaakt werd van onze originele GARDENA onderdelen of door ons vrijgegeven onderdelen en de reparatie niet door de GARDENA technische dienst of de bevoegde vakman uitgevoerd werd. Ditzelfde geldt voor extra-onderdelen en accessoires.

**D** *Produkthaftung*

Wir weisen ausdrücklich darauf hin, dass wir nach dem Produkthaftungsgesetz nicht für durch unsere Geräte hervorgerufene Schäden einzustehen haben, sofern diese durch unsachgemäße Reparatur verursacht oder bei einem Teileaustausch nicht unsere Original GARDENA Teile oder von uns freigegebene Teile verwendet werden und die Reparatur nicht vom GARDENA Service oder dem autorisierten Fachmann durchgeführt wird. Entsprechendes gilt für Ergänzungssteile und Zubehör.

**FIN** *Product Liability*

Painotamme tuotevastuulain mukaisesti erityisesti sitä seikkaa, että emme vastaa elektroniselle vesiajastimelle aiheutuneista tai sen aiheuttamasta vahingoista, mikäli ne ovat aiheutuneet epäpätevän korjauksen takia, mikäli elektroniseen vesiajastimeen on vaihdettu osia, jotka eivät ole alkuperäisiä GARDENA-osia tai meidän hyväksymiä osia tai mikäli korjauksen on tehnyt jokin muu kuin GARDENA-huolto tai valtuutettu huolto. Sama koskee myös lisälaitteita ja -varusteita.

**GB** *EU Certificate of Conformity*

The undersigned GARDENA International GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, hereby certifies that, when leaving our factory, the unit indicated below is in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the unit is modified without our approval.

**S** *EU Tillverkarintyg*

Undertecknad firma GARDENA International GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, intyggar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktspecifikation. Detta intyg upphör att gälla om produkten ändras utan vårt tillstånd.

**NL** *EU-overeenstemmingsverklaring*


Ondergetekende GARDENA International GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, bevestigt, dat het volgende genoemde apparaat in de door ons in de handel gebrachte uitvoering voldoet aan de eis van, en in overeenstemming is met de EU-richtlijnen, de EU-veiligheidsstandaard en de voor het product specifieke standaard. Bij een niet met ons afgestemde verandering aan het apparaat verliest deze verklaring haar geldigheid.

**D** *EU-Konformitätserklärung Maschinenverordnung (9. GSGVO) / EMVG / Niedersp. RL*

Der Unterzeichnete GARDENA International GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, bestätigt, dass das nachfolgend bezeichnete Gerät in der von uns in Verkehr gebrachten Ausführung die Anforderungen der harmonisierten EU-Richtlinien, EU-Sicherheitsstandards und produktspezifischen Standards erfüllt. Bei einer nicht mit uns abgestimmten Änderung des Gerätes verliert diese Erklärung ihre Gültigkeit.

**FIN EU-Vakuustodistus**

Allekirjoittanut, GARDENA International GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, vahvistaa, että lähtiessään tehtaalta ko. tuote (tuotteet) on valmistettu EU-ohjeiden, EU-turvallisuus – ja tuote-erittelystandardien mukaisesti. Tämä vakuus mitätöityy, mikäli tuotetta (tuotteita) muutetaan ilman hyväksyntäämme.

Description of the unit: Produktbeskrivning: Omschrijving van het apparaat: Bezeichnung des Gerätes: EU-direktiivit:	Water Computer Bevattningscomputer Besproeiingscomputer Bewässerungscomputer Kasteluohjain	Type: Type: Typ: Typ: Tyyppi:	C 1060 profi	Art. No.: Art.nr. : Art. nr.: Art.-Nr.: art.-nro	1815
EU directives: EU direktiv: EU-richtlijnen: EU-Richtlinien: EU-direktiivit:	89/336/EC 93/68/EC	Year of CE marking: CE-Märkningsår: Installatiejaar van de CE-aanduiding: Anbringungsjahr der CE-Kennzeichnung: CE-hyväksyntä vuosi:		1998	
Ulm, 17.07.1998 Ulm, 1998.07.17. Ulm, 17-07-1998 Ulm, 17.07.1998 Ulm, 17.07.1998	 Thomas Heintl Technical Dept. Manager Technical Director Hoofd technische dienst Technische Leitung Tekn. osaston päällikkö				

PROG	START TIME	RUN TIME	Mo	Tu	We	Th	Fr	Sa	So	2 <sup>nd</sup>	3 <sup>rd</sup>
1											
2											
3											
4											
5											
6											

PROG	START TIME	RUN TIME	Mo	Tu	We	Th	Fr	Sa	So	2 <sup>nd</sup>	3 <sup>rd</sup>
1											
2											
3											
4											
5											
6											



**Deutschland**

GARDENA  
International GmbH  
Service Center  
Hans-Lorenser-Straße 40  
D-89079 Ulm  
Produktfragen: (07 31) 490-246  
Reparaturen: (07 31) 490-290

**Argentina**

Argensem S.A.  
Calle Colonia Japonesa s/n  
(1625) Loma Verde  
Buenos Aires

**Australia**

NYLEX Consumer Division  
76-88 Mills Road  
P.O. Box 722  
Braeside 3195  
Melbourne, Victoria

**Austria**

GARDENA Österreich  
Ges. m.b.H.  
Stettnerweg 11-15  
2100 Korneuburg

**Belgium**

MARKT (Belgium) NV/SA  
Sterrebeekstraat 163  
1930 Zaventem

**Brazil**

RGS Comercial Ltda  
Av. Marginal do  
Rio Pinheiros, 5200  
Edificio Montreal  
Bloco e - Térreo  
05693-000 Sao Paulo - SP

**Bulgaria**

DENEX LTD.  
2 Luis Ahalier Str.  
7th floor  
Sofia 1404

**Canada**

GARDENA Canada Ltd.  
100 Summerlea Road  
Brampton, Ontario  
Canada L6T 4X3

**Chile**

Antonio Martinic Y CIA. LTDA.  
Gilberto Fuenzalida 185 Loc.  
Las Condes  
Santiago de Chile

**Costa Rica**

Compania Exim  
Euroiberoamericana S.A.  
Av. 12 bis Calle 16 y 18  
Bodegas Keith y Ramirez  
San José

**Cyprus**

FARMOKIPIKI LTD  
P.O. Box 7098  
74, Digeni Akrita Ave.  
1641 Nicosia

**Czech Republic**

GARDENA spol. s.r.o.  
Řípská 20a, č.p. 1153  
62700 Brno

**Denmark**

GARDENA Danmark A/S  
Naverland 8  
2600 Glostrup

**Finland**

Habitec Oy  
Martinkyläntie 52  
01720 Vantaa

**France**

GARDENA France  
Service Après-Vente  
BP 50080  
95948 ROISSY CDG Cedex

**Great Britain**

GARDENA UK Ltd.  
27-28 Brenkley Way  
Bleazard Business Park  
Seaton Burn  
Newcastle upon Tyne NE13 6DS

**Greece**

Agrokop  
G. Psomadopoulos & Co.  
33 A, Ifestou str. – 194 00  
Industrial Area Koropi  
Athens

**Hungary**

GARDENA Magyarország Kft.  
Késmárk utca 22  
1158 Budapest

**Iceland**

Heimilistaeki hf  
Saetun 8  
P.O. Box 5340  
125 Reykjavik

**Republic of Ireland**

Michael McLoughlin & Sons  
Hardware Limited  
Long Mile Road  
Dublin 12

**Italy**

GARDENA Italia S.p.A.  
Via Donizetti 22  
20020 Lainate (Mi)

**Japan**

KAKUDAI Mfg. Co. Ltd.  
1-4-4, Itachibori Nishi-ku  
Osaka 550

**Luxembourg**

Magasins Jules Neuberger  
Grand Rue 30  
Case Postale No. 12  
Luxembourg 2010

**Netherlands**

GARDENA Nederland B.V.  
Postbus 50176  
1305 AD ALMERE

**Neth. Antilles**

Jonka Enterprises N.V.  
Sta. Rosa Weg 196  
P.O. Box 8200  
Curaçao

**New Zealand**

NYLEX New Zealand Limited  
Private Bag 94001  
South Auckland Mail Centre  
10 Offenhauser Drive  
East Tamaki, Manukau

**Norway**

GARDENA Norge A/S  
Postboks 214  
2013 Skjetten

**Poland**

GARDENA Polska Sp. z o.o.  
Szymanów 9 d  
05-532 Baniocha

**Portugal**

GARDENA Portugal Lda.  
Recta da Granja do Marquês  
Edif. GARDENA  
Algueirão  
2725-596 Mem Martins

**Russia / Россия**

АО АМИДА ТТЦ  
ул. Мосфильмовская 66  
117330 Москва

**Singapore**

Hy - Ray Enterprises  
Block 1002 Toa Payoh  
Industrial Park  
#07-1433/1435/1451  
Singapore 319074

**Slovenia / Croatia**

Silk d.o.o. Trgovina  
Brodišče 15  
1236 Trzin

**South Africa**

GARDENA  
South Africa (Pty.) Ltd.  
P.O. Box 11534  
Vorna Valley 1686

**Spain**

GARDENA IBÉRICA S.L.U.  
C/ Basauri, nº 6  
La Florida  
28023 Madrid

**Sweden**

GARDENA Norden AB  
Box 9003  
20039 Malmö

**Switzerland**

GARDENA AG  
Bitziberg 1  
8184 Bachenbülach

**Ukraine / Украина**

АОЗТ АЛЬЦЕСТ  
ул. Гайдара 50  
г. Киев 01033

**Turkey**

GARDENA / Dost Diş Ticaret  
Mümessillik A.Ş.  
Yeşilbağlar Mah. Başkent  
Cad. No. 26  
Pendik - İstanbul

**USA**

GARDENA  
3085 Shawnee Drive  
Winchester, VA 22604

1815-28.960.04/0041  
© GARDENA Manufacturing GmbH  
D-89070 Ulm  
<http://www.gardena.com>

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>