

# GRACO®


## Highchair

### OWNER'S MANUAL

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

Dear Customer,

Please fill in the model and serial numbers above from the label on the back of the footrest of your new highchair.

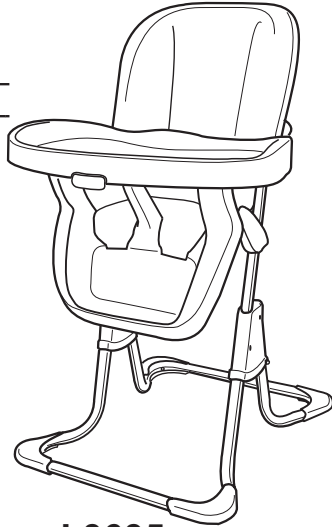

**Models 3630 and 3635**

### Congratulations on your purchase of a Graco® highchair!

Graco is the recognized leader in the design and manufacture of quality baby products. We believe your new Graco® highchair is a wise choice, promising many hours of enjoyment for your baby.

Before using your highchair, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you to use your highchair properly.


**Please save your Owner's Manual for future use.**

### Customer Satisfaction


Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com). Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use, or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

**⚠️ WARNING**

Failure to follow these warning instructions could result in serious injury or death.

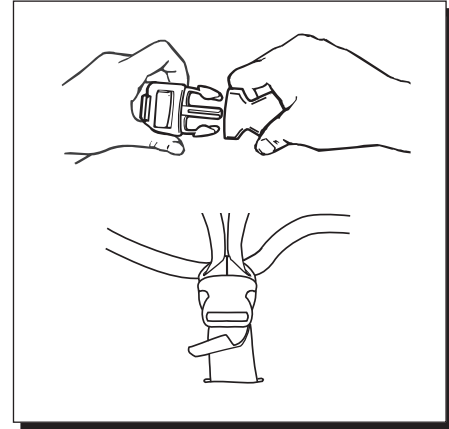

Prevent serious injury or death from falls or sliding out. Always secure child in the restraint.

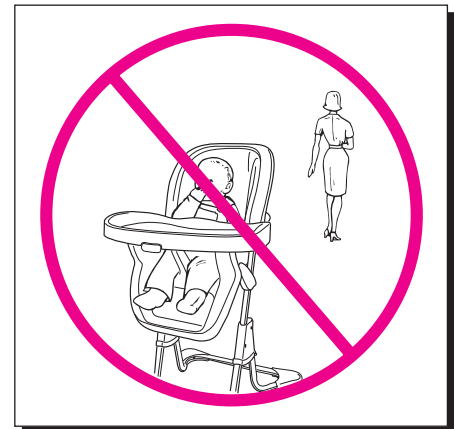

**NEVER LEAVE YOUR CHILD UNATTENDED.** Always keep your child in view.

### FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY.

If you experience any difficulties, please contact the Customer Service Department.

**THIS HIGHCHAIR IS DESIGNED TO BE USED** by a child up to 3 years of age. Maximum weight 37 pounds (17 kg).


**DO NOT FORCE TRAY** against child. Use only the five adjustment positions. Be sure both adjustment fingers are engaged in armrest slots.

**DO NOT ADJUST** the highchair with your child in it.

**DISCONTINUE USING YOUR HIGHCHAIR** should it become damaged or broken.


# WARNING

Read all warnings and the assembly instructions. Failure to follow these instructions may result in serious injury or death.

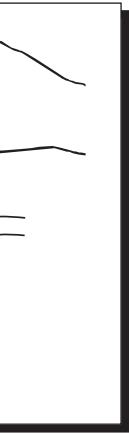

Secure your child at all times with the restraint system provided, in either the reclining or upright position. The tray is not designed to hold your child in the highchair. It is recommended that the highchair be used in the upright position only by children capable of sitting upright unassisted.

Death from secure

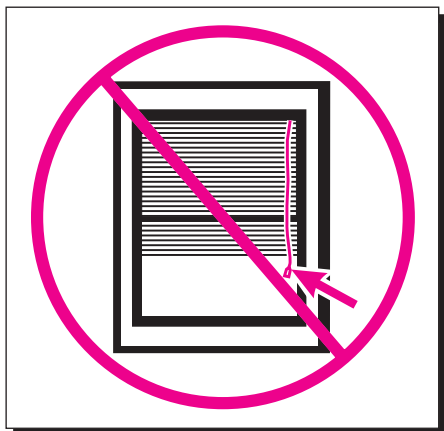

**STRANGULATION HAZARD:**  
DO NOT place highchair in any location where there are cords, such as window blind cords, drapes, phone cords, etc.

## CARE AND MAINTENANCE


**FROM TIME TO TIME CHECK YOUR HIGHCHAIR** for loose screws, worn parts or torn material. Replace or repair the parts as needed. Use only Graco® replacement parts.

**TO CLEAN HIGHCHAIR FRAME,** use only household soap or detergent and warm water. **NO BLEACH.**


## PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your highchair. If any parts are missing, call Customer Service at 1-800-345-4109 or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com).

Tools required: Screwdriver

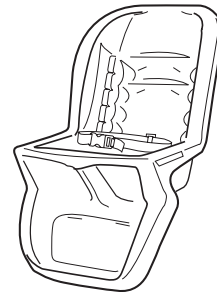


Seat with seat belt OR 5-point harness

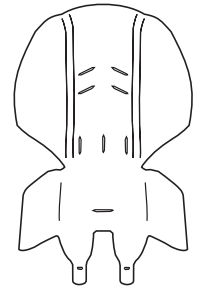

Seat pad



Support tube

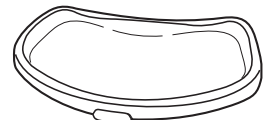


Tray



Bolt (2)



 
T-nut (2)



Screw (4)



Recline bar

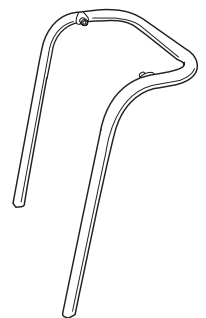


Upper tube




Recline bracket (2)



Foot (4)

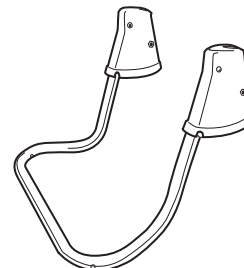

Rear tube

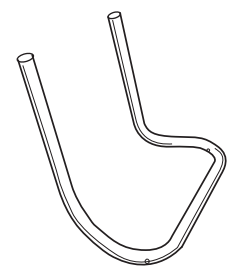


Front tube

## To Assemble Highchair


### Step 1.

Hold front tube with ends up. Place a foot (smooth side up) at one curved corner of tube. Insert a screw through tube and into foot, then tighten. Repeat with other corner, then with both feet of rear tube.

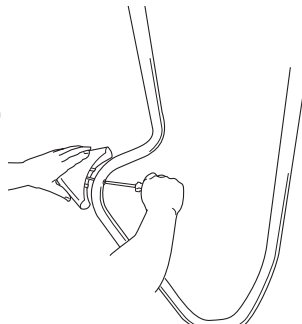


### Step 2.

Lay seat face down on the floor as shown. Insert support tube through both collars on bottom of seat.

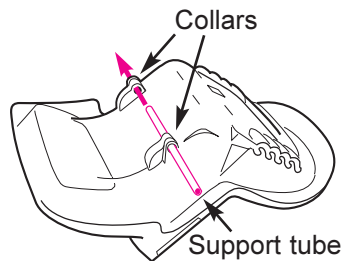

### Step 3.


Insert recline bar into one recline bracket (brackets have "L" and "R" on inside), with curved side of bar toward the bracket. Then attach bar and both recline brackets onto each end of the support tube as shown.

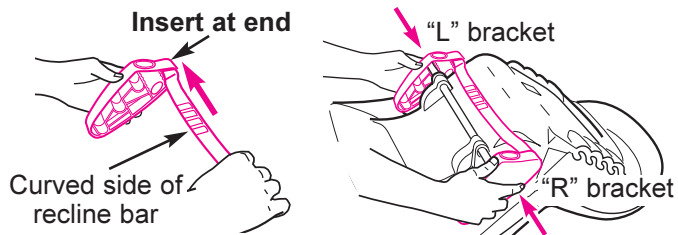

### Step 4.


Insert both ends of upper tube through holes in recline brackets and pull all the way through as shown.

Still holding ends of tube, locate pegs. Push pegs through the channel until they pass the snap. Slide pegs into first notch of height-adjustment track.

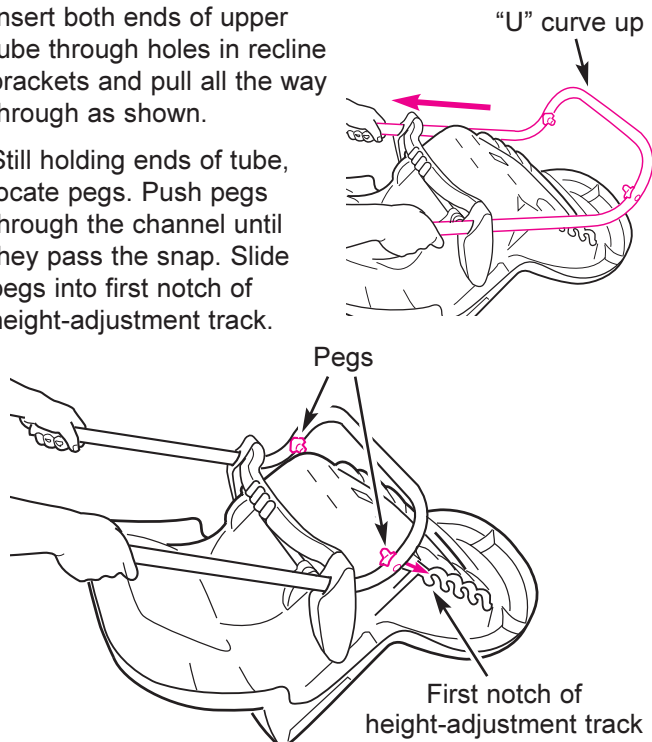


### Step 5.

Hold rear tube as shown. Slide plastic brackets onto upper tube.

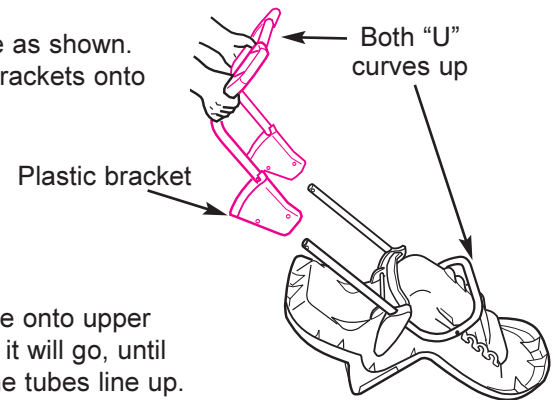

### Step 6.


Slide front tube onto upper tube as far as it will go, until the holes in the tubes line up.

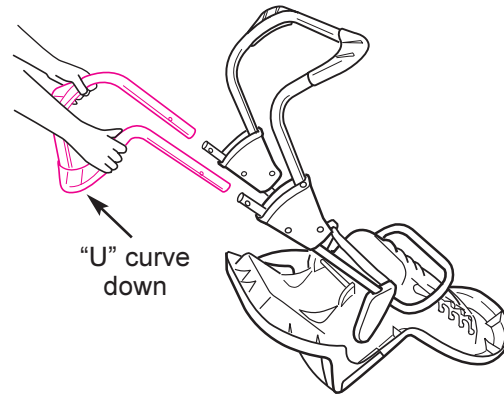

### Step 7.

Pull rear tube up until holes in plastic brackets line up with holes in the tubes.


**CHECK** that holes in upper tube, front tube **AND** plastic brackets all line up with each other.

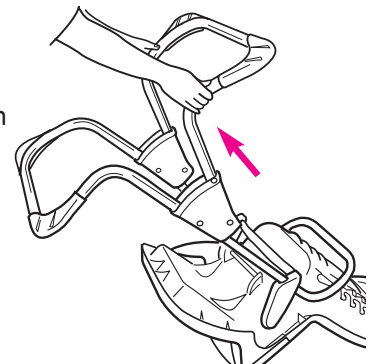

### Step 8.

Insert a T-nut into one plastic bracket hole. It must pass through both tubes, as shown in closeup below.

Insert a screw into other side of plastic bracket and screw it into the T-nut.

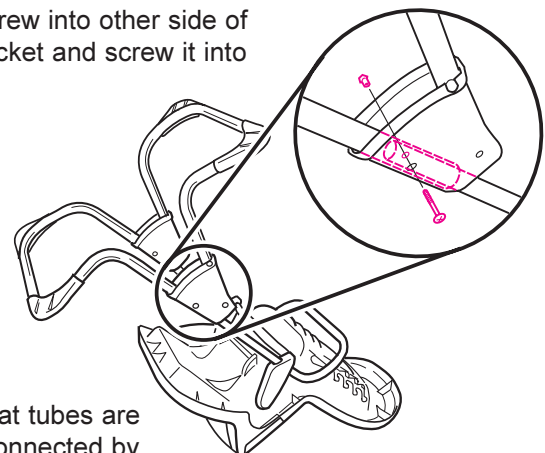

**CHECK** that tubes are securely connected by trying to pull them apart.

Repeat for other plastic bracket.


Set highchair upright.

## 5-POINT HARNESS MODELS (For waist belt models, see next section.)

### To Attach Seat Pad

#### Step 1.

Straps must be removed from seat before pad can be attached. **Behind the seat back**, locate four plastic retainers on shoulder and waist straps. Push them through the slots to the front and set straps aside.

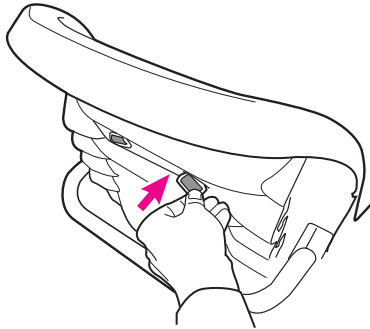


#### Step 2.

Place seat pad over highchair.


#### Step 3.

Push each retainer back through proper hole in rear of seat. Two levels of shoulder holes are provided; choose the level that is at or slightly above your child's shoulders. Avoid twisting straps.

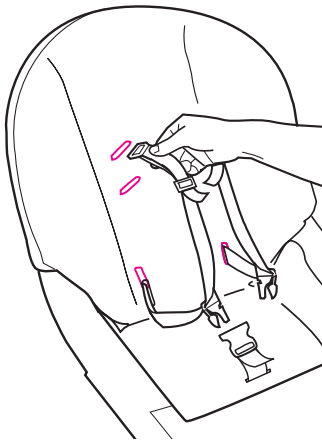


#### Step 4.

Pull crotch strap and buckle through center opening in seat pad.

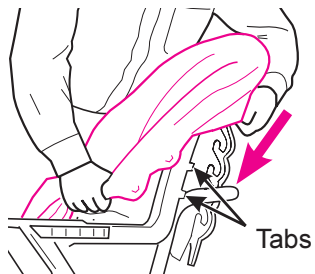

#### Step 5.

Attach seat pad by sliding pocket over the back of the seat as shown. Then hook sides of pad over the two tabs on each side of the highchair.

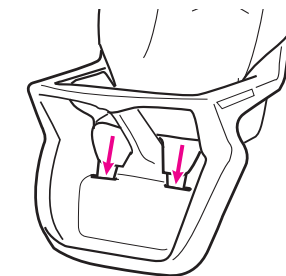

#### Step 6.

Push the two tabs on the bottom of the seat pad into the two slots in the bottom of the seat as shown.

From the rear of the footrest, pull the two tabs over the plastic anchors near them.


If it later becomes necessary to launder or replace the harness, follow the directions above to remove harness straps from highchair.

### To Secure Your Child

**▲WARNING** Prevent serious injury or death from falls or sliding out. Always secure your child in the restraint. Do not depend on the tray alone to hold your child.

#### Step 1.



Place your child's arms through the loops created by the shoulder/waist straps and insert the harness buckles into the center buckle housing.

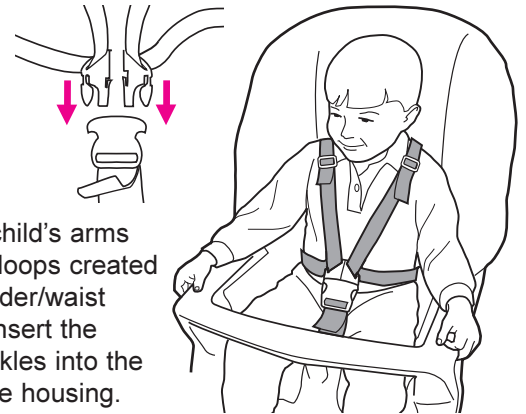

#### Step 2.

Adjust the shoulder and crotch strap lengths as needed to get a snug fit around your child:


- To tighten shoulder straps, hold free end of strap and slide adjuster away from the free end.
- To loosen shoulder straps, hold adjuster and pull strap back through the adjuster.

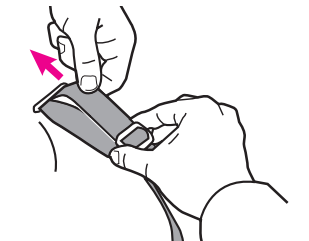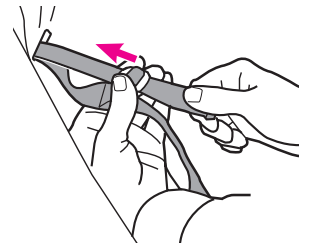

#### Step 3.

Finish by giving a quick tug on the free end until shoulder straps are tight.

**Check behind and in front of seat to see that belt is tightly threaded through retainers and straps are tight.**

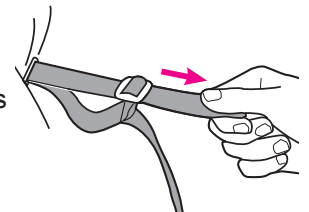

The position of the shoulder straps can be adjusted for the size of your child. Locate the two plastic retainers behind the seat back, push them through to the front and move them to the higher or lower position as desired.


## WAIST BELT MODELS

(For 5-point harness models, see preceding section.)

### To Attach Seat Pad


#### Step 1.

Attach seat pad by sliding pocket over the back of the seat as shown. Then hook sides of pad over the two tabs on each side of the highchair.

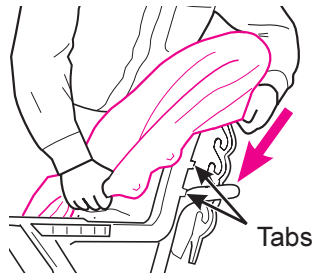


#### Step 2.

Pull the seat belt through the hole in the middle of the seat pad.

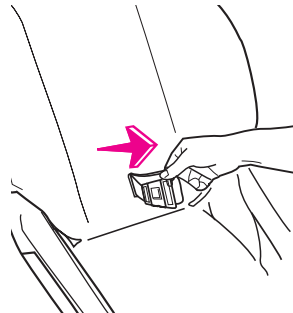

#### Step 3.


Push the two tabs on the bottom of the seat pad into the two slots in the bottom of the seat as shown.

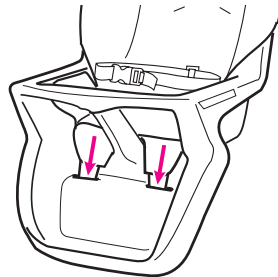


From the rear of the footrest, pull the two tabs over the plastic anchors near them.

### To Secure Your Child

Snap buckle together as shown. Adjust belt as needed to get a snug fit around your child.

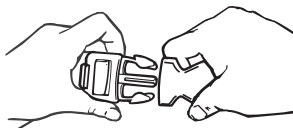


To release, squeeze buckle at sides.

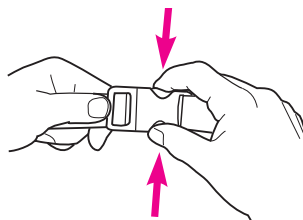

If it becomes necessary to remove the seat belt for cleaning or replacement, follow these instructions:


#### Step 1.

Remove seat pad. Unthread end of seat belt through the buckle as shown.

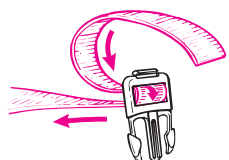

#### Step 2.

Pull other end of the seat belt through the belt retainer as shown.

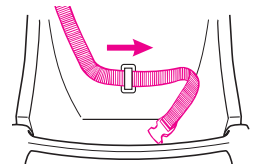


#### Step 3.

To rethread buckle, reverse the above steps. **CHECK** that the belt is threaded correctly by pulling on the seat belt. **The belt should not slip through the buckle.**

### To Use Tray


Place tray on armrests of seat. Pull out side handles under the tray. Put tray in one of the five adjustment positions, and release side handles.

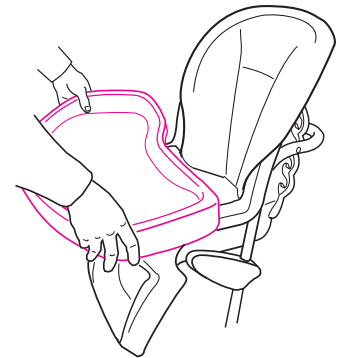

**CHECK** that tray is securely attached by pulling forward on the tray.

Use either the side handles or the front button to adjust or remove the tray.

**▲ WARNING DO NOT force the tray against your child. Keep your child's hands and fingers away from the tray when adjusting the tray.**

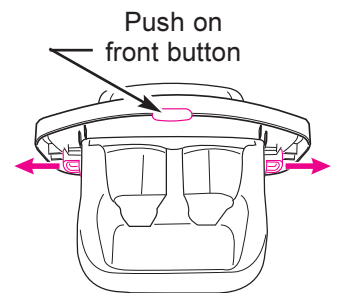

### To Adjust Recline

**▲ WARNING DO NOT adjust the highchair with your child in it.**


Pull up on the recline bar at back of seat to release the seat. Then pull or push seat to the desired recline position.

After adjusting recline, **push down on recline bar to lock seat.**

Seat can be adjusted to three different recline positions.

**CHECK** that both sides of the chair are snapped into the desired recline notches.

**Do not use tray when seat is in a recline position.**

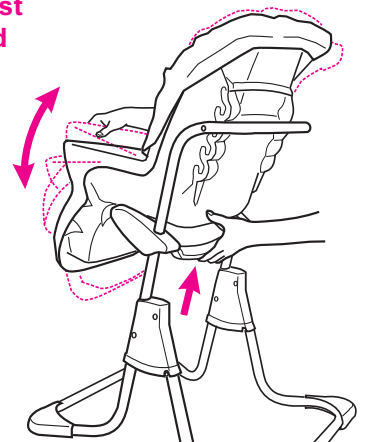

## To Adjust Height


**▲ WARNING DO NOT adjust the highchair with your child in it.**

Adjust seat to upright position. Hold chair frame down and lift top of plastic seat firmly to free pegs from height-adjustment notch. Slide seat up or down in the track, then snap it into desired height setting.

**When adjusting height, be careful to keep fingers away from the height-adjustment track.**


There are five possible height settings. The highchair can be used as a toddler chair by adjusting to the lower height settings.

**CHECK that both sides of chair are snapped into the desired height-adjustment notch.**

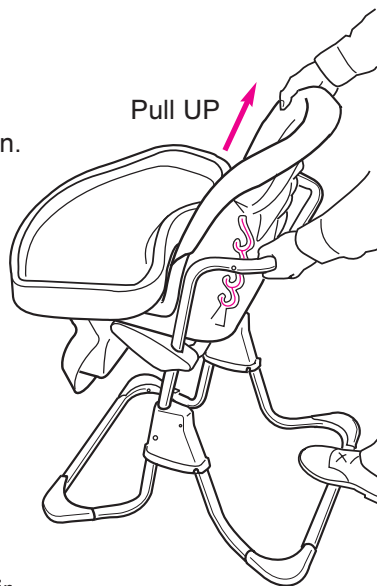

## To Fold Highchair

Lay highchair on the floor as shown. Press in and hold the metal buttons at base of both plastic brackets, then push rear leg tube down to fold highchair.

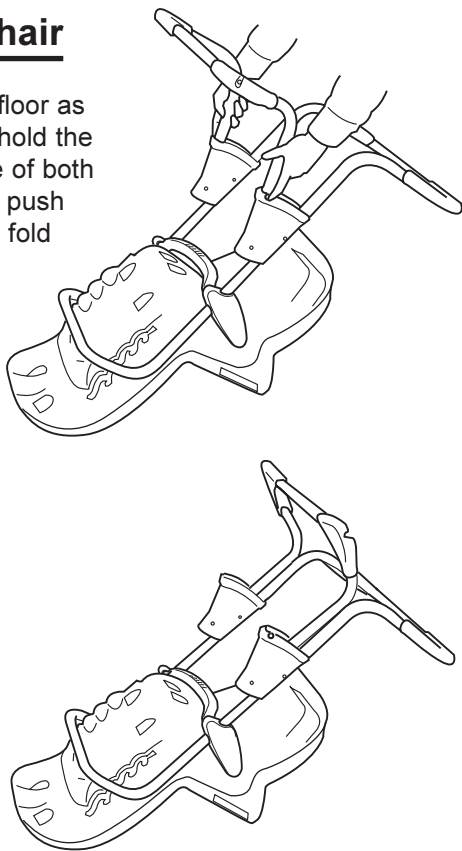

## Replacement Parts

### Instructions for ordering highchair parts:

Complete form below. Your highchair model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker on the back of the footrest. Payment must accompany your order.**

Parts List:*	Price:**
Seat.....	\$22.00
Seat pad.....	\$13.00
Seat belt*.....	\$ 5.00
Harness*.....	\$ 5.00
Tray.....	\$19.00
Support tube.....	\$ 7.00
Rear tube.....	\$10.50
Front tube.....	\$10.00
Upper tube.....	\$ 9.50
Recline bracket (2).....	\$ 7.00
Recline bar.....	\$ 5.00
Foot (each).....	\$ 5.00
Hardware.....	\$ 5.00

\* On certain models only.

\*\* Prices subject to change without notice.

### IF YOU NEED HELP

If you have any questions or if you need any part not listed, please call toll-free:

**1-800-345-4109**

or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com)

Return the form below with payment to:  
**GRACO CHILDREN'S PRODUCTS INC.**  
**CUSTOMER SERVICE DEPARTMENT**  
**P.O. BOX 100, MAIN STREET**  
**ELVERSON, PA 19520**

Model Number	SHIP TO:
(Must be filled in)	Name _____
<input type="checkbox"/> Seat	Address _____
<input type="checkbox"/> Seat pad	City, State, Zip _____
<input type="checkbox"/> Seat belt	(____) _____
<input type="checkbox"/> Harness	Telephone _____
<input type="checkbox"/> Tray	
<input type="checkbox"/> Support tube	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Rear tube	(payable to Graco Children's Products Inc.)
<input type="checkbox"/> Front tube	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Upper tube	<input type="checkbox"/> Visa
<input type="checkbox"/> Recline bracket	<input type="checkbox"/> MasterCard
<input type="checkbox"/> Recline bar	<input type="checkbox"/> Discover
<input type="checkbox"/> Foot	Total: _____
<input type="checkbox"/> Hardware	Shipping & handling: <b>\$5.00</b> Account #: _____
	6% sales tax (PA only): _____ Expiration date: _____
	Total amount due: _____ Signature: _____

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>