

GRUNDIG

made for you

MULTI HAIR TRIMMER

MT 9610

de

en

fr

it

pt

es

pl

cs

tr

el



A

B



C

D



E

DEUTSCH	6 - 13
ENGLISH	14 - 19
FRANÇAIS	20 - 25
ITALIANO	26 - 31
PORTUGUÊS	32 - 37
ESPAÑOL	38 - 43
POLSKI	44 - 49
CESKY	50 - 55
TÜRKÇE	56 - 61
ΕΛΛΗΝΙΚΑ	62 - 67

SAFETY

Please note the following information when using the appliance:

- The appliance is designed for domestic use only.
- Never use the appliance in the bath, shower or over a washbasin filled with water; nor should it be operated with wet hands.
- Do not immerse the appliance in water and only let the blade head come into contact with water during cleaning.
- Only use the appliance on clean, dry skin. You should not apply any cream or lotion to the skin.
- This appliance should only be used for removing hair in the nostrils, in the ears, the eyebrows and the beard. Any other use is expressly prohibited.
- Do not use the appliance if you suffer from acne, eczema or any other skin irritations. Do not use the appliance on inflamed skin.
- Inflammation of the skin is often caused by invasive bacteria. Clean the head of the trimmer before and after every use.
- The appliance should only be used by one person to avoid spreading any germs.
- Never use the appliance if it is visibly damaged.



SAFETY

- Keep the appliance away from children.
- Never open the appliance under any circumstances.
No warranty claims are accepted for damage caused by incorrect handling.

Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.

Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.



Information on batteries

The battery – even if it does not contain heavy metal – may not be disposed of with household waste. Please dispose of used batteries in an environmentally responsible manner. Find out about the legal regulations which apply in your area.

OVERVIEW

Unfold page 2 so that you have the illustration in front of you.

Controls

- A** Detachable cap.
- B** Sliding switch for on and off.
- C** Blade head for trimming nose and ear hair.
- D** Lid for battery compartment.
- E** Replaceable blade head for trimming beard hair.

Power supply

The appliance operates with a 1 x 1.5 V, R 6/UM 3/AA battery.

- 1** Remove the lid to the battery compartment **D** by turning it to the left slightly, then pull.
- 2** Insert a battery in the housing with its positive terminal facing downwards.
- 3** Put the lid back on the trimmer and turn it slightly to the right until it clicks.

Note

- Take out the batteries when you know that the device will not be used for a long period of time. The manufacturer accepts no liability for damage resulting from leaking batteries.

OPERATION

Switching on and off

- 1 Remove the cap **A**.
- 2 Push **B** the sliding switch forwards to switch on the appliance.
- 3 To switch off, push back the sliding switch **B**.
- 4 Clean the trimmer and put the cap **A** back on.

Trimming nose hair

- 1 Attach a suitable blade head **C** for the trimmer and turn it to the left slightly until it latches into place.
- 2 Insert the blade head **C** into your nostrils slightly.
- 3 Gently move the trimmer in the nostrils to cut unwanted hair.



Note

- Do not insert the trimmer blade head too deeply into your nostrils.

OPERATION

Trimming ear hair

- 1 Put the blade head **C** into the opening of your ear.
- 2 Gently move the trimmer in the opening of the ear to cut unwanted hair.

Note

- You can also trim eyebrow hair.



Trimming beards, sideburns and neck hair

- 1 Switch off the trimmer with the sliding switch **B**.
- 2 Take out the blade head **C** by turning it to the right slightly, until it clicks, then remove.
- 3 Attach the suitable replaceable blade head **E** and turn it to the left slightly until it latches into place.
- 4 If the trimmer is blocked by thick hair while you are using it, turn it off.



INFORMATION

Cleaning and care

- 1 Switch off the trimmer with the sliding switch **B**.
- 2 Take out blade head **C** or **E** by turning it to the right slightly, until it clicks, then remove.
- 3 Clean the blade head under warm, running water. Dry it well and leave it to dry out properly before you use it again.

Note

- Do not allow the housing of the trimmer to come into contact with water.

Technical data



This product fulfils the European directives 2004/108/EG and 2006/95/EG.

Power supply

1 x 1.5 V, R 6/UM 3/AA battery

Technical and design modifications reserved.

Grundig Multimedia B.V.

Atrium, Strawinskylaan 3105 • NL-1077 ZX Amsterdam • <http://www.grundig.com>

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>