

RECHARGEABLE -3 HEADED SHAVER

Model 40195

CHARGING AND OPERATING INSTRUCTIONS



Due to continuing improvements, actual product may differ slightly from the product described herein.



3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our website at: <http://www.harborfreight.com>

**TO PREVENT SERIOUS INJURY, READ AND UNDERSTAND
ALL WARNINGS AND INSTRUCTIONS BEFORE USE.**

Copyright© 2002 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

For technical questions or replacement parts, please call 1-800-444-3353

Manual Revised 09/06; 11/06.

SPECIFICATIONS

Body Construction	Molded PVC, Stamped & Ground Stainless Steel
Head	3 Removable Flex Foils
Charging Power Source	120 V~ / 60 Hz, 2,450 RPM
Battery	Internal NiCd 'AA' type IMPORTANT! Remove before disposal, see page 5.
Power Cord	3'3" Length. UL Listed, 2-Prong Plug
Charging Time	8 - 16 hrs.
Trimmer Width	7/8"
Number of Cutters	3 Cutters with 6 Blades per Cutter

SAVE THIS MANUAL

You will need the manual for the safety warnings and precautions, assembly instructions, operating and maintenance procedures, parts list and diagram. Keep your invoice with this manual. Write the invoice number on the inside of the front cover. Keep the manual and invoice in a safe and dry place for future reference.

SAFETY WARNINGS AND PRECAUTIONS

1. **Keep children away from product usage area.** Do not allow children to handle this product.
2. **Do not use this product if under the influence of alcohol or drugs.** Read warning labels on prescriptions to determine if your judgement or reflexes are impaired while taking drugs. If there is any doubt, do not attempt to use this product.
3. **Stay alert.** Watch what you are doing at all times. Use common sense. Do not operate this product when you are tired or distracted from the job at hand.
4. **Check for damaged parts.** Before using this product, carefully check that it will operate properly and perform its intended function. Check for damaged parts and any other conditions that may affect its operation. Replace or repair damaged or worn parts immediately.
5. **Warning: To reduce risk of death or injury by electric shock, do not reach for a plugged in shaver that has fallen into water.** Unplug immediately. Some electrical parts inside the clipper are electrically live, even with the switch "off".
6. **Do not use while bathing or in a shower.**
7. **Do not force product.** It will do the job better and more safely at the rate for which it was intended. Do not use inappropriate attachments in an attempt to exceed the tool capacity.
8. **Replacement parts and accessories.** When servicing, use only identical replacement parts. Only use accessories intended for use with this product.
9. **Do not place or store appliance where it can fall or be pulled into a tub or sink.** Do not place in or drop into water or other liquid.

10. **Always unplug this appliance from the electrical outlet immediately after using.**
11. **Unplug this appliance before cleaning.**
12. **This appliance should never be left unattended when plugged in.** Close supervision is necessary when this appliance is used by, on, or near children or invalids.
13. **Use this appliance only for its intended use, as described in this manual.**
14. **Never operate if damage is done to cord or plug, or if the shaver has been dropped or damaged.**
15. **Do not operate with a damaged or broken blades, as injury may occur.**
16. **Before use, make certain blades are aligned properly.**
17. **Warning: People with pacemakers should consult their physician(s) before using this product.** Electromagnetic fields in close proximity to a heart pacemaker could cause interference to or failure of the pacemaker.
18. **Warning: The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur.** It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.


UNPACKING

When unpacking, check to make sure all parts shown on the Parts List (page 6) are included. If any parts are missing or broken, please call Harbor Freight Tools at the number shown on the cover of this manual as soon as possible.

CHARGING INSTRUCTIONS

Note: All numbers referenced below refer to the parts listed on page 6 of this manual.

1. Rechargeable Shaver (1) is charged by attaching Power Cord (4) to Shaver and electrical outlet. Push the Switch (5) down. Charging Indicator Light (3) will tell you that charging is taking place. This will take 8-16 hours to charge. When fully charged, your shaver can be used about 7 days. When charge is complete, disconnect power cord.

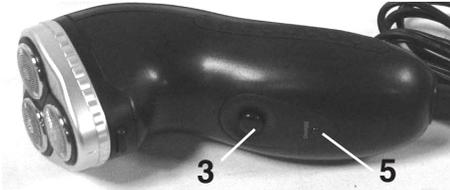

2. Charging more than 16 hrs. can damage the life of the battery. Battery is sealed in Shaver casing (1) and cannot be replaced.


OPERATION INSTRUCTIONS

Take off Protective Cap (7). Push Switch (5) up. Using a soft touch to your skin, move Shaver in the opposite direction of hair growth. Stretching the skin gives you a closer shave. Once shaving is done, push Switch down and replace Protective Cover.

Trimmer Operation

1. Flip up Trimmer (2) on back of Shaver (1).
2. At a right-angled direction, softly touch your skin where you want to trim. Work slowly.
3. When finished trimming, push Trimmer (2) back into flat position.

Cleaning / Maintenance

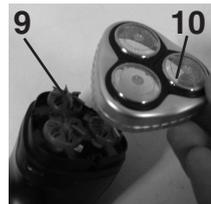

After using, clean Shaver's Three Cutting Heads (9) with Brush (8) after removing Plastic Foil Cover (10). When clean, replace cover. Cleaning your Shaver will help keep it working at maximum efficiency. **Caution: Be careful not to pinch or cut fingers when cleaning cutting heads.**

DISPOSAL INSTRUCTIONS

Important!

Note: This item contains a NiCd battery that must be recycled or disposed of properly. Do not dispose of this item without first removing the NiCd battery for proper disposal/recycling. Removing the battery will destroy the shaver and should only be done prior to disposal.


1. Remove the two Screws on the back of the shaver towards the bottom.
2. Flip up the Trimmer (2) and remove the two screws from the holes that are now exposed.
3. Swing the back housing of the Shaver up from the rear forward.
4. Using wire cutters (not included), clip the two tabs that are soldered to the battery.
5. Dispose of battery properly or recycle it. For information on free NiCd battery recycling, call 1-800-444-3353.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

PARTS LIST AND DIAGRAM

Part	Description	Q'ty
1	Shaver	1
2	Trimmer	1
3	Indicator Light	1
4	Power Cord	1
5	Switch	1
6	Travel/Storage Pouch	1
7	Protective Cap	1
8	Shaver Brush	1
9	Cutting Heads	3
10	Removable Plastic Foil Cover	1

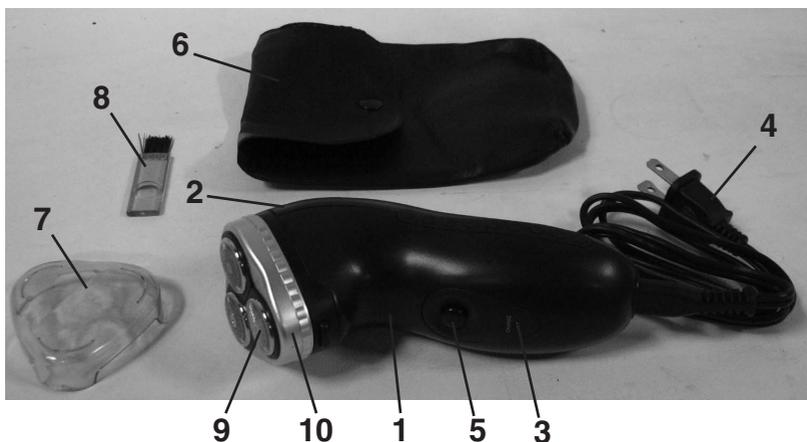

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>