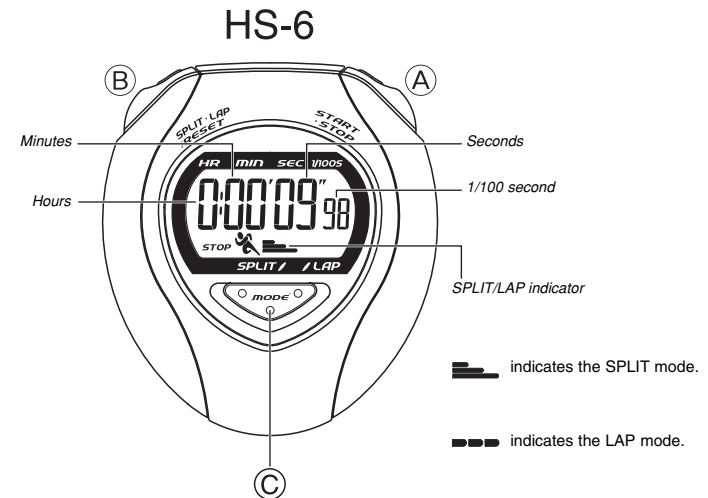
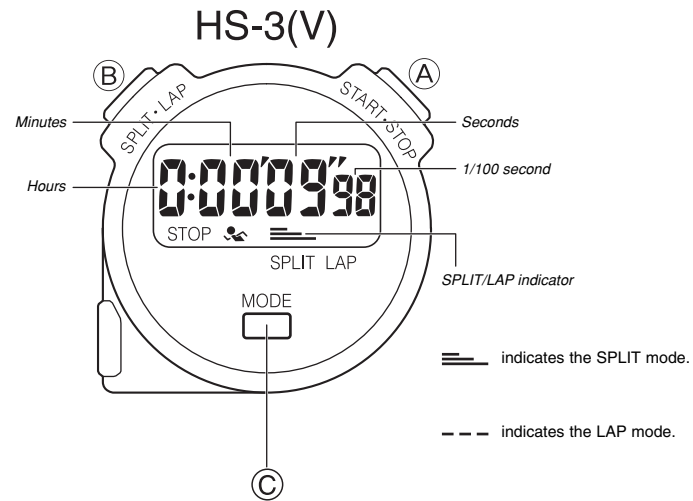


USER'S GUIDE HS-3(V) HS-6

CASIO®


- A sticker is affixed to the glass of this stopwatch when you purchase it. Be sure to remove the sticker before using the stopwatch.
- Depending on the stopwatch model, the configuration of your stopwatch may differ somewhat from that shown in the illustration.

USING THE STOPWATCH


- Ⓐ Press this button to start and stop elapsed time measurement.
- Ⓑ Press this button while an elapsed time measurement is in progress to momentarily freeze a **SPLIT** or **LAP** time on the display (timing continues internally). Press again to display the ongoing time measurement. You can repeat the **LAP/SPLIT** time operation as many times you want. Pressing this button while elapsed time measurement is stopped resets the time to all zeros.
- Ⓒ Press this button to toggle between the **SPLIT** time mode and **LAP** time mode.

• The maximum elapsed time that can be measured is 9 hours, 59 minutes, 59.99 seconds.


A SPLIT is the time from the start of an event up to any specific point.	SPLIT	
A LAP is the time for one segment (lap) of an event.	LAP	

How to operate the stopwatch


• Normal time measurement




• Net times (Accumulated time excluding loss time)




• SPLIT timing

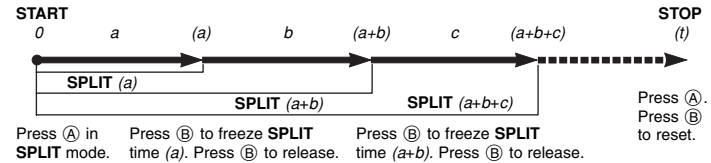

• 1st-2nd place times

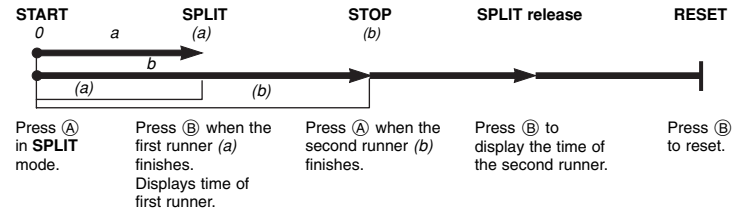

• LAP timing (Lap timing for each segment of an event)

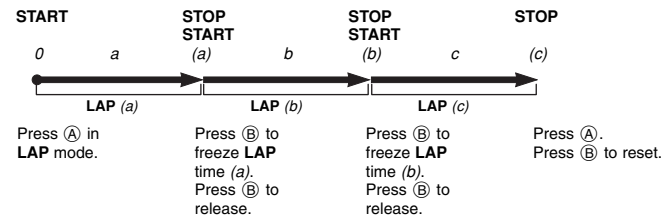

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>