

CASIO®

Service Manual

(with price)

GZ-500



GZ-500

INDEX

GM SOUND KEYBOARD

CONTENTS

| | |
|----------------------------------|-----------|
| Specifications | 2 |
| Operation | 3 |
| Block Diagram | 8 |
| Circuit Description | 9 |
| Major waveforms | 17 |
| Schematic Diagrams | 18 |
| Exploded View | 22 |
| Parts List | 23 |

SPECIFICATIONS

GENERAL

| | |
|--------------------|--|
| Number of keys: | 61 |
| Polyphonic: | 32-note |
| Preset tones: | 128, Drum set: 8 |
| Keyboard controls: | Touch response: On/Off |
| Digital effects: | 10, including Reverb-1, Reverb-2, Reverb-3, Chorus, Tremolo, Phase Shifter, Organ SP, Enhancer, Flanger, EQ Loudness |
| Modulation: | On/Off, Depth setting range: 0 - 127 |
| Pitch bend wheel: | Bend sense: 0 - 12 |
| Tuning control: | 440Hz ± 50 cents |
| Built-in speakers: | 12 cm dia. 2 W input rating: 2 pcs. |
| Terminals: | Phone Jack [Output impedance: 100 Ω, Output voltage: 4.5 V(rms) MAX], MIDI Jacks (IN, OUT), Assignable Jack, AC Adapter Jack (9 V) |
| Auto power off: | Approximately 6 minutes after the last operation |
| Power source: | 2-way AC or DC source |
| | AC: AC adapter |
| | DC: 6 D size dry batteries |
| Power consumption: | 7.7 W |
| Dimensions (HWD): | 129 x 942 x 367 mm (5-1/16 x 37-1/16 x 14-1/2 inches) |
| Weight: | 5.3 kg (11.7 lbs) excluding batteries |

ELECTRICAL

| | |
|---|---------------|
| Current drain with 9 V DC: | |
| No sound output | 294 mA ± 20% |
| Maximum volume | 940 mA ± 20% |
| with 32 polyphonic notes in tone No. 078 | |
| Volume: maximum, Velocity: maximum | |
| Phone output level (Vrms with 8 load each channel): | |
| with key A5 pressed in tone No. 078 | 100 mV ± 20% |
| Line output level (Vrms with 47 k load each channel): | |
| with key A5 pressed in tone No. 078 | 1350 mV ± 20% |
| Minimum operating voltage: | 6.0 V |

OPERATION

SETTING UP THE KEYBOARD

| Item | Setting | Setting operation |
|-----------------|-----------------|--|
| System Reset | 1* | 1. Press the control button and repeat it until the display shows "Srt". "SUR" and "Srt" will appear alternately on the display. 2. Press the + key. |
| Assignable Jack | Sustain pedal | 1. Press the control button and repeat it until the display shows "JAC". 2. Using the +/- key, select "SUS" on the dispaly. |
| | Sostenuto pedal | 1. Press the control button and repeat it until the display shows "JAC". 2. Using the +/- key, select "SoS" on the dispaly. |
| | Soft pedal | 1. Press the control button and repeat it until the display shows "JAC". 2. Using the +/- key, select "SFt" on the dispaly. |
| GM Reset 3* | 2* | 1. Press the MIDI button and repeat it until the display shows "Grt". "SUR" and "Grt" will appear alternately on the display. 2. Press the + key. 3. Press the + key again. |

Notes: 1* See the initial settings list as shown below.

2* See the initial settings in The General MIDI system on next page.

3* The exclusive message of "GM system on" will be transmitted when completing the operation.

System exclusive: GM system on [F0][7E][7F][09][01][F7]

The initial settings

| | | |
|---------------------------------|------------------------|-------------------------|
| Tone: | 000 (Piano) | Channel 1 - 9 & 11 - 16 |
| | dr0 (Drum set 0) | Channel 10 |
| Modulation: | 0 (Off) | |
| MIDI control change | | |
| Volume: | 100 | |
| Pan: | 64 (Center) | |
| Expression: | 127 (Maximum) | |
| Effect depth: | 127 (Maximum) | |
| Pitch bend sense: | 2 | |
| Coarse tune: | 0 (Center) | |
| Fine tuning: | 0 (Center) | |
| Digital effect: | E-0 (Digital effect 0) | |
| MIDI channel: | 01 | |
| Channel On/Off: | On | |
| Octave shift: | 0 | |
| Modulation depth: | 064 | |
| Touch response: | r-0 (Touch curve 0) | |
| Velocity at touch response OFF: | 100 | |
| Assignable jack: | SUS (Sustain pedal) | |
| Local control On/Off: | On | |

The initial settings in The General MIDI system

| Channel 1 - 9 & 11 - 16 | | Channel 10 | |
|-------------------------|--------------------|---------------|---------------|
| Program change: | 000 (Piano) | Drum set No.: | 0 |
| Pitch bend: | LSB: 40H, MSB: 00H | | |
| Modulation: | 0 (Off) | | |
| Volume: | 100 | Volume: | 100 |
| Pan: | 64 (Center) | Pan: | 64 (Center) |
| Expression: | 127 (Maximum) | Expression: | 127 (Maximum) |
| Sustain: | 0 (Off) | | |
| Soft: | 0 (Off) | Soft: | 0 (Off) |
| Effect depth: | 127 (Maximum) | Effect depth: | 127 (Maximum) |
| Pitch bend sense: | 02 (2 seminotes) | | |
| Coarse tune: | LSB:40H, MSB:00H | | |
| Fine tune: | LSB:40H, MSB:00H | | |
| RPN: | Null | | |
| Channel pressure: | 0 (Off) | | |

TRANSMITTING MIDI MESSAGES

Operation 1

MIDI messages of note on/off, velocity and modulation are transmitted no matter which MIDI channel is selected.

Note on/off message is transmitted when the corresponding key is pressed/released.


Use the Octave Shift Button, shift the octave range up or down so that GZ-500 is able to send note numbers 17 to 108 but the keyboard has 61 keys only.

Velocity is also transmitted when a key is pressed. GZ-500 sends the velocity in accordance with the strength of the pressed key and the selected touch curve (sensitivity).

Data of modulation is transmitted when the corresponding wheel is operated.

| MIDI Message | Setting | Setting operation |
|--------------|--------------------------------|--|
| Note On/Off | Octave shift | 1. Press the octave shift button. 2. Using the +/- key, select an octave range -2 to 1 you want. |
| Velocity | Velocity curve | 1. Press the control button and repeat it until the display shows "tCH". 2. Using the 10-key, enter a number from 0 to 7. |
| | Touch response OFF | 1. Press the control button and repeat it until the display shows "tCH". 2. Using the 10-key, enter a number 0. 3. Press the - key. The display will show "oFF". |
| | Velocity at touch response OFF | 1. Press the control button and repeat it until the display shows "tCH". 2. Using the 10-key, enter a 3-digit number from 001 to 127. |
| Modulation | Modulation depth | 1. Press the control button and repeat it until the display shows "dEP". 2. Using the 10-key, enter a 3-digit number from 001 to 127. |

Octave shift setting and keyboard range

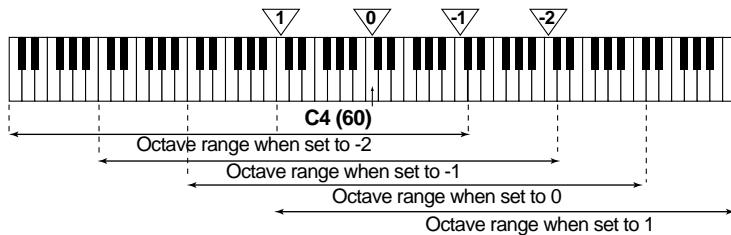

Operation 2

The MIDI messages listed in the following table are transmitted when completing the setting operation. The setting affects only on the currently selected MIDI channel. First select the desire MIDI channel before changing settings.

Selecting a MIDI channel

1. Press the MIDI button.

The display shows the current MIDI channel, eg. "C01" means Channel 1.

2. Using the 10-key, enter a number from 1 to 16.

Changing Program Change / Control Change

| MIDI Message | Setting Operation | | | | | | | | | | | | | | | | | | |
|-----------------------|---|--------|--|-----|---|------------|--|--------------|--|-----------|---|-----------|---|---------------|--|----------------|--|-----------------------|--|
| Program change | <ol style="list-style-type: none"> 1. Referring to the tone number list on the panel, find the 3-digit tone number you desire. 2. Press the tone button. 3. Using the 10-key, enter the 3-digit number. | | | | | | | | | | | | | | | | | | |
| Control change | <table> <tr> <td>Volume</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "voL" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. </td></tr> <tr> <td>Pan</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "PA" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. </td></tr> <tr> <td>Expression</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "EPS" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. </td></tr> <tr> <td>Effect depth</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "EFT" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. </td></tr> <tr> <td>Fine tune</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "tUn" appears on the display. 2. Using the 10-key and the - key, enter a 2-digit number from -50 to 50. </td></tr> <tr> <td>Transpose</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "trn" appears on the display. 2. Using the 10-key and the - key, enter a 2-digit number from -12 to 12. </td></tr> <tr> <td>All notes off</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "Ano" appears on the display. "SUR" and "Ano" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. </td></tr> <tr> <td>All sounds off</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "ASo" appears on the display. "SUR" and "ASo" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. </td></tr> <tr> <td>Reset all controllers</td><td> <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "rAC" appears on the display. "SUR" and "rAC" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. </td></tr> </table> | Volume | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "voL" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. | Pan | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "PA" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. | Expression | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "EPS" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. | Effect depth | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "EFT" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. | Fine tune | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "tUn" appears on the display. 2. Using the 10-key and the - key, enter a 2-digit number from -50 to 50. | Transpose | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "trn" appears on the display. 2. Using the 10-key and the - key, enter a 2-digit number from -12 to 12. | All notes off | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "Ano" appears on the display. "SUR" and "Ano" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. | All sounds off | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "ASo" appears on the display. "SUR" and "ASo" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. | Reset all controllers | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "rAC" appears on the display. "SUR" and "rAC" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. |
| Volume | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "voL" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. | | | | | | | | | | | | | | | | | | |
| Pan | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "PA" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. | | | | | | | | | | | | | | | | | | |
| Expression | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "EPS" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. | | | | | | | | | | | | | | | | | | |
| Effect depth | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "EFT" appears on the display. 2. Using the 10-key, enter a 3-digit number from 000 to 127. | | | | | | | | | | | | | | | | | | |
| Fine tune | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "tUn" appears on the display. 2. Using the 10-key and the - key, enter a 2-digit number from -50 to 50. | | | | | | | | | | | | | | | | | | |
| Transpose | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "trn" appears on the display. 2. Using the 10-key and the - key, enter a 2-digit number from -12 to 12. | | | | | | | | | | | | | | | | | | |
| All notes off | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "Ano" appears on the display. "SUR" and "Ano" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. | | | | | | | | | | | | | | | | | | |
| All sounds off | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "ASo" appears on the display. "SUR" and "ASo" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. | | | | | | | | | | | | | | | | | | |
| Reset all controllers | <ol style="list-style-type: none"> 1. Press the MIDI button and repeat it until "rAC" appears on the display. "SUR" and "rAC" will appear alternately on the display. 2. Press the + key. 3. Press the + key again to transmit the message. | | | | | | | | | | | | | | | | | | |

The initial settings of MIDI control change

| | |
|-------------------|----------------|
| Pitch bend: | +/- 0 (Center) |
| Modulation: | 0 (Off) |
| Expression: | 127 (Maximum) |
| Sustain: | 0 (Off) |
| Sostenuto: | 0 (Off) |
| Soft: | 0 (Off) |
| Channel pressure: | 0 (Off) |
| RPN: | null |

Operation 3

Messages of Digital Effect Type, which are system exclusive messages, are transmitted when completing the following operation.

Transmitting a digital effect type

1. Press the tone button.
2. Press the digital effect button once when the digital effect indicator is off.
Press the digital effect button twice when the digital effect indicator is lighting up.
3. Using the 10-key, enter a number from 0 to 9.
4. The display shows the digital effect type entered, eg. "E_3" means digital effect 3 (Chorus)
5. Wait for about a few seconds until the display show the tone number at Step 1.

System exclusive: Effect change [F0][44][0B][09][xx][F7]

| |
|-------------------------|
| [xx]: [00] - [09], [0F] |
| [00]: Reverb1 (Stage) |
| [01]: Reverb2 (Hall) |
| [02]: Reverb3 (Room) |
| [03]: Chorus |
| [04]: Tremolo |
| [05]: Phase shifter |
| [06]: Organ speaker |
| [07]: Enhance |
| [08]: Flanger |
| [09]: EQ Loudness |
| [0F]: Effect OFF |

RECEIVING MIDI MESSAGES

The MIDI monitor blinks during receiving a MIDI message.

To recognize Note On/Off messages, set a MIDI channel on.

Setting on/off of a MIDI channel

1. Press the MIDI channel button.
2. Press the channel on/off button.
The LED lights when the MIDI channel is on.
The LED goes out when the MIDI channel is off.

Active sensing

This message checks if the MIDI cable is disconnected.

Once GZ-500 has received this message, it always counts time of an interval to a next MIDI message.

In case when GZ-5 receives no MIDI message for 420 msec of time, it will stop sound output and reset all controllers, then it will cancel the function of active sensing.


Transmittable Messages

| | |
|-----------------|--|
| Note No.: | 12 ~ 72 (Oct. shift -2), 24 ~ 84 (Oct. shift -1) 36 ~ 96 (Oct. shift 0), 48 ~ 108 (Oct. shift 1) |
| Velocity: | 1 ~ 127 |
| Note Off: | velocity 0 |
| Program Change: | 0 ~ 127 (Channels 1 - 9 & 11 - 16), 0 ~ 7 (Channel 10) |
| Pitch Bend: | 00H / 00H ~ 7FH / 7FH |
| Control Change: | Modulation 0 ~ 127 Volume 0 ~ 127 Pan 0 ~ 127 Expression 0 ~ 127 Sustain 0: Off, 127: On Sostenuto 0: Off, 127: On Soft 0: Off, 127: On Effect Depth 0 ~ 127 Pitch Bend Sense 00H / --H ~ 0CH / --H (12 seminotes) Coarse Tune 34H / --H ~ 40H / --H ~ 4CH / --H (-12 seminotes) ~ (center) ~ (+12 seminotes) Fine Tune 20H / 00H ~ 40H / 00H ~ 60H / 00H (-50 cents) ~ (center) ~ (+50 cents) |
| | All Notes Off |
| | All Sounds Off |
| | Reset All Controllers |
| Exclusive: | Effect Change General MIDI On |

Receivable Messages

| | |
|-------------------|--|
| Note No.: | 0 ~ 127 |
| Velocity: | 1 ~ 127 |
| Note Off: | velocity 0 |
| Program Change: | 0 ~ 127(Channels 1 - 9 & 11 - 16), 0 ~ 7 (Channel 10) |
| Pitch Bend: | 00H / 00H ~ 7FH / 7FH |
| Control Change: | Modulation 0 (0 cent) ~ 127 (+/-50 cents) Volume 0 ~ 127 Pan 0 (Left) ~ 64 (Center) ~ 127 (Right) Expression 0 ~ 127 Sustain 0 ~ 63: Off, 64 ~ 127: On Sostenuto 0 ~ 63: Off, 64 ~ 127: On Soft 0 ~ 63: Off, 64 ~ 127: On Effect Depth 0 ~ 127 Pitch Bend Sense 00H / --H ~ 0CH / --H (12 seminotes) Coarse Tune 34H / 00H ~ 40H / 00H ~ 4CH / 00H (-12 seminotes) ~ (center) ~ (+12 seminotes) Fine Tune 20H / 00H ~ 40H / 00H ~ 60H / 00H (-50 cents) ~ (Center) ~ (+50 cents) |
| | RPN Null |
| | All Notes Off |
| | All Sounds Off |
| | Reset All Controllers |
| Channel Pressure: | 0 (0 cent) ~ 127 (+/-50 cents) |
| Exclusive: | Effect Change General MIDI On |
| | Active Sensing |

BLOCK DIAGRAM

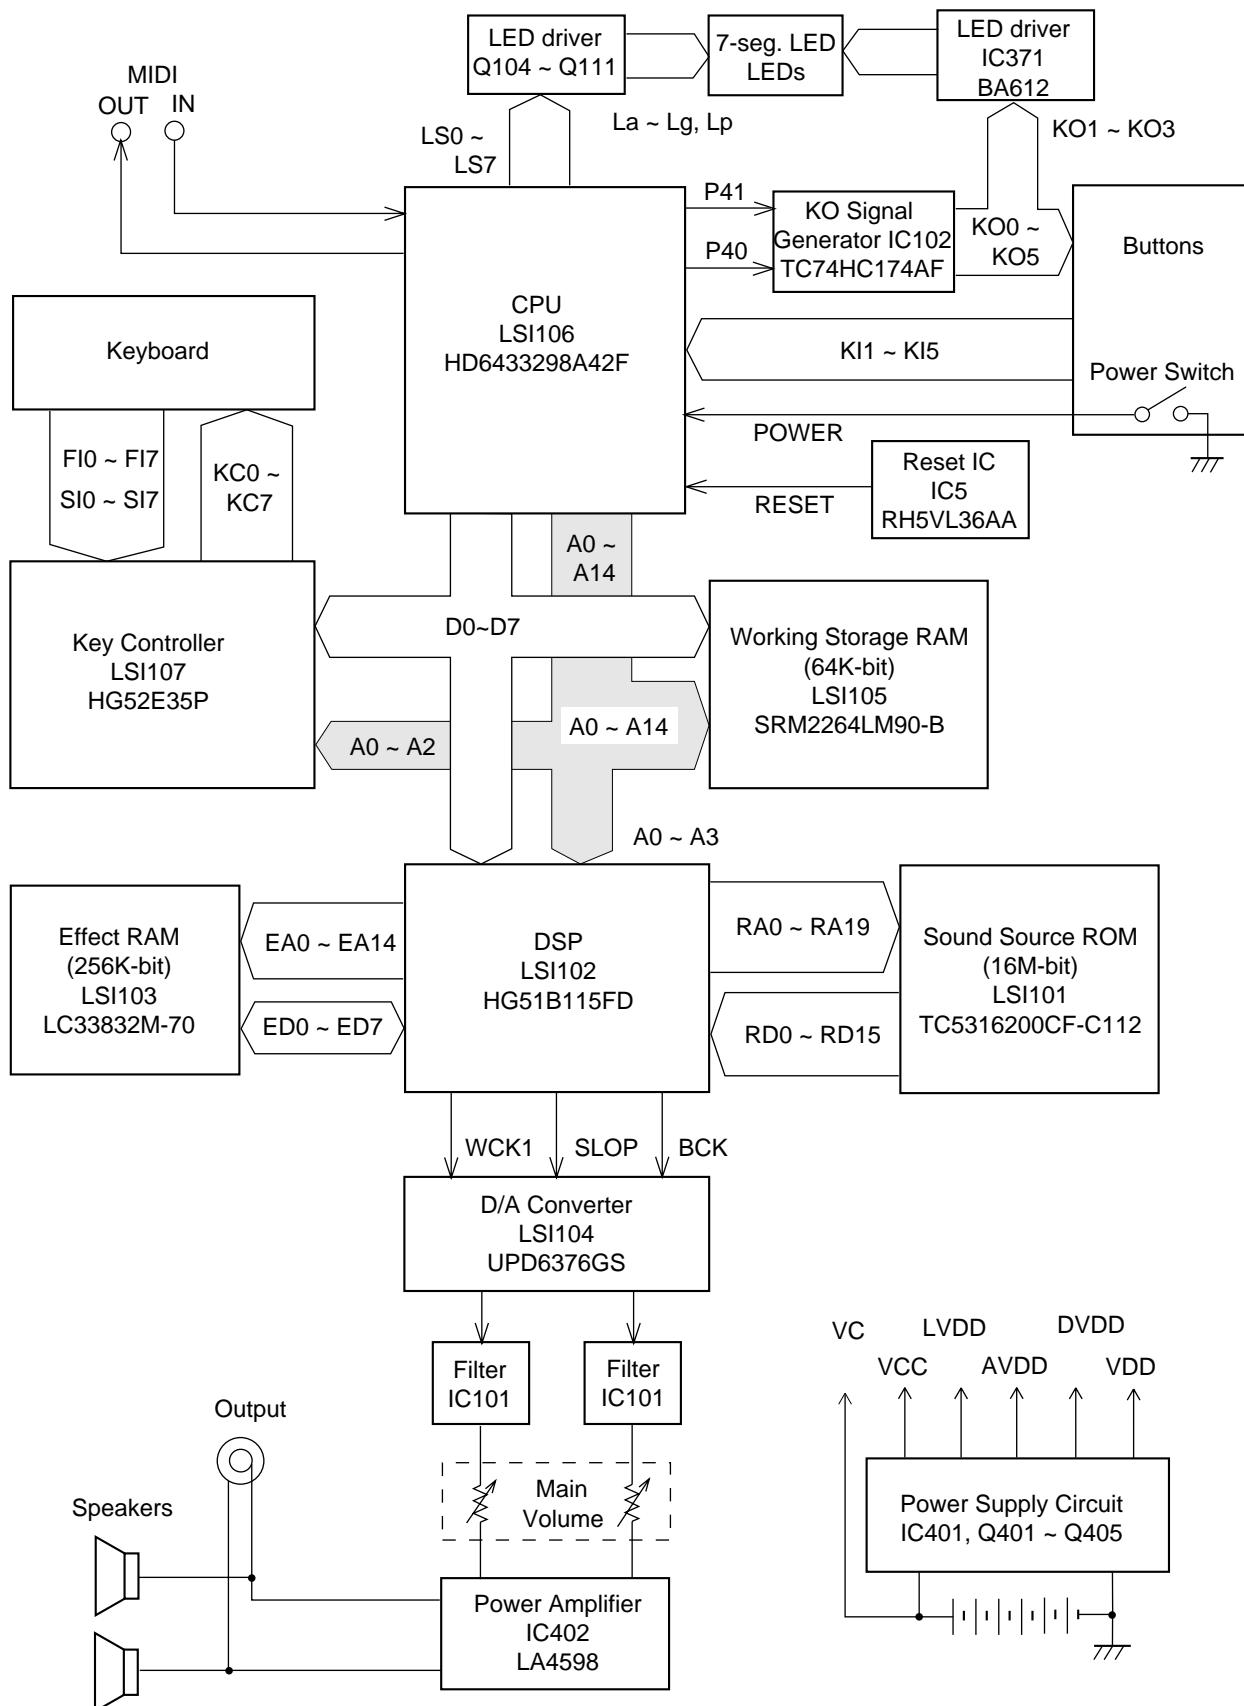


CIRCUIT DESCRIPTION


KEY MATRIX

| | KC0 | KC1 | KC2 | KC3 | KC4 | KC5 | KC6 | KC7 |
|------------|---------|---------|---------|---------|---------|---------|---------|---------|
| FI0 | C2 (1) | C#2 (1) | D2 (1) | D#2 (1) | E2 (1) | F2 (1) | F#2 (1) | G2 (1) |
| SI0 | C2 (2) | C#2 (2) | D2 (2) | D#2 (2) | E2 (2) | F2 (2) | F#2 (2) | G2 (2) |
| FI1 | G#2 (1) | A2 (1) | A#2 (1) | B2 (1) | C3 (1) | C#3 (1) | D3 (1) | D#3 (1) |
| SI1 | G#2 (2) | A2 (2) | A#2 (2) | B2 (2) | C3 (2) | C#3 (2) | D3 (2) | D#3 (2) |
| FI2 | E3 (1) | F3 (1) | F#3 (1) | G3 (1) | G#3 (1) | A3 (1) | A#3 (1) | B3 (1) |
| SI2 | E3 (2) | F3 (2) | F#3 (2) | G3 (2) | G#3 (2) | A3 (2) | A#3 (2) | B3 (2) |
| FI3 | C4 (1) | C#4 (1) | D4 (1) | D#4 (1) | E4 (1) | F4 (1) | F#4 (1) | G4 (1) |
| SI3 | C4 (2) | C#4 (2) | D4 (2) | D#4 (2) | E4 (2) | F4 (2) | F#4 (2) | G4 (2) |
| FI4 | G#4 (1) | A4 (1) | A#4 (1) | B4 (1) | C5 (1) | C#5 (1) | D5 (1) | D#5 (1) |
| SI4 | G#4 (2) | A4 (2) | A#4 (2) | B4 (2) | C5 (2) | C#5 (2) | D5 (2) | D#5 (2) |
| FI5 | E5 (1) | F5 (1) | F#5 (1) | G5 (1) | G#5 (1) | A5 (1) | A#5 (1) | B5 (1) |
| SI5 | E5 (2) | F5 (2) | F#5 (2) | G5 (2) | G#5 (2) | A5 (2) | A#5 (2) | B5 (2) |
| FI6 | C6 (1) | C#6 (1) | D6 (1) | D#6 (1) | E6 (1) | F6 (1) | F#6 (1) | G6 (1) |
| SI6 | C6 (2) | C#6 (2) | D6 (2) | D#6 (2) | E6 (2) | F6 (2) | F#6 (2) | G6 (2) |
| FI7 | G#6 (1) | A6 (1) | A#6 (1) | B6 (1) | C7 (1) | | | |
| SI7 | G#6 (2) | A6 (2) | A#6 (2) | B6 (2) | C7 (2) | | | |

Note: Each key has two contacts, the first contact (1) and second contact (2).

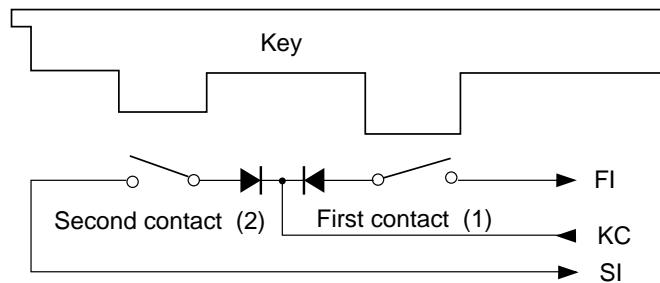

NOMENCLATURE OF KEYS

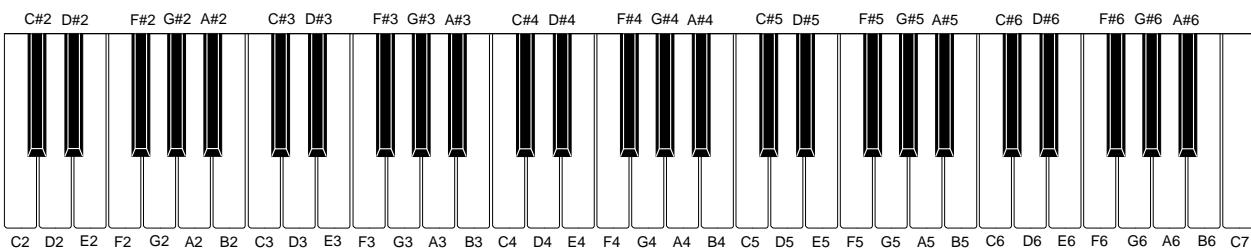

BUTTON MATRIX

| | KI1 | KI2 | KI3 | KI4 | KI5 |
|------------|---------|--------------|----------------|--------------|------------|
| KO0 | 3 | 0 | 2 | 1 | |
| KO1 | Control | Demo | Effect | MIDI | |
| KO2 | + | 9 | 7 | 8 | |
| KO3 | 6 | - | 5 | 4 | |
| KO4 | Tone | MIDI Channel | Channel On/Off | Octave Shift | Modulation |


POWER SUPPLY CIRCUIT

The power supply circuit generates six voltages as shown in the following table. VDD voltage is always generated. The others are controlled by APO signal output from the CPU.

| Name | Voltage | For operation of |
|------|---------|---|
| VDD | +5 V | CPU, Reset IC, Working storage RAM |
| DVDD | +5 V | DSP, Key touch LSI, Sound source ROM, Effect RAM, KO signal generator |
| AVDD | +5V | DAC, Filter |
| LVDD | +4.5 V | LED Driver |
| VCC | +9 V | Power amplifier, Pilot lamp |
| VC | +9 V | Power amplifier |

RESET CIRCUIT

When batteries are set or an AC adapter is connected, the reset IC provides a low pulse to the CPU. The CPU then initializes its internal circuit and clears the working storage RAM. When the power switch is pressed, the CPU receives a low pulse of POWER signal. The CPU provides APO signal to the power supply circuit and raises RESET signal to +5V to reset the DSP, the key controller and the KO signal generator.

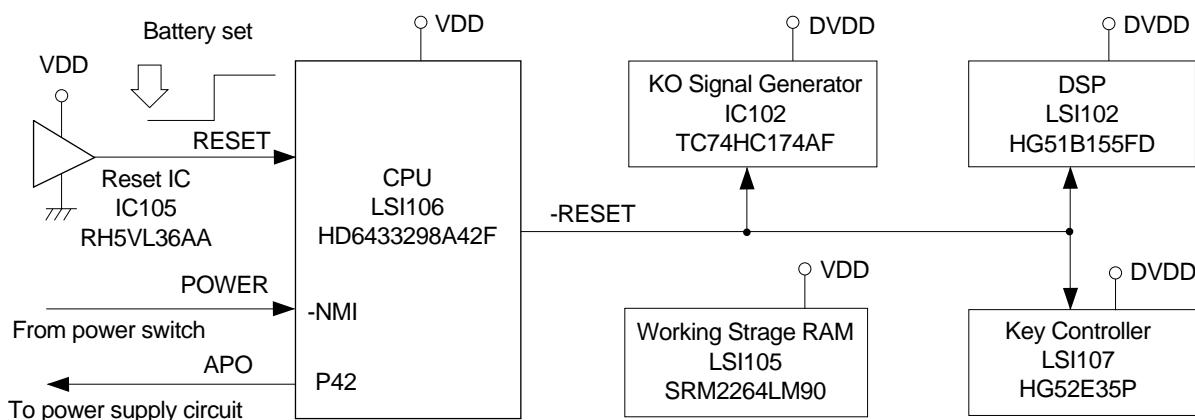

CPU (LSI106: HD6433298A42F)

The 16-bit CPU contains a 32k-bit ROM, a 1k-bit RAM, seven 8-bit I/O ports, an A/D convertor and MIDI interfaces. The CPU accesses to the working storage RAM, the DSP and the key touch LSI. The CPU interprets MIDI message using the working storage RAM. The CPU also controls buttons and LEDs. The following table shows the pin functions of LSI106.

| Pin No. | Terminal | In/Out | Function |
|---------|-------------|--------|--|
| 1 | P50/TXD | Out | MIDI signal output |
| 2 | P51/RXD | In | MIDI signal input |
| 3 | P52/SCK | Out | Reset signal output |
| 4 | -RESET | In | Reset signal input |
| 5 | -NMI | In | Power ON trigger signal input |
| 6 | VCC | In | +5V source |
| 7 | -STBY | In | Standby signal input. Connected to +5V. |
| 8 | VSS | In | Ground (0V) source |
| 9, 10 | XTAL, EXTAL | In | 20MHz clock input |
| 11, 12 | MD1, MD0 | In | Mode selection input |
| 13 | AVSS | In | Ground (0V) source |
| 14 | P70 | In | Analog input terminal for the pitch bend wheel |
| 15 | P71 | In | APO cancellation signal input |
| 16 | P72 | — | Not used. Connected to +5 V source. |
| 17 ~ 21 | P73 ~ P77 | Out | LED drive signal output |
| 22 | AVCC | In | +5V source |
| 23 ~ 30 | P60 ~ P67 | Out | LED drive signal output |
| 31 | VCC | In | +5V source |
| 32 | P27 | — | Not used |
| 33 ~ 48 | A0 ~ A14 | Out | Address bus |
| 40 | VSS | In | Ground (0V) source |
| 49 ~ 56 | D0 ~ D7 | In/Out | Data bus |
| 57 | P40 | Out | Clock for KO signal generator |
| 58 | P41 | Out | KO signal data |
| 59 | P42 | Out | APO signal output |
| 60 | P43 | Out | Read enable signal output |
| 61 | P44 | In | Write enable signal output |
| 62 | P45 | — | Not used |
| 63 | P46 | Out | 10 MHz clock output |
| 64 | P47 | — | Not used. Connected to +5 V source. |

DIGITAL SIGNAL PROCESSOR (LSI102: HG51B155FD)


Upon receipt of note numbers and their velocities, the DSP reads sound and velocity data from the sound source ROM in accordance with the selected tone; the DSP can read rhythm data simultaneously when a rhythm pattern is selected. Then it provides 16-bit serial signal containing data of the melody, chord, bass, and percussion to the DAC. When an effect selected, the DSP adds the effect to the sound data using a 256k-bit RAM.

The following table shows the pin functions of LSI102.

| Pin No. | Terminal | In/Out | Function |
|--|-----------------|---------------|---|
| 1 ~ 8 | CD0 ~ CD7 | In/Out | Data bus |
| 9, 10 | CE1, TRSB | — | Not used |
| 11 | GND7 | In | Ground (0V) source |
| 12 | CK16 | Out | Terminal for 24.576 MHz clock check point |
| 13 | VCC1 | In | +5V source |
| 14 | CK0 | In | Clock input. Connected to terminal CK16. |
| 15 | TCKB | — | Not used |
| 16 | VCC1 | In | +5V source |
| 17 | GND1 | In | Ground (0V) source |
| 18, 19 | XT0, XT1 | In/Out | 24.576 MHz clock input/output |
| 20 | SGL | In | System control terminal. Single chip system: Open |
| 21 | CCSB | In | Chip select signal input |
| 22 ~ 25 | CA0 ~ CA3 | In | Address bus |
| 26 | CE0 | In | Not used. Connected to ground. |
| 27 | CWRB | In | Write enable signal |
| 28 | CRDB | In | Read enable signal |
| 29 ~ 32 | — | — | Not used |
| 33 | RESB | In | Reset signal input |
| 34 | TESB | In | Not used. Connected to +5V. |
| 35 ~ 39 | — | — | Not used |
| 40 ~ 49 52 ~ 57 | RD0 ~ RD15 | In | Data bus for the sound source ROM |
| 50 | VCC2 | In | +5V source |
| 51 | GND2 | In | Ground (0V) source |
| 58 | RA23 | Out | Not used |
| 59 | RA22 | Out | Chip select signal for the sound source ROM |
| 60, 61 | RA20, RA21 | Out | Not used |
| 62 ~ 73 75 ~ 82 | RA0 ~ RA19 | Out | Address bus for the sound source ROM |
| 74 | GND5 | In | Ground (0V) source |
| 83 | WOK2 | Out | Not used |
| 84 | VCC3 | In | +5V source |
| 85 | GND3 | In | Ground (0V) source |
| 86 | WOK1 | Out | Word clock for the DAC |
| 87 | SOLM | Out | Not used |
| 88 | SOLP | Out | Serial sound data output |
| 89 | BOK | Out | Bit clock output |
| 90 ~ 92 | — | — | Not used |
| 93 | VCC5 | In | +5V source |
| 94, 95 97 ~ 105 107, 109 110, 112 | EA0 ~ EA12 | Out | Address bus for the effect RAM |
| 96 | EWB | Out | Write enable signal for the effect RAM |

| Pin No. | Terminal | In/Out | Function |
|-----------|-------------|--------|--|
| 106 | EOEB | Out | Read enable signal output for the effect RAM |
| 108 | VCC7 | In | +5V source |
| 111 | ECEB | Out | Chip select signal output for the effect RAM |
| 113 ~ 117 | ED11 ~ ED15 | — | Not used |
| 118 | VCC4 | In | +5V source |
| 119 | GND4 | In | Ground (0V) source |
| 120 ~ 122 | ED8 ~ ED10 | — | Not used |
| 123 ~ 130 | ED0 ~ ED7 | In/Out | Data bus for the effect RAM |
| 131 | GND5 | In | Ground (0V) source |
| 132 ~ 134 | — | — | Not used. Connected to ground. |
| 135, 136 | — | — | Not used |

Block diagram of DSP and DAC circuit

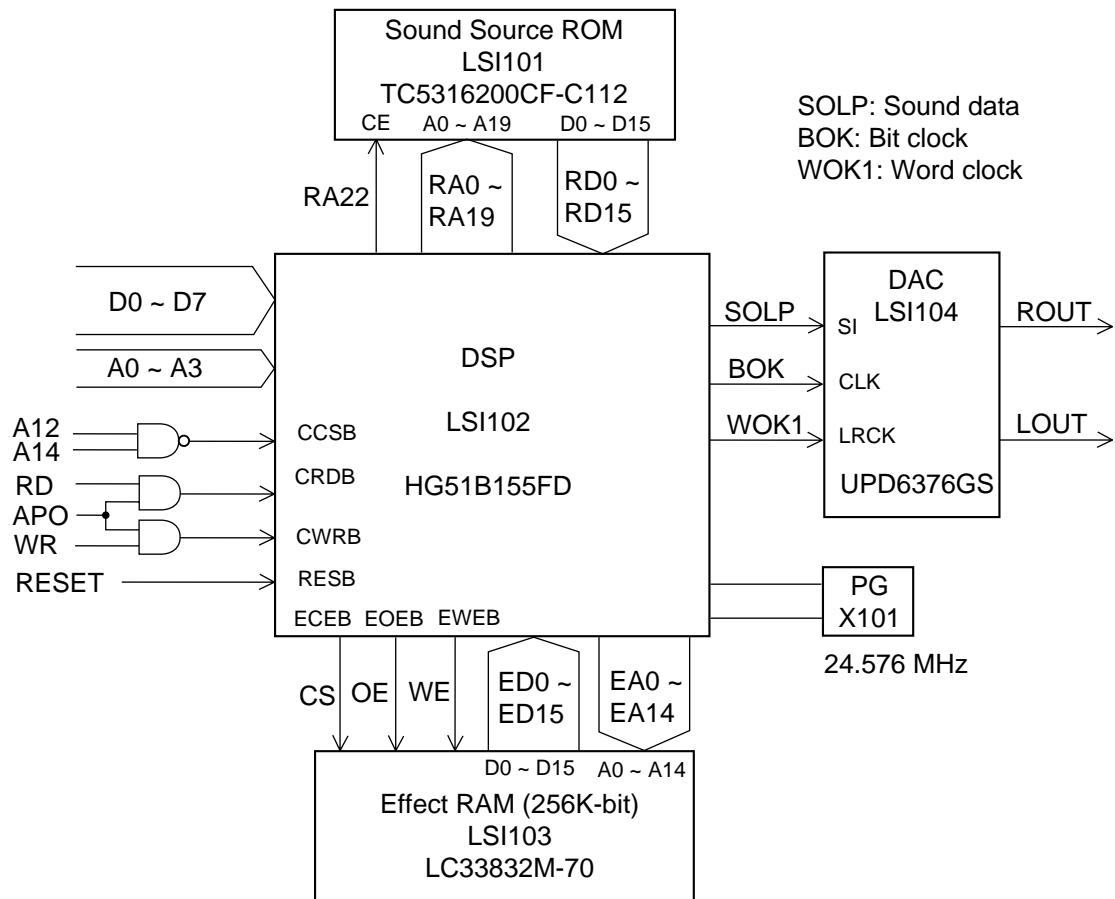

DAC (LSI104: UPD6376GS)


The DAC receives 16-bit serial data output from the DSP. The data contains digital sound data of the melody, chord, bass, and percussion for the right and left channels. The DAC converts the data into analog waveforms by each channel and output them separately.

The following table shows the pin functions of LSI1.

| Pin No. | Terminal | In/Out | Function |
|---------|----------|--------|---|
| 1 | SEL | In | Mode selection terminal. Connected to ground. |
| 2 | D.GND | In | Ground (0V) source for the internal digital circuit |
| 3 | NC | — | Not used. |
| 4 | DVDD | In | +5V source for the internal digital circuit |
| 5 | A.GND | In | Ground (0V) source for the right channel |
| 6 | R.OUT | Out | Right channel sound waveform output |
| 7, 8 | A.VDD | In | +5V source for the internal analog circuit |
| 9 | R.REF | In | Right channel reference voltage terminal |
| 10 | L.REF | In | Left channel reference voltage terminal |
| 11 | L.OUT | Out | Left channel sound waveform output |
| 12 | A.GND | In | Ground (0V) source for the left channel |
| 13 | LRCK | In | Word clock input |
| 14 | LRSEL | In | Not used. Connected to ground. |
| 15 | SI | In | Sound data input |
| 16 | CLK | In | Bit clock input |

KEY CONTROLLER (LSI107: HG52E35P)

The key controller generates key scan signals and provides them to the keyboard. By counting the time between first-key input signal FI and second-key SI from the keyboard, the key controller detects key velocity. The note number and its velocity data are read at regular intervals by the CPU.

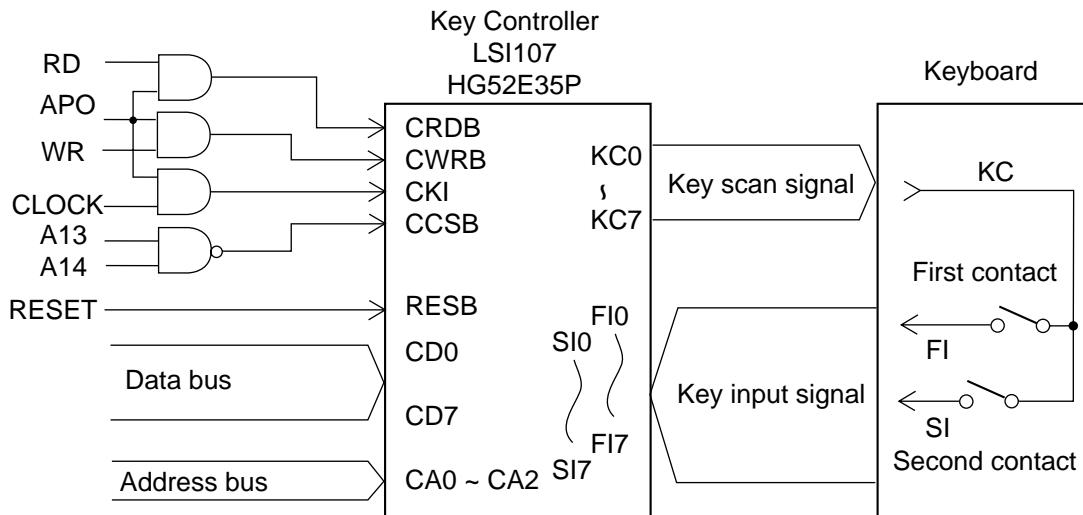


The following table shows the pin functions of LSI107.

| Pin No. | Terminal | In/Out | Function |
|--------------------------------------|---------------------------|--------|--------------------------------|
| 1 | REQB | Out | Not used |
| 2, 3, 60 ~ 63 | FI8 ~ FI10, SI8 ~ SI10 | In | Not used. Connected to +5V. |
| 4 | VCC | In | +5V source |
| 5 | CRDB | In | Read enable signal input |
| 6 | CWRB | In | Write enable signal input |
| 7 | CCBB | In | Chip select signal input |
| 8, 9, 11 | T, STBY, W | In | Not used. Connected to +5V. |
| 10 | RESB | In | Reset signal input |
| 12 | CKI | In | 10 MHz clock input |
| 13, 14 | TMD, TST | In | Not used. Connected to ground. |
| 15 | CKO | Out | Not used. |
| 16 | GND | In | Ground (0V) source |
| 17 | XIN | In | Not used. Connected to ground. |
| 18 | XOUT | Out | Not used. |
| 19 | TRES | In | Not used. Connected to ground. |
| 20 ~ 23, 25 ~ 28 | CD0 ~ CD7 | In/Out | Data bus |
| 24 | GND | In | Ground (0V) source |
| 29 ~ 31 | CR0 ~ CR2 | In | Address bus |
| 32 | VCC | In | +5V source |
| 33 ~ 39, 41 ~ 43 53 ~ 55, 57 ~ 59 | FI0 ~ FI7, SI0 ~ SI7 | In | Key input signal input |
| 40 | VCC | In | +5V source |
| 44 ~ 47, 49 ~ 52 | KC0 ~ KC7 | Out | Key scan signal |
| 48, 56 | GND | In | Ground (0V) source |
| 64 | VCC | In | +5V source |

FILTER BLOCK

Since the sound signals from the DAC are stepped waveforms, the filter block is added to smooth the waveforms.

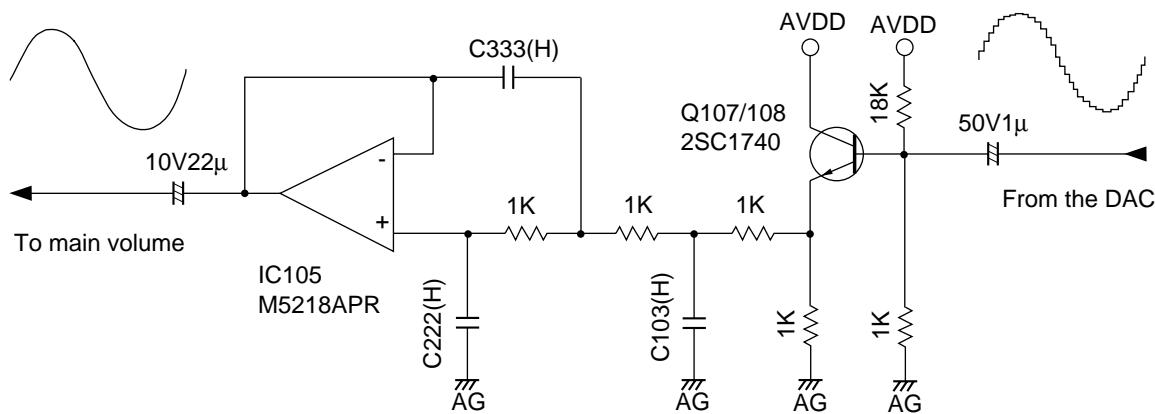


POWER AMPLIFIER (IC402: LA4598)

The power amplifier is a two-channel amplifier with standby switch.



The following table shows the pin function of IC402.

| Pin No. | Terminal | In/Out | Function |
|---------|-----------|--------|--|
| 1 | Power GND | In | Ground (0V) source |
| 2 | Ch1 B.S. | — | Terminal for a bootstrap capacitor |
| 3 | Ch1 OUT | Out | Channel 1 output |
| 4 | VCC | In | +9V source |
| 5 | Ch1 N.F. | In | Negative feedback input |
| 6 | Ch1 IN | In | Channel 1 input |
| 7 | D.C. | — | Terminal for a decoupling capacitor |
| 8 | Pre GND | In | Ground (0V) source |
| 9 | Stand by | In | Power control signal input. 0 V: Off, +9 V: On |
| 10 | Ch2 IN | In | Channel 2 input |
| 11 | Ch2 N.F. | In | Negative feedback input |
| 12 | Ch2 OUT | Out | Channel 2 output |
| 13 | Ch2 B.S. | — | Terminal for a bootstrap capacitor |
| 14 | NC | — | Not used |

LED DRIVING

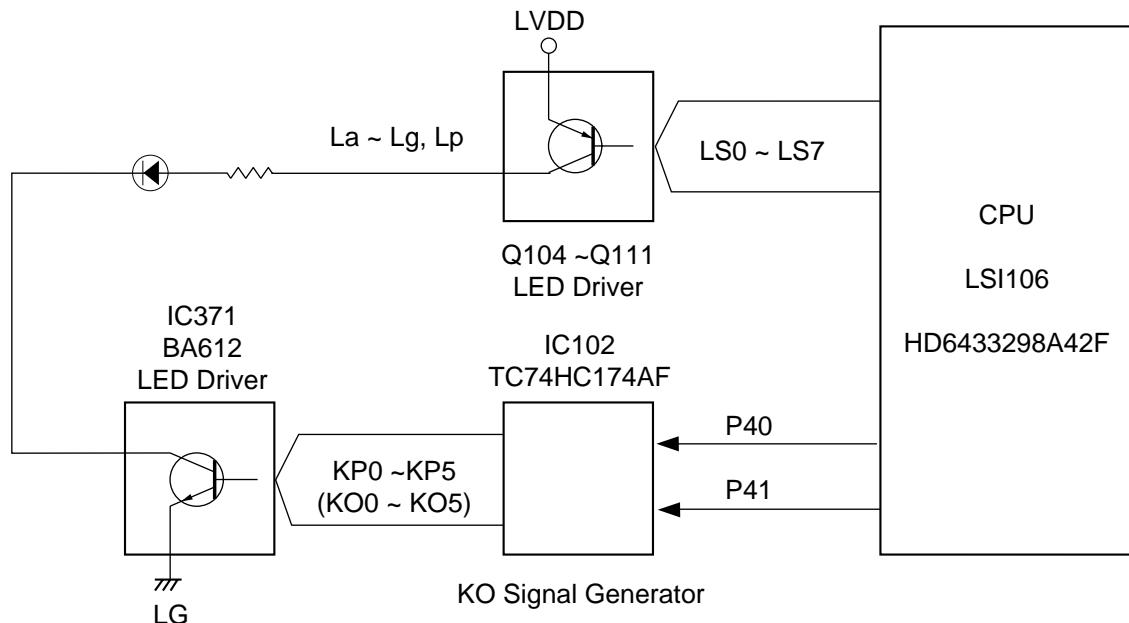


MAJOR WAVEFORMS

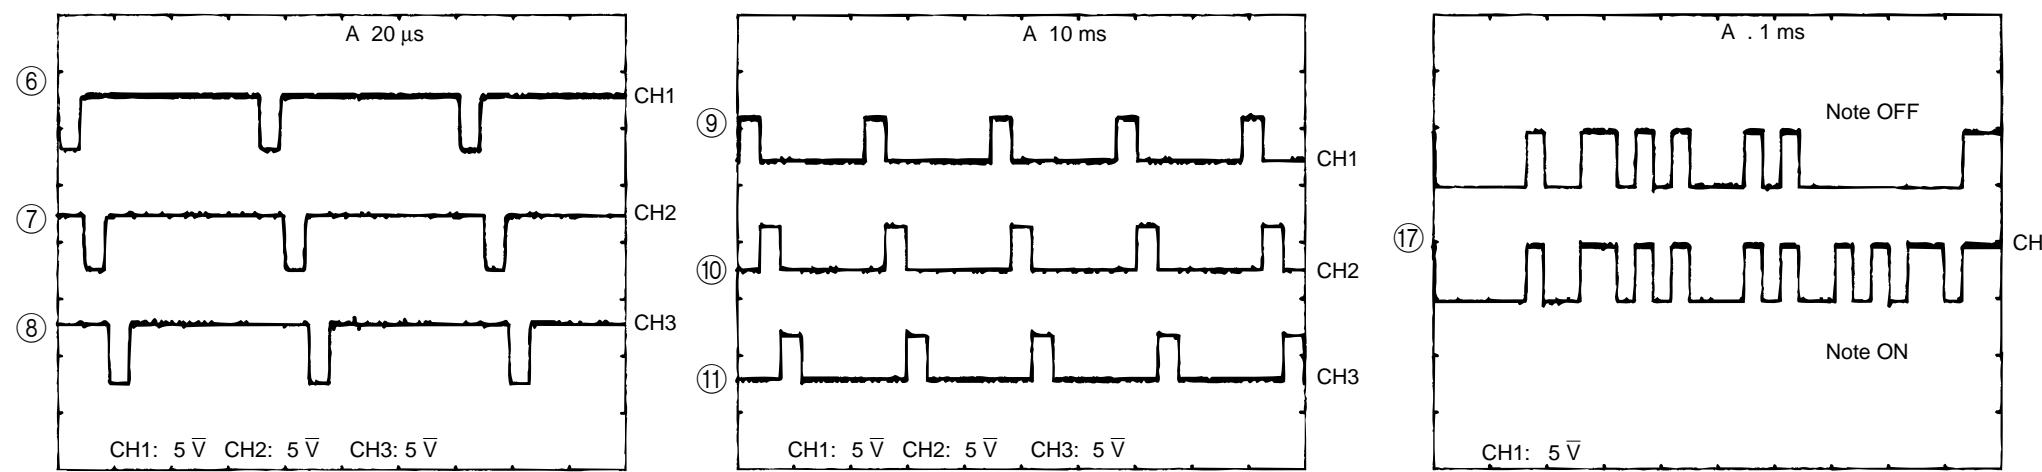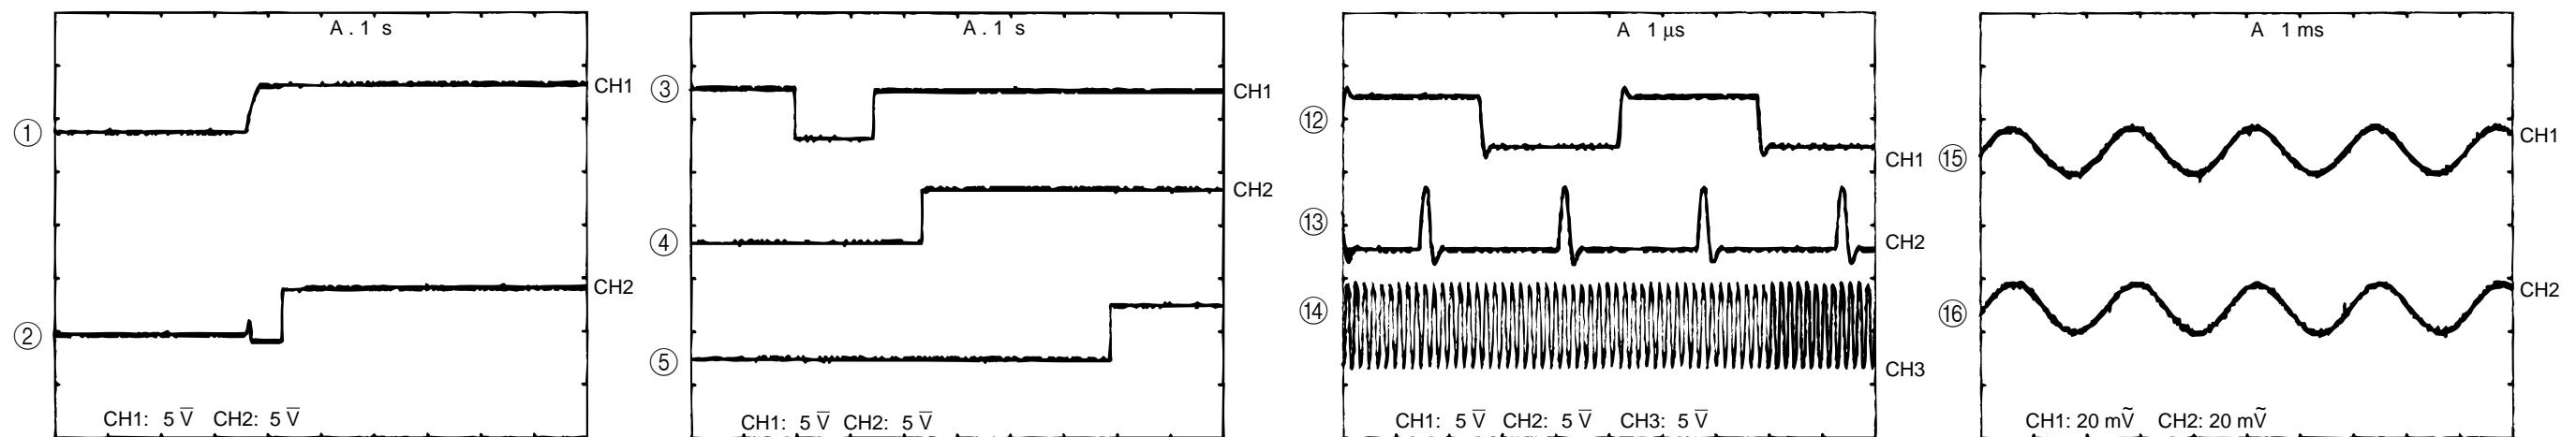


SCHEMATIC DIAGRAMS


AMP./VOLUME PCBs JCM715-MA2M/MA3M

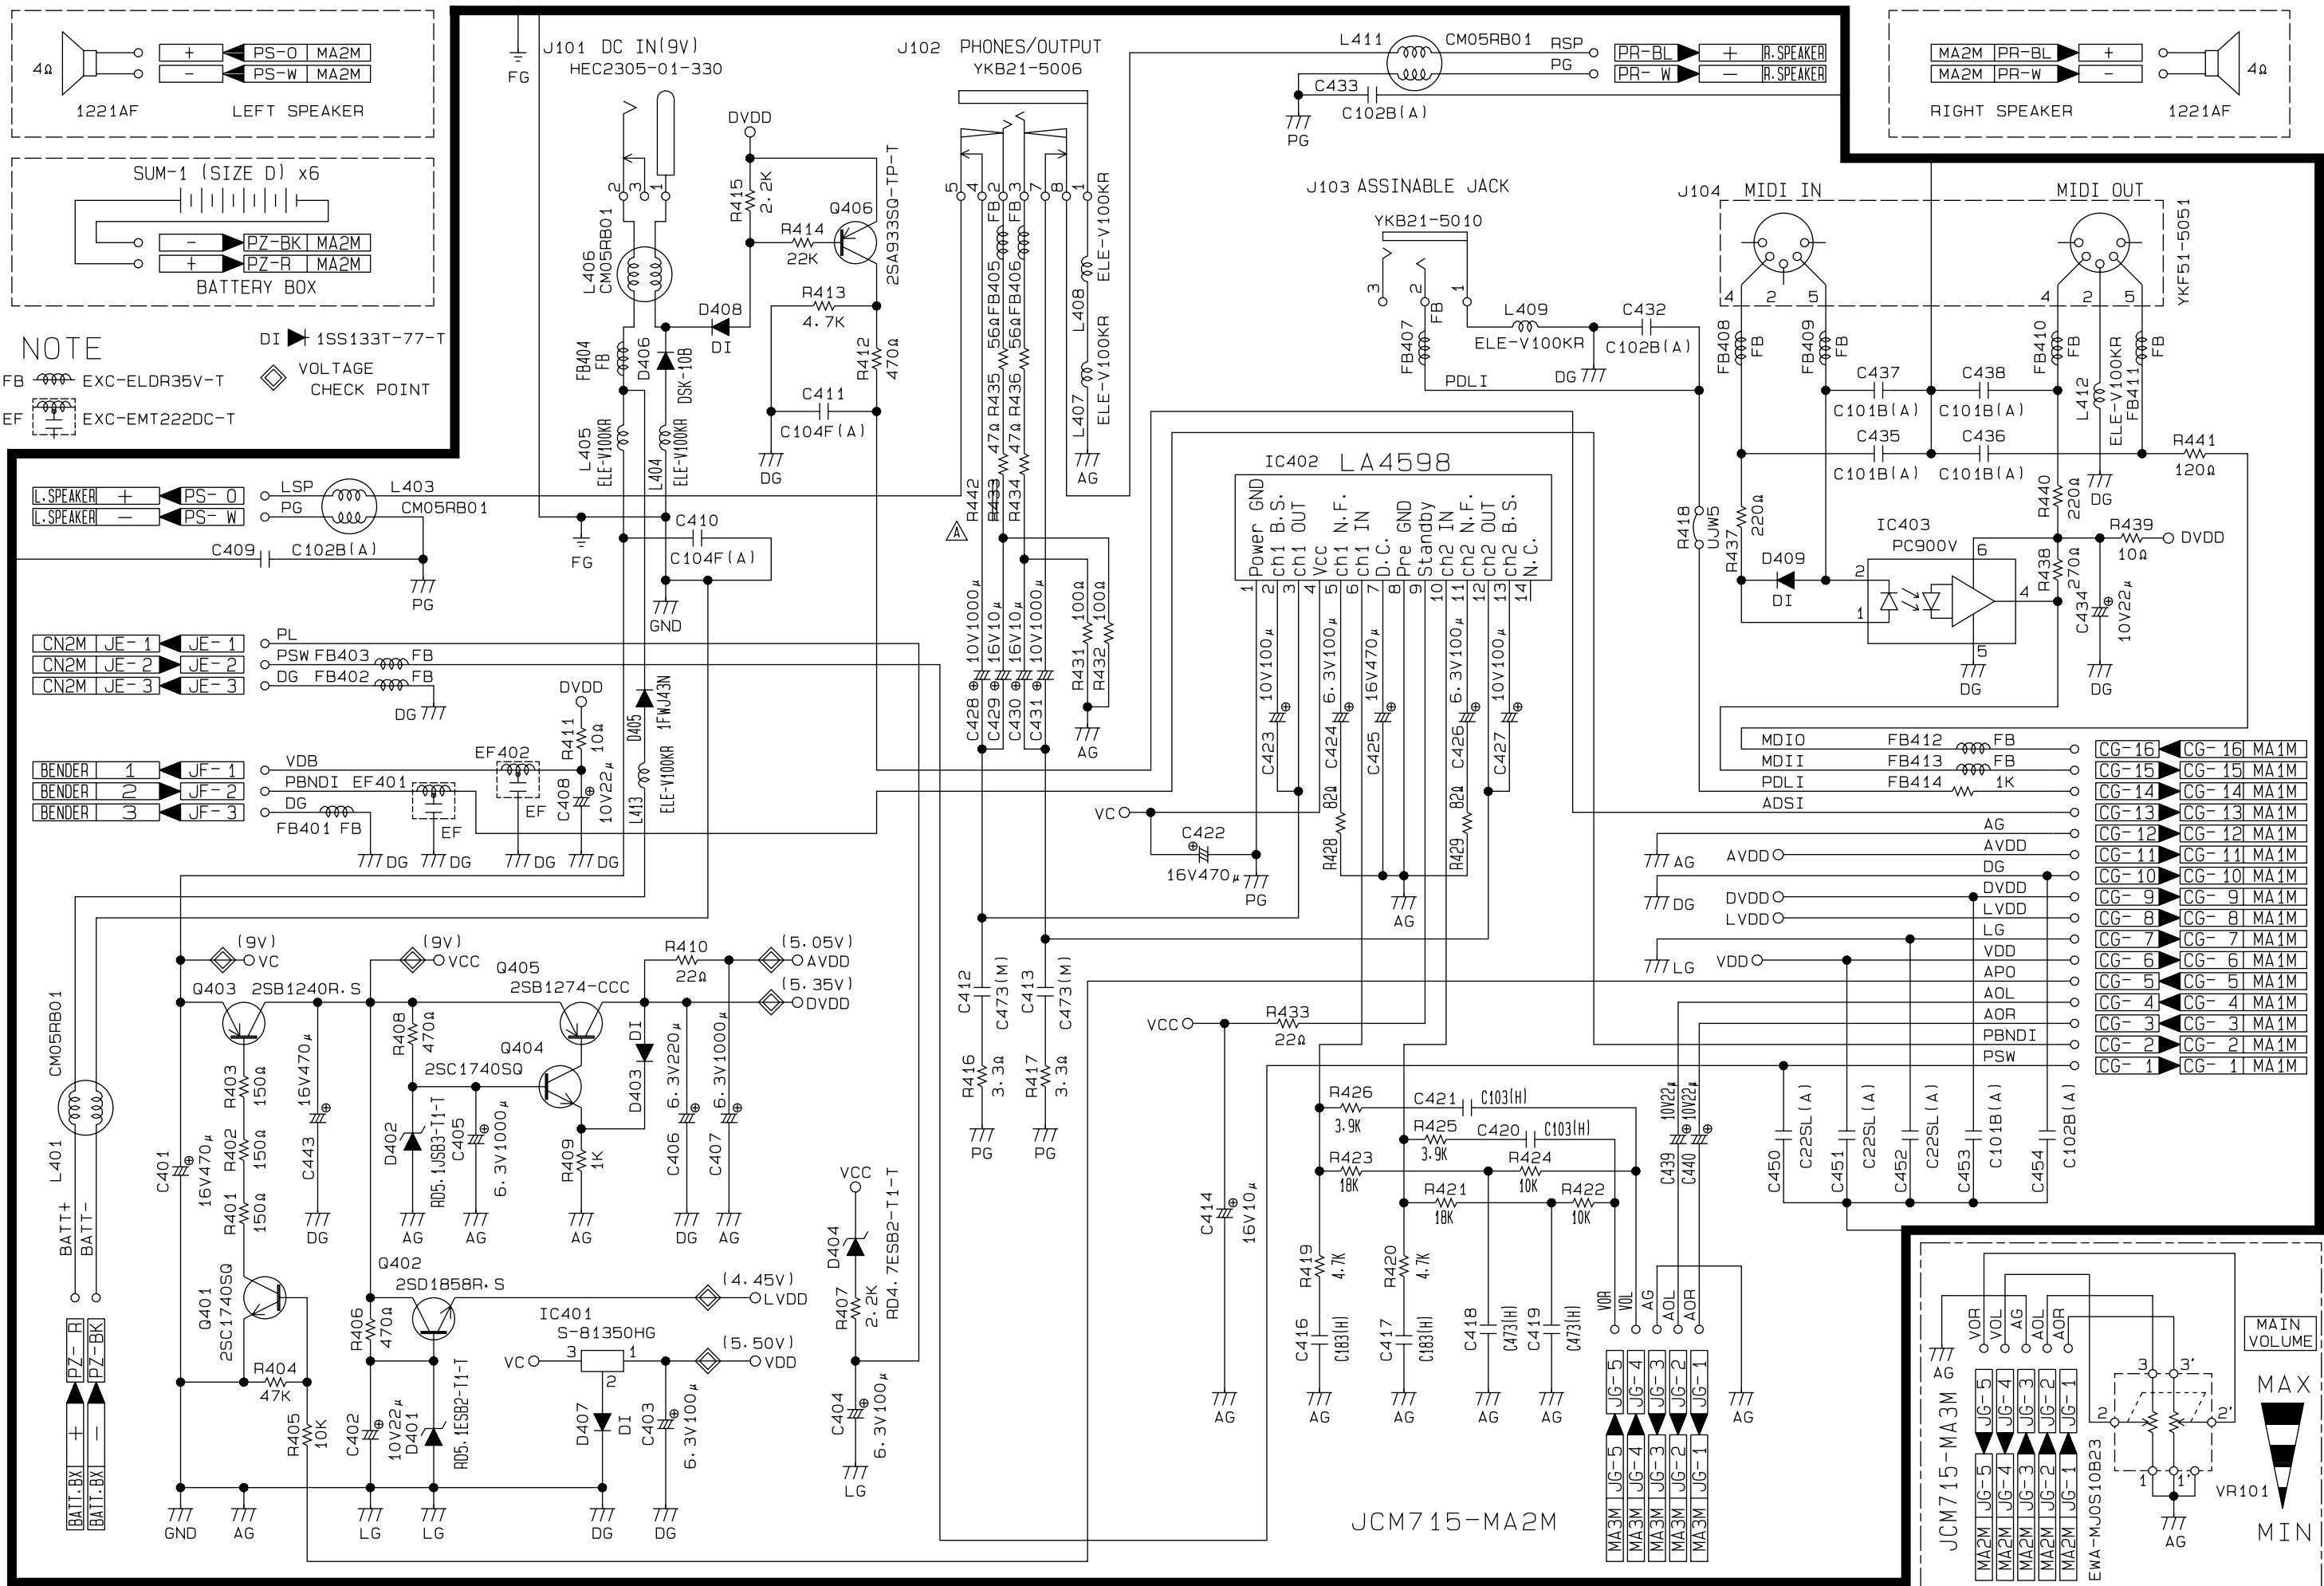

MAIN PCB JCM715-MA1M

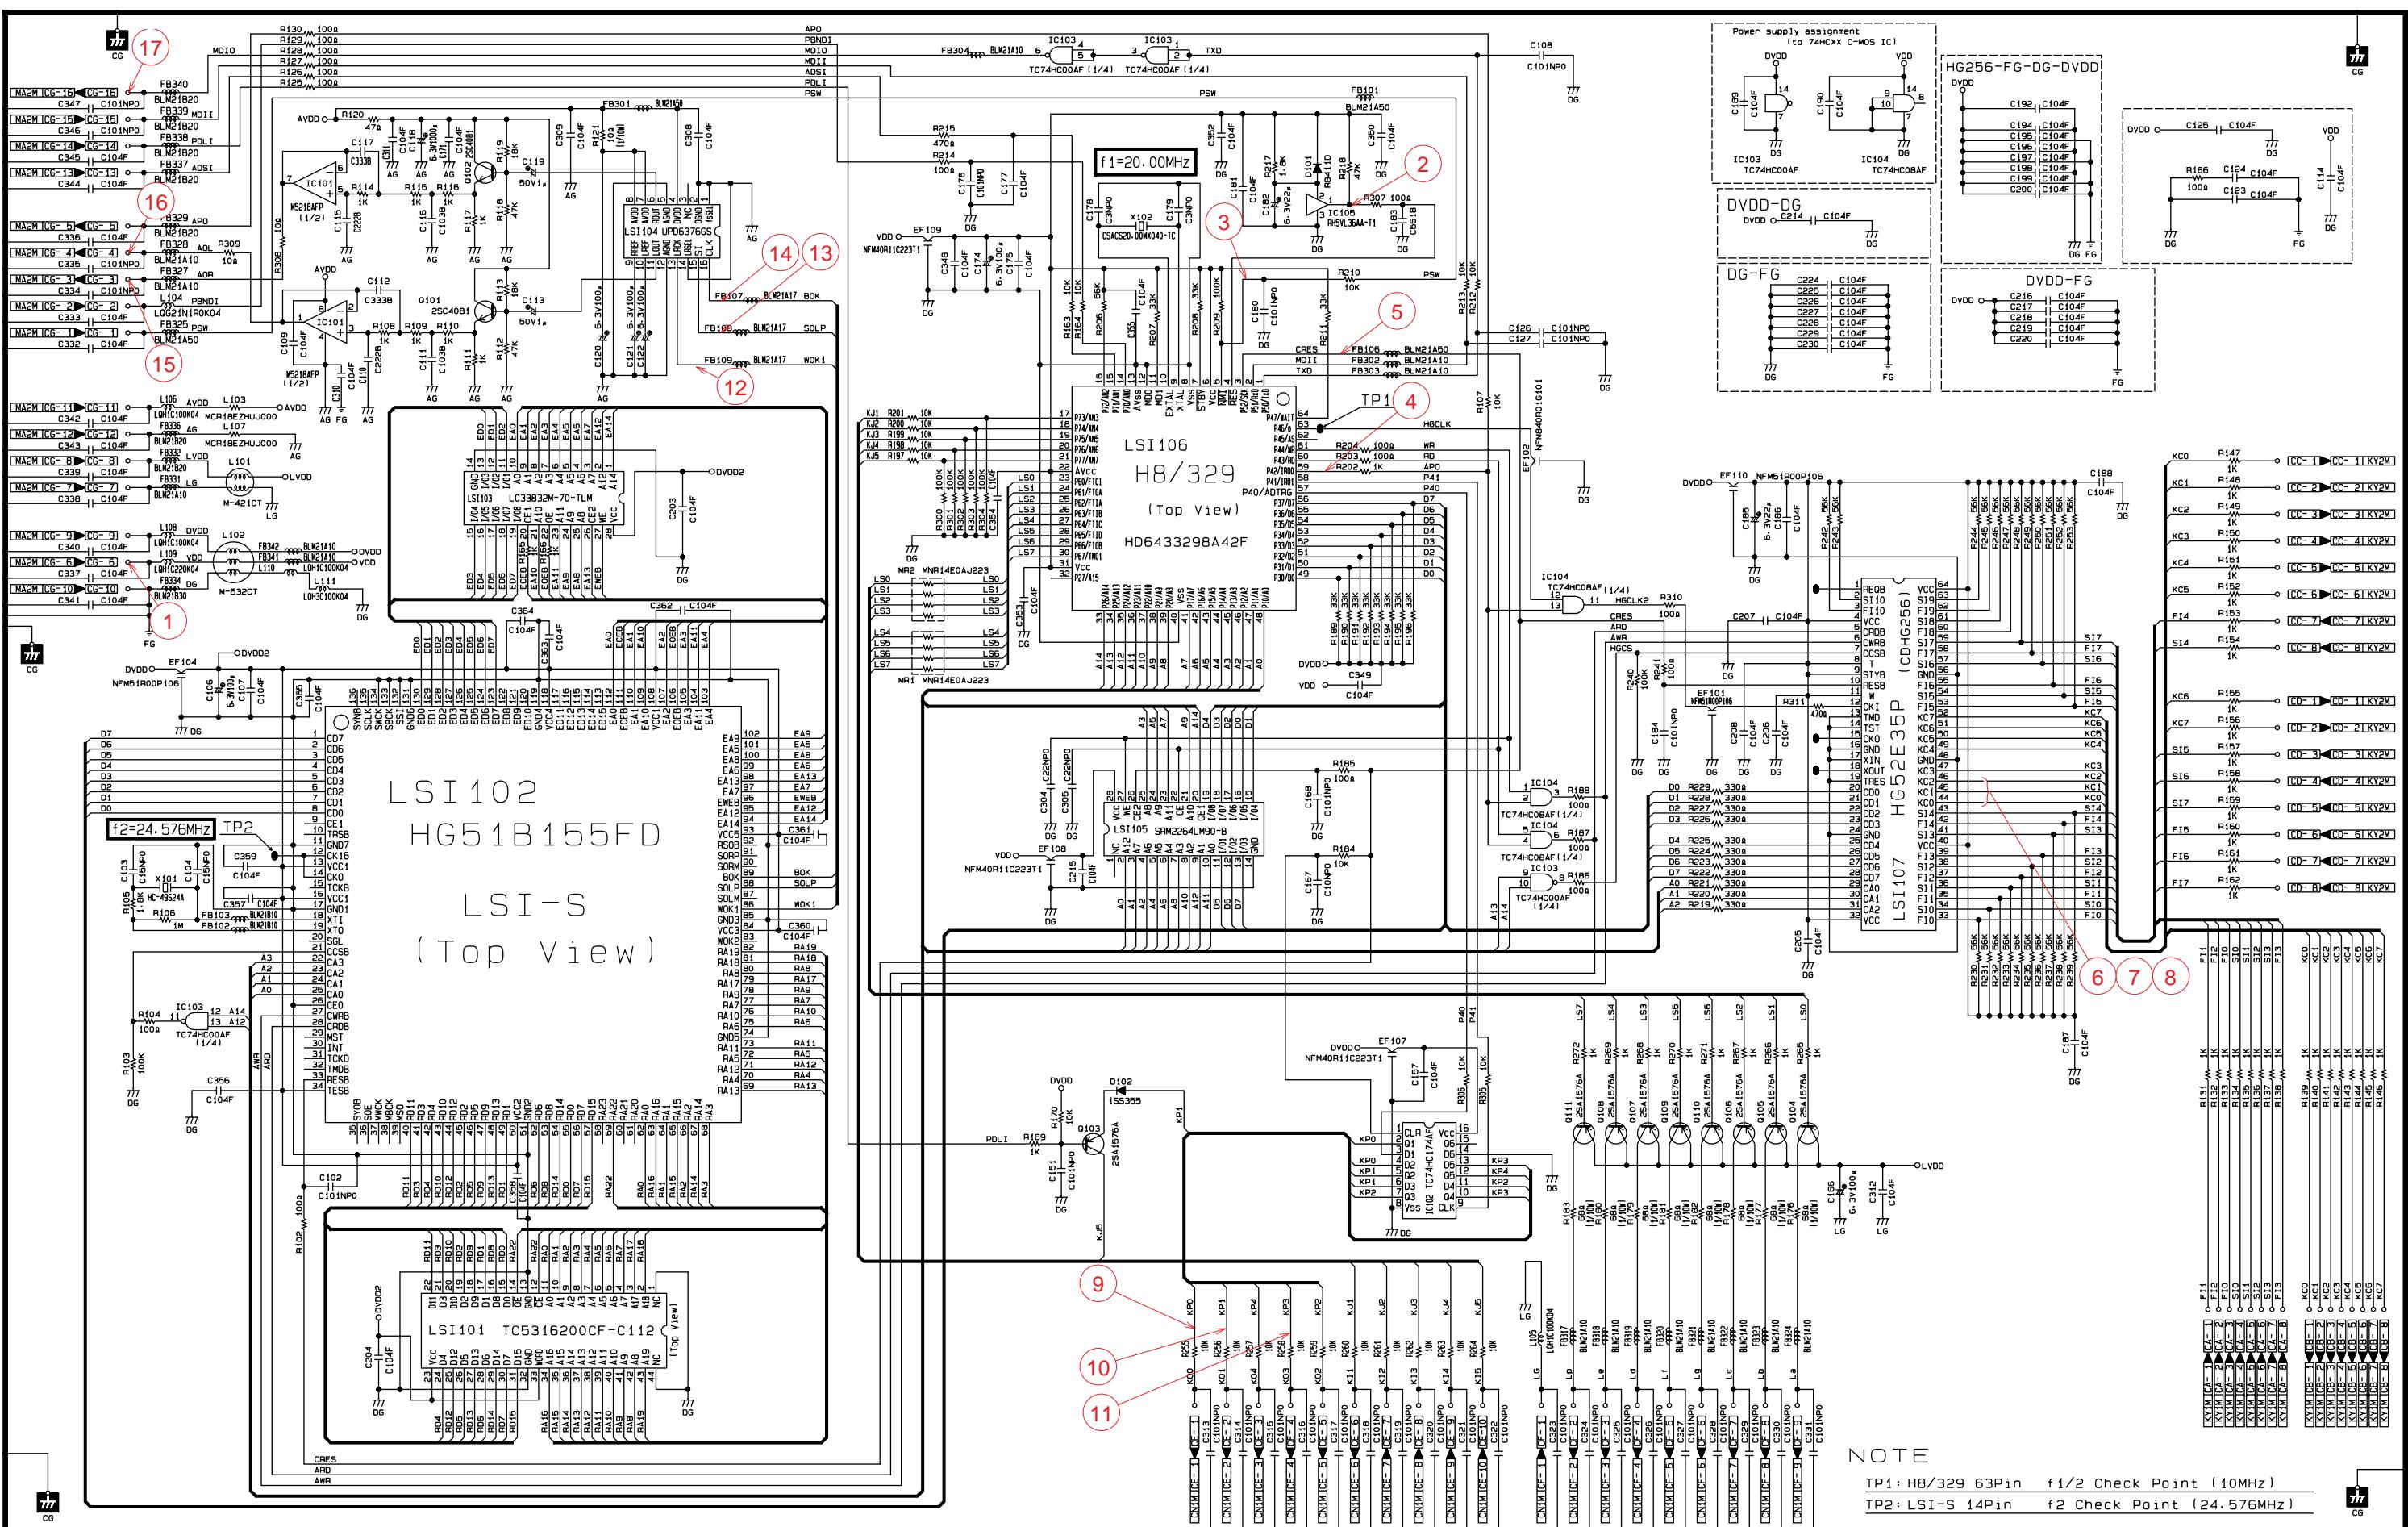


CONSOLE PCBs JCM715-CN1M/2M/3M

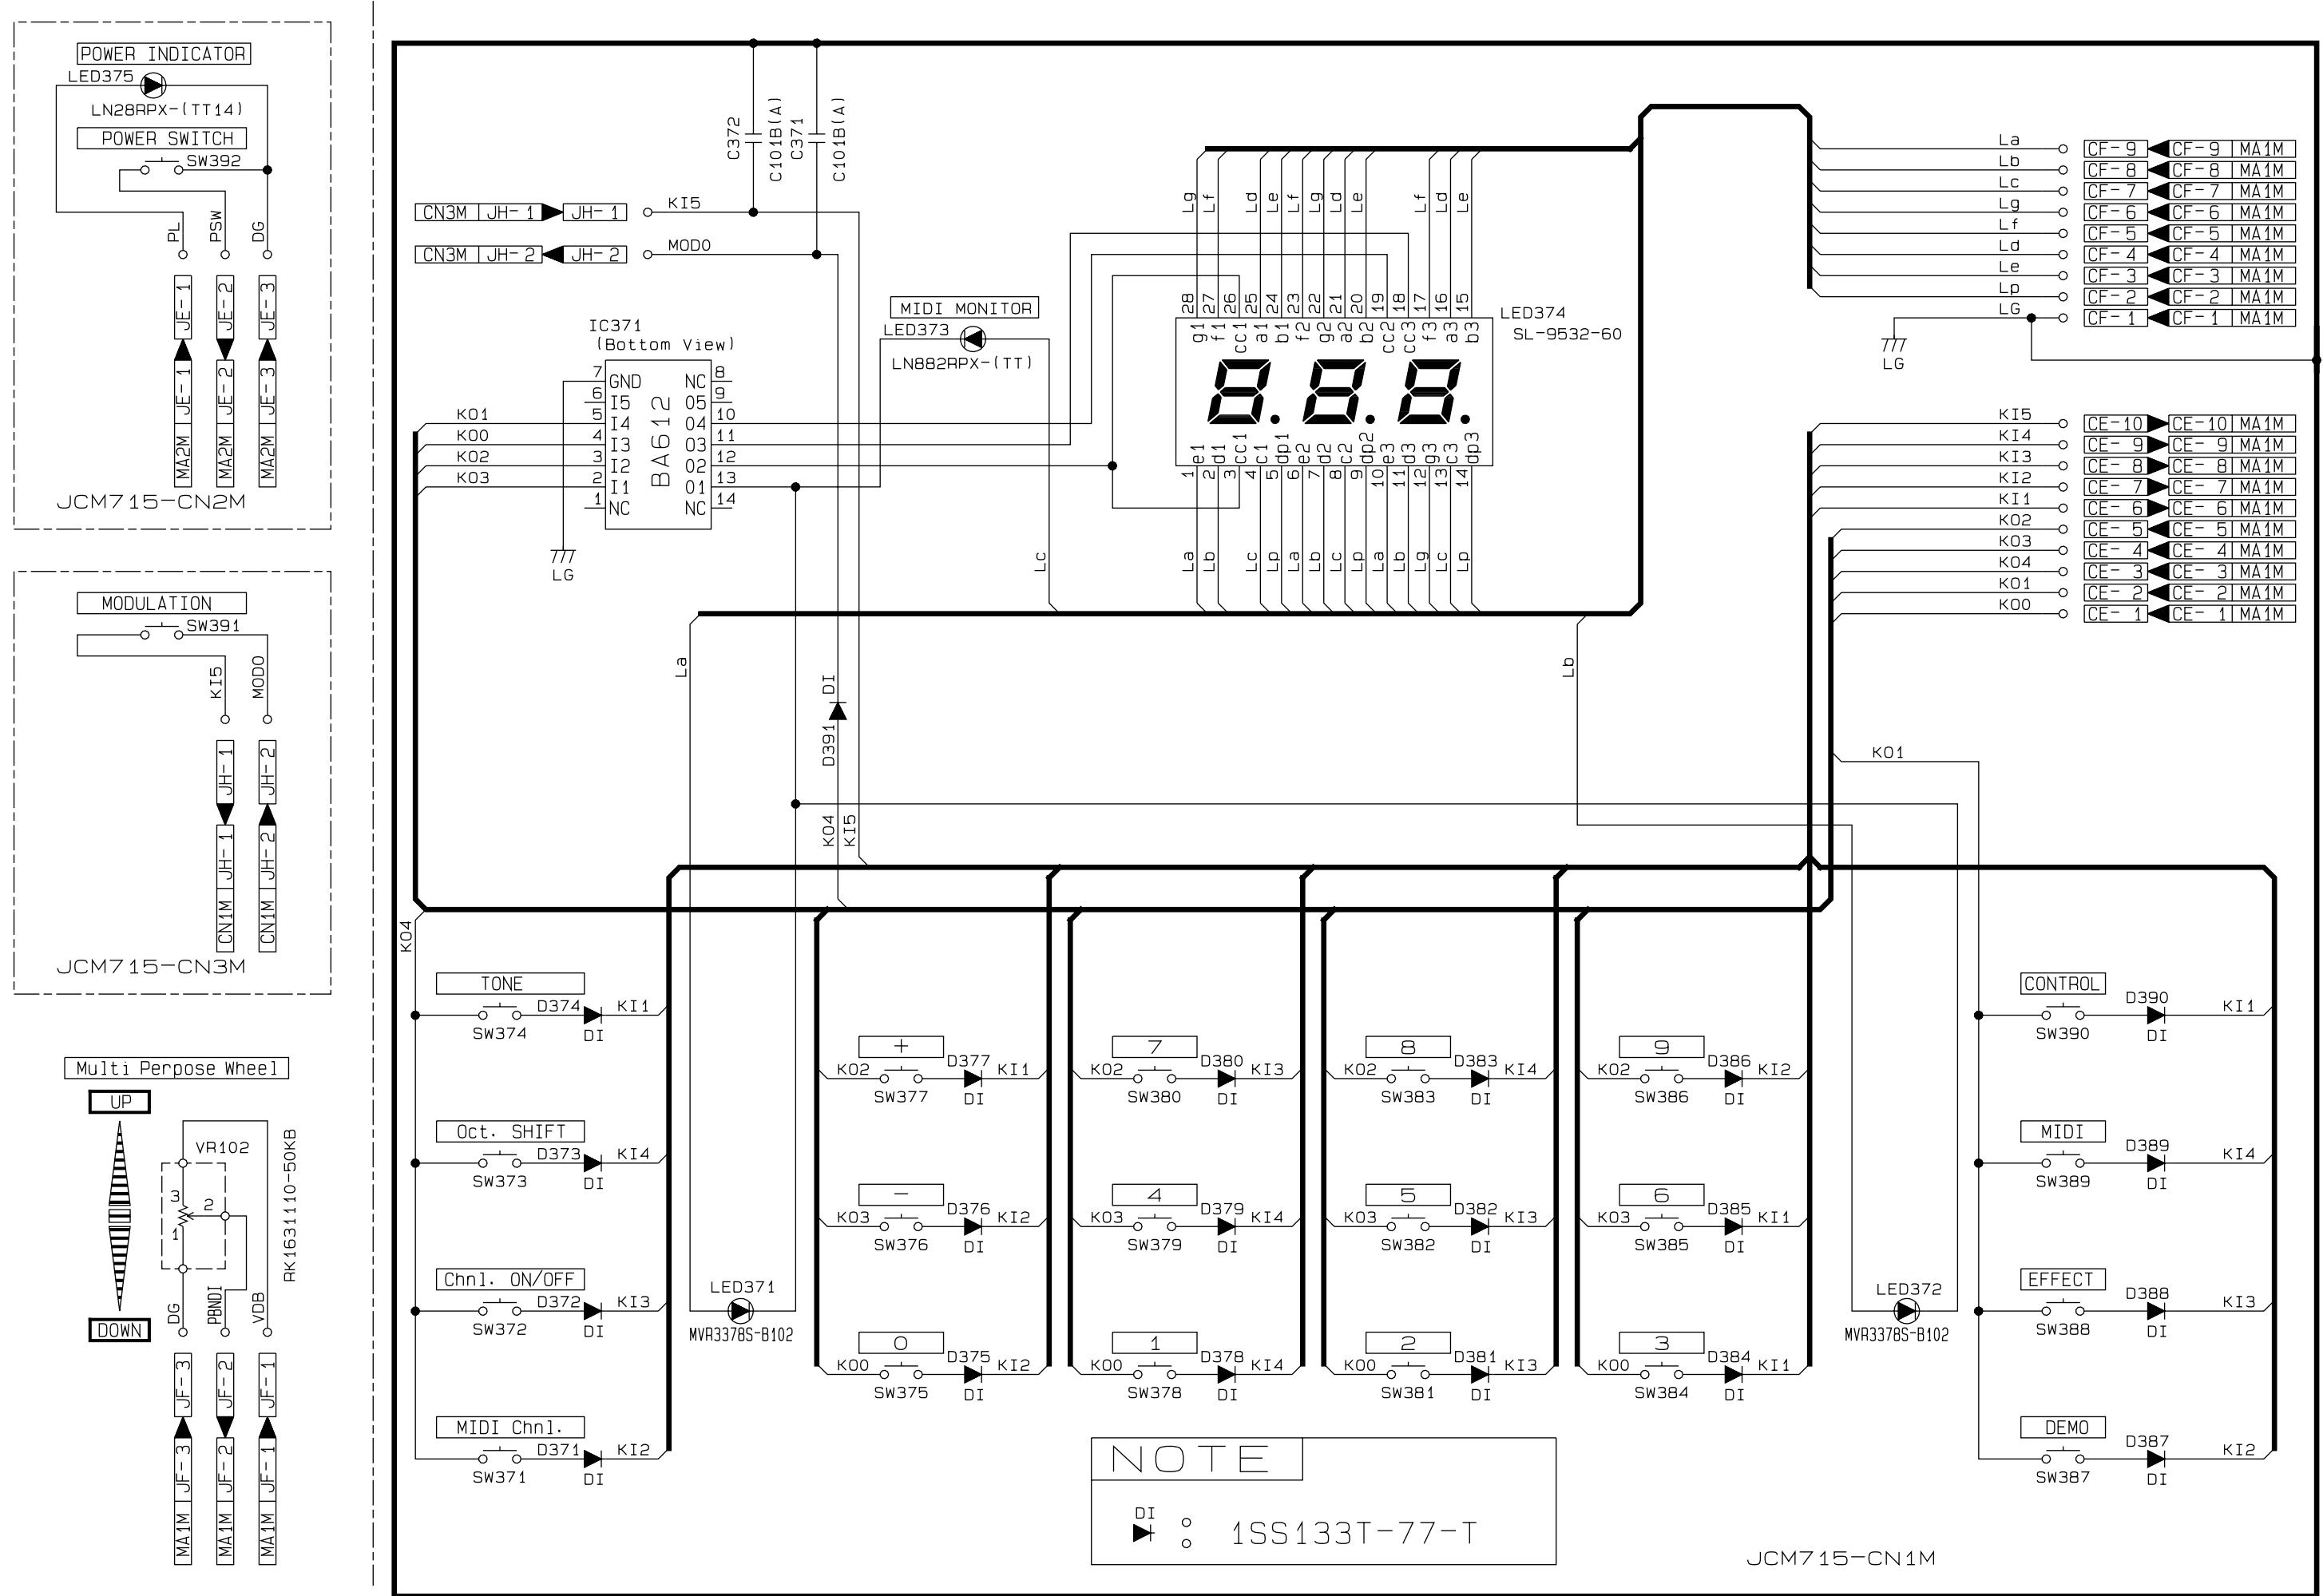


KEYBOARD PCBs M616T-KY1M/KY2M


PCB-M616T-KY1M

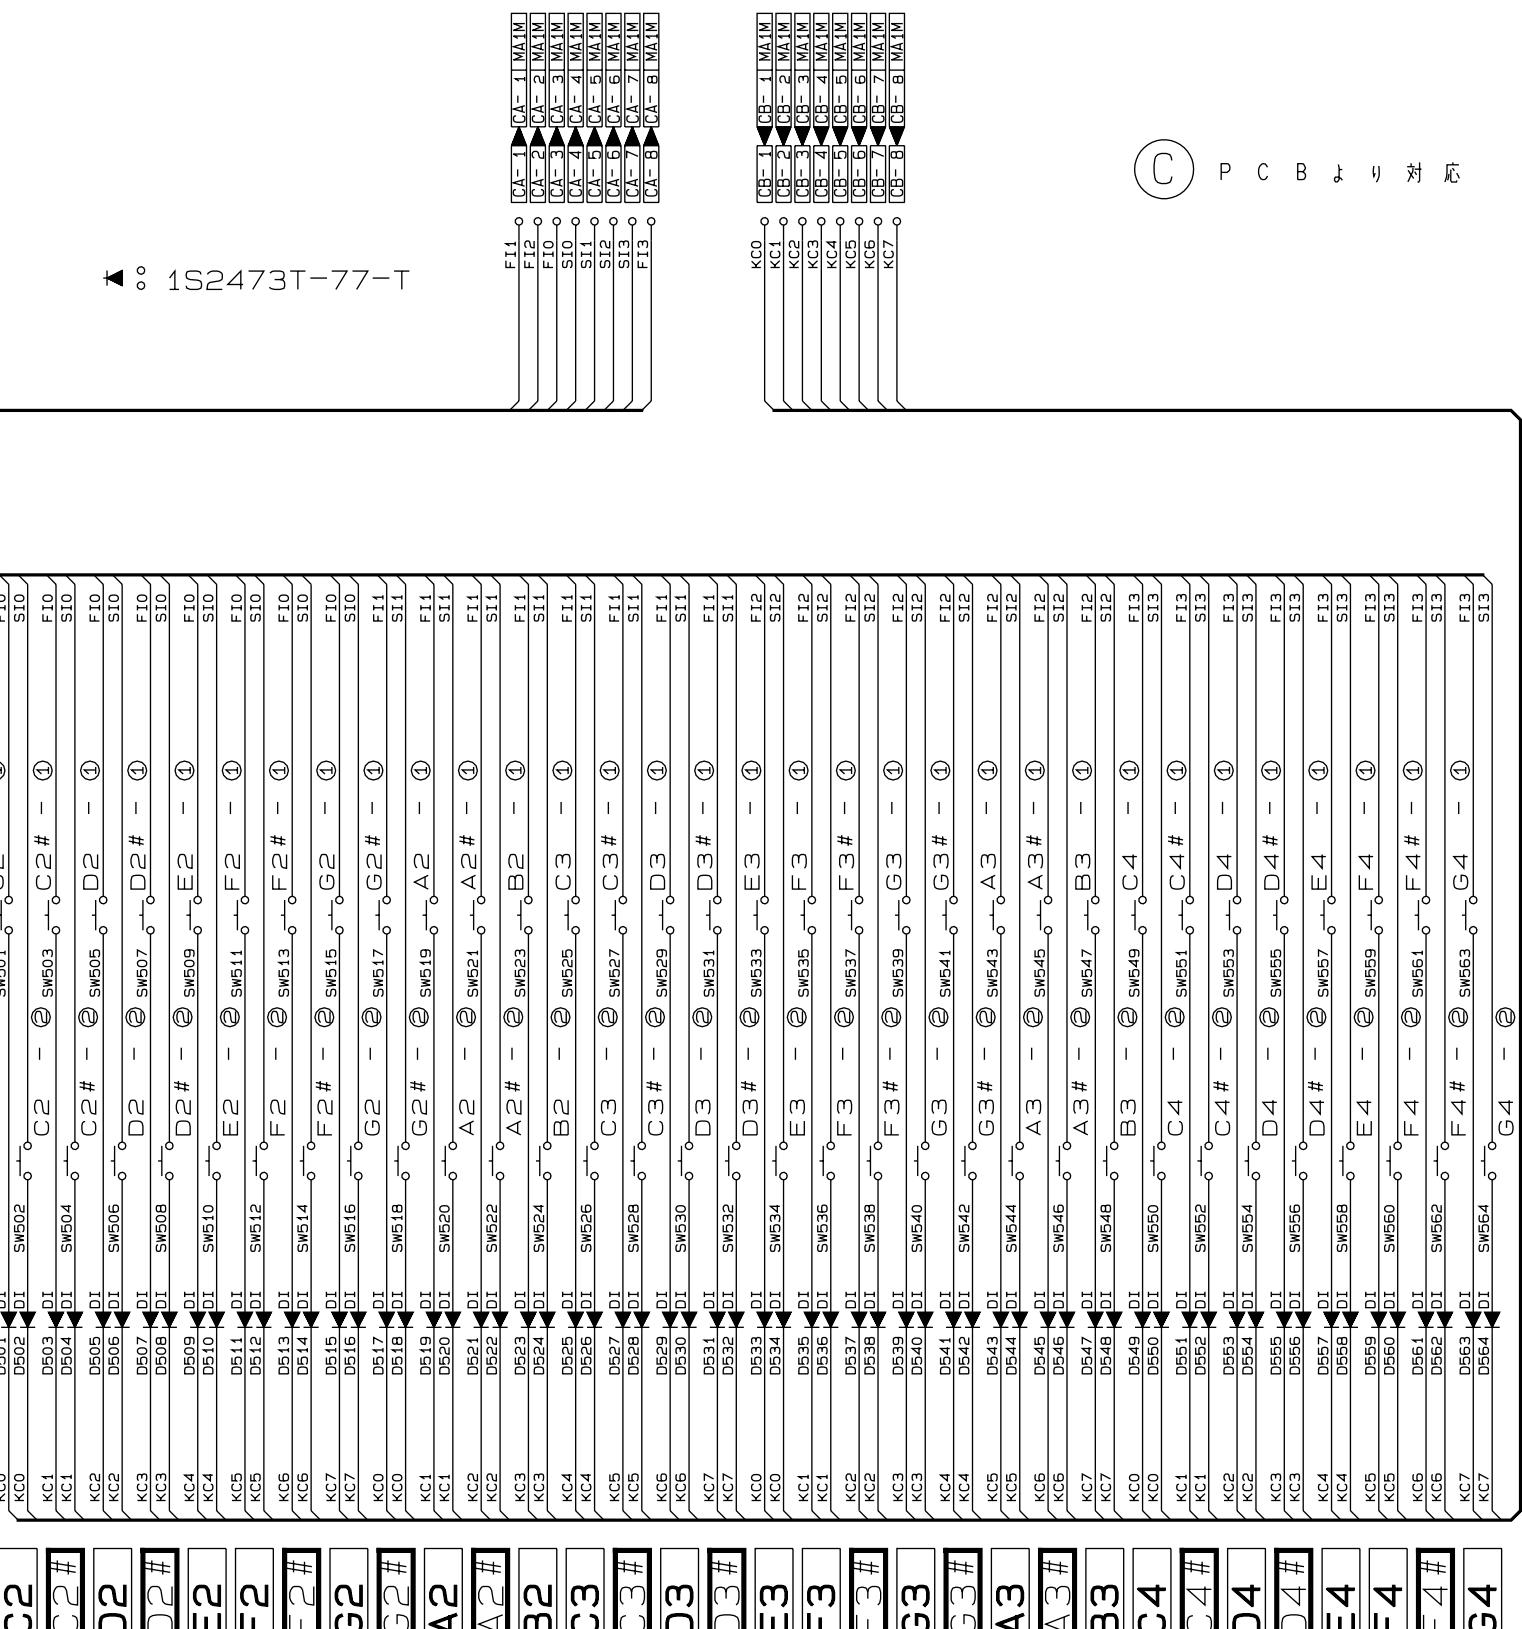

PCB-M616T-KY2M

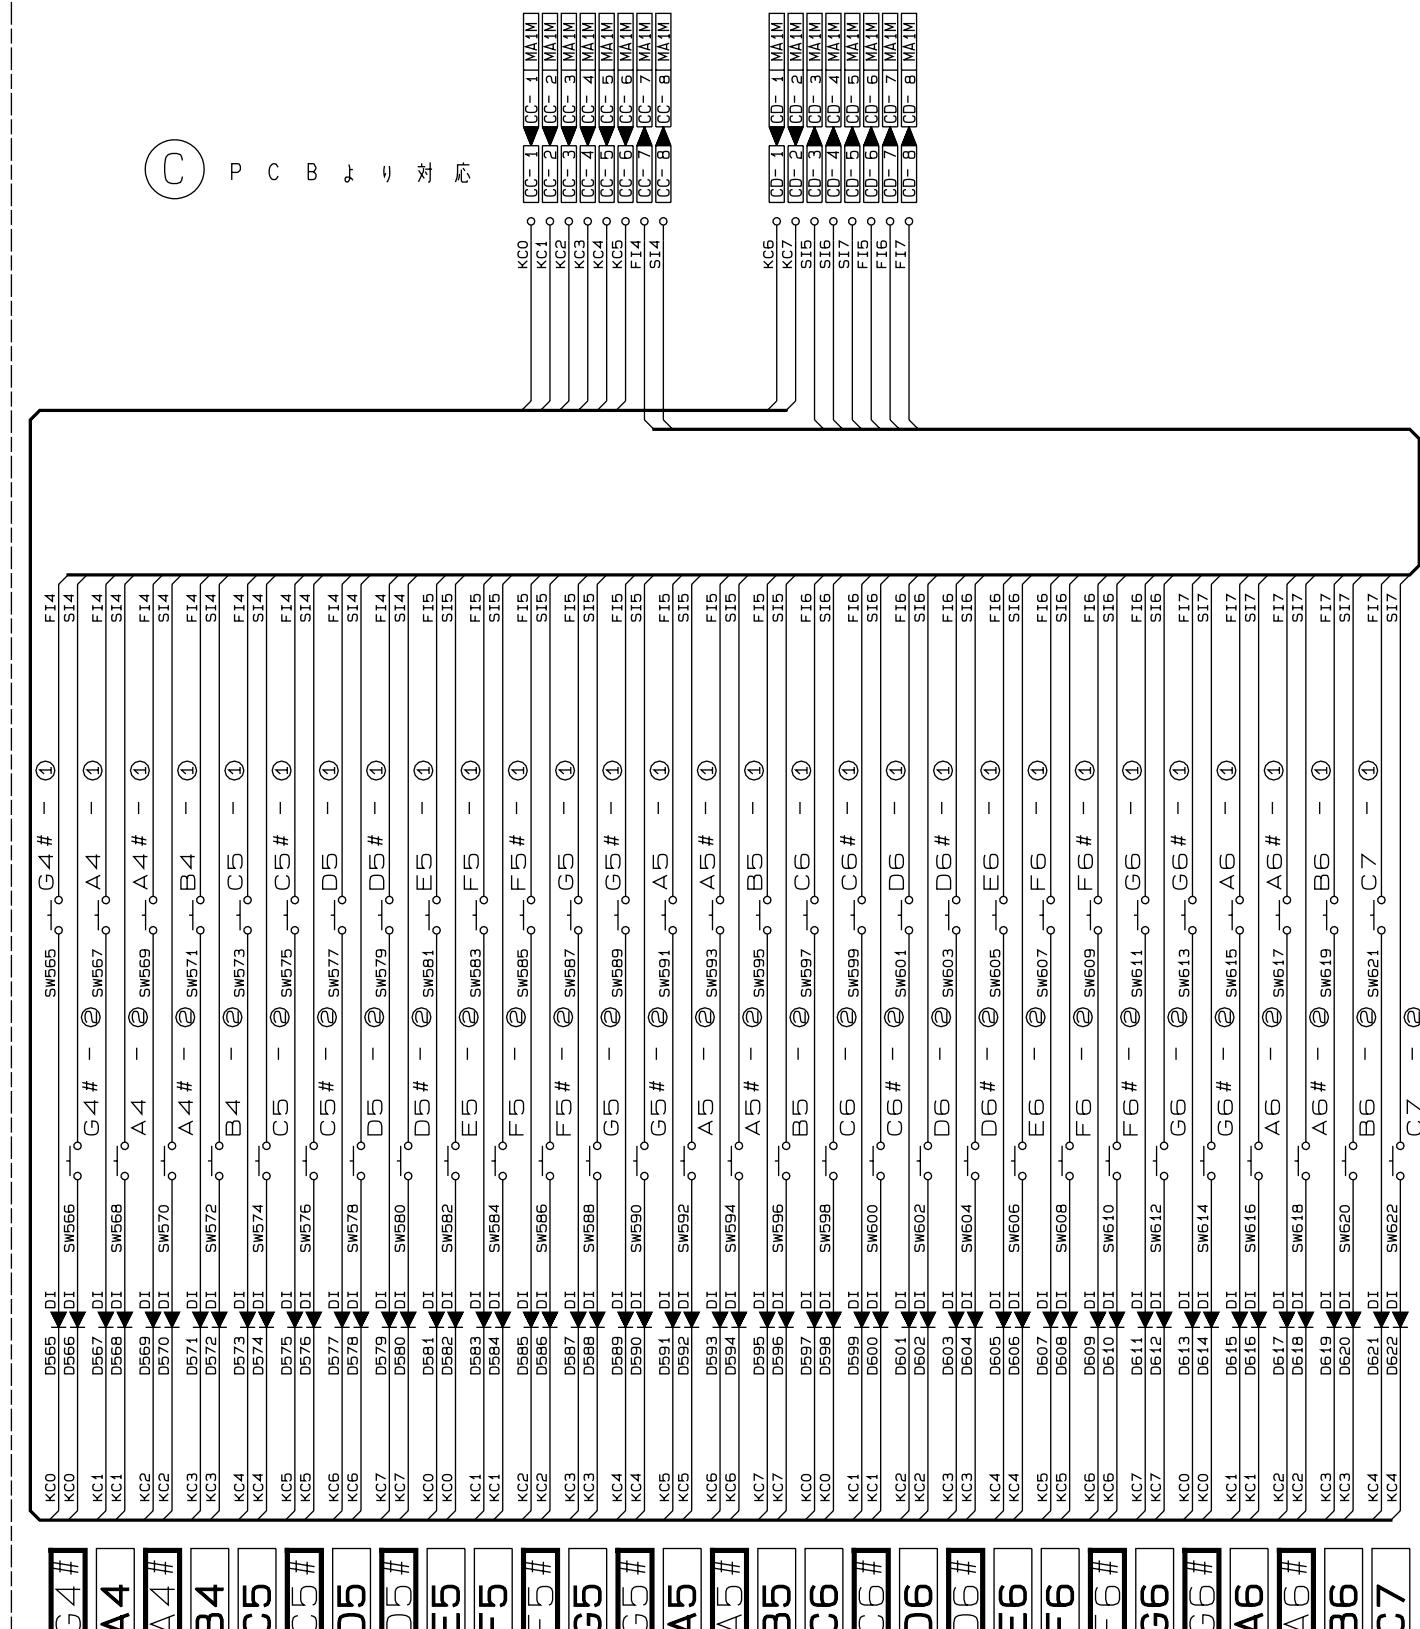

EXPLODED VIEW

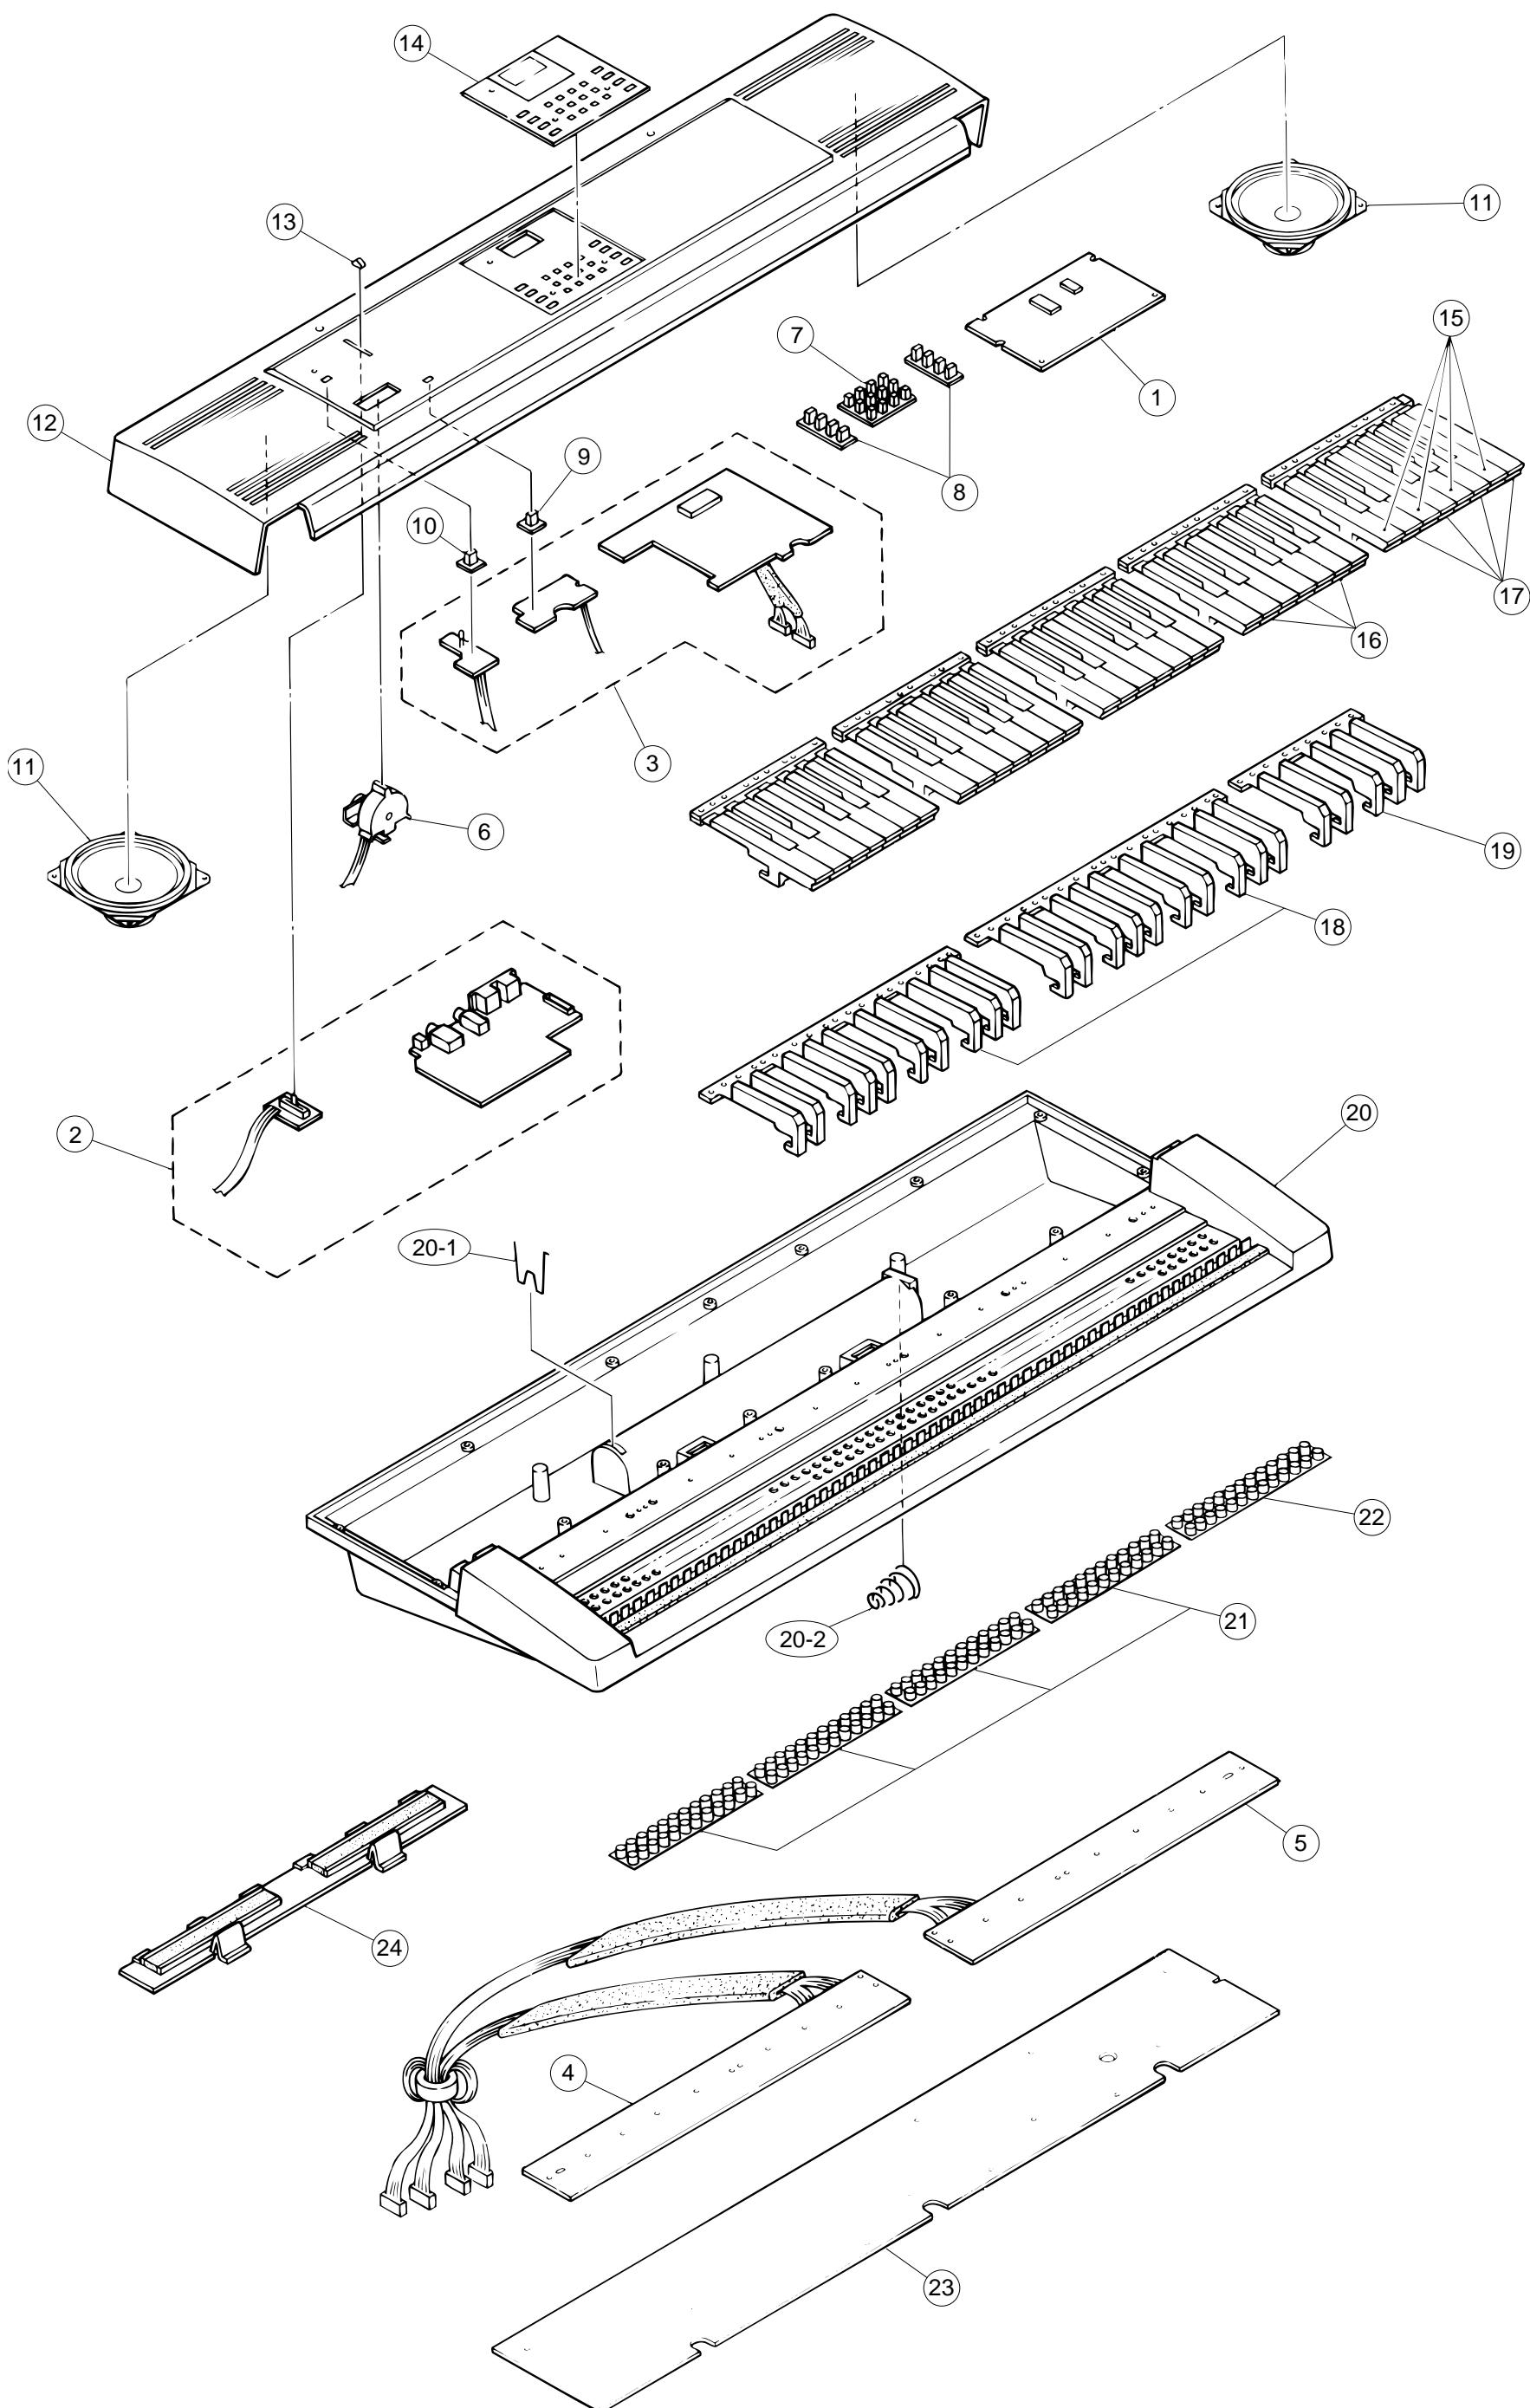

PARTS LIST

GZ-500

- Notes:
1. Prices and specifications are subject to change without prior notice.
 2. As for spare parts order and supply, refer to the "GUIDEBOOK for Spare parts Supply", published separately.
 3. The numbers in item column correspond to the same numbers in drawing.

| N | Item | Code No. | Parts Name | Specification | Q | FOB Japan N.R.Yen Unit Price | R |
|-------------------------|-------------|-----------|-----------------------|--------------------|----|------------------------------------|---|
| Main PCB | | | | | | | |
| N | 1 | 6923 6180 | PCB ass'y M715-MA1M | M140244*1 | 1 | 7,810 | A |
| N | LSI101 | 2012 1498 | LSI | TC5316200CF-C117 | 1 | 980 | A |
| N | LSI102 | 2012 1316 | LSI | HG51B155FD-1 | 1 | 1,160 | A |
| N | LSI103 | 2012 0777 | LSI | LC33832M-70-TLM | 1 | 410 | A |
| N | LSI104 | 2114 4221 | LSI | UPD6376GS-E1 | 1 | 200 | A |
| N | LSI105 | 2012 0770 | LSI | SRM2264LM90-B | 1 | 280 | A |
| N | LSI106 | 2012 0462 | LSI | HD6433298A42F | 1 | 860 | A |
| N | LSI107 | 2011 5194 | LSI | HG52E35P | 1 | 600 | A |
| N | IC101 | 2114 4214 | IC | M5218AFP-600C | 1 | 39 | B |
| N | IC102 | 2105 4452 | IC | HD74HC174FPTR | 1 | 51 | B |
| N | IC103 | 2105 3122 | IC | HD74HC00FP-TR | 1 | 35 | B |
| N | IC104 | 2105 4445 | IC | HD74HC08FPTR | 1 | 34 | B |
| N | IC105 | 2105 4536 | IC | RH5VL36AA-T1 | 1 | 44 | B |
| N | Q101, Q102 | 2252 1169 | Chip transistor | 2SC4081-T106S | 2 | 8 | B |
| N | Q103 ~ Q111 | 2250 1169 | Chip transistor | 2SA1576AT106S | 9 | 8 | B |
| N | D101 | 2390 1729 | Chip diode | RB411DT146 | 1 | 24 | C |
| N | D102 | 2390 1820 | Chip diode | 1SS355TE-17 | 1 | 9 | C |
| N | X101 | 2590 2107 | Crystal oscillator | HC-49S24A | 1 | 130 | B |
| N | X102 | 2590 2100 | Ceramic oscillator | CSACS20.00MX040-TC | 1 | 70 | B |
| Amp./Volume PCBs | | | | | | | |
| N | 2 | 6923 6190 | PCB ass'y M715-MA2,3M | M140245*1 | 1 | 2,350 | B |
| | IC401 | 2105 2114 | IC, Regulator | S-81350HG | 1 | 65 | A |
| | IC402 | 2114 2891 | IC | LA4598 | 1 | 140 | A |
| | IC403 | 2114 1421 | IC, Photocoupler | PC900V | 1 | 210 | B |
| | Q401, Q404 | 2220 1387 | Transistor | 2SC1740SQ-TP-T | 2 | 13 | A |
| | Q402 | 2253 0581 | Transistor | 2SD1858R.S-TV6-T | 1 | 24 | A |
| | Q403 | 2251 0665 | Transistor | 2SB1240R.S-TV6-T | 1 | 26 | A |
| | Q405 | 2251 0651 | Transistor | 2SB1274-CCC | 1 | 47 | A |
| | Q406 | 2200 4409 | Transistor | 2SA933-SQ-TP-T | 1 | 14 | B |
| | D401 | 2360 0098 | Zener diode | RD5.1ESB2-T1-T | 1 | 14 | A |
| | D402 | 2360 2261 | Zener diode | RD5.1JSB3-T1-T | 1 | 9 | A |
| | D403, | 2390 1344 | Diode | 1SS133T-77-T | 4 | 3 | C |
| | D407~D409 | 2310 7996 | Zener diode | RD4.7ESB2-T1-T | 1 | 12 | B |
| N | D405 | 2390 2408 | Diode | 1FWJ43N(TPA3) | 1 | 27 | C |
| | D406 | 2390 0371 | Diode | DSK10B-BT-T | 1 | 11 | C |
| | J101 | 3501 7049 | Power jack | HEC2305-01-330 | 1 | 29 | A |
| | J102 | 3612 0665 | Phone jack | YKB21-5006 | 1 | 60 | B |
| | J103 | 3612 0789 | Jack | YKB21-5010 | 1 | 60 | B |
| | J104 | 3501 4816 | DIN jack | YKF51-5051 | 1 | 110 | B |
| | VR101 | 2765 1575 | Slide volume | EWA-MJ0S10B23 | 1 | 110 | B |
| Console PCBs | | | | | | | |
| N | 3 | 6923 6200 | PCB ass'y M715-CN123M | M240232*1 | 1 | 1,170 | B |
| | IC371 | 2114 3318 | IC | BA612 | 1 | 98 | B |
| | D372~D391 | 2390 1344 | Diode | 1SS133T-77-T | 21 | 3 | C |
| N | LED371/372 | 2370 1197 | LED | MVR3378S-B102 | 2 | 18 | C |
| | LED373 | 2370 0959 | LED | LN882RPX-(TT) | 1 | 27 | C |
| | LED374 | 2370 1141 | LED | SL-9352-60 | 1 | 200 | B |
| | LED375 | 2370 0987 | LED | LN28RPX-(TT14) | 1 | 17 | C |
| Keyboard PCBs | | | | | | | |
| N | 4 | 6923 6240 | PCB ass'y M616T-KY1M | M111750*3 | 1 | 870 | B |
| | | 2301 0101 | Diode | 1S2473-T-77-T | 64 | 8 | C |
| N | 5 | 6923 6250 | PCB ass'y M616T-KY2M | M111751*3 | 1 | 830 | B |

Notes: N – New parts

M – Minimum order/supply quantity

R – Rank

| N | Item | Code No. | Parts Name | Specification | Q | FOB Japan N.R.Yen Unit Price | R |
|-------------------------|------------|------------------------|------------------------------|-----------------------------|--------|------------------------------------|--------|
| | | 2301 0101 | Diode | 1S2473-T-77-T | 58 | 8 | C |
| Bender | | | | | | | |
| N | VR102 6 | 2765 1141 6923 6450 | Rotary volume Bender knob | RK1631110-50KB M340169-2 | 1 1 | 190 60 | B C |
| Mechanical Parts | | | | | | | |
| N | 7 | 6906 7781 | Rubber button, Light gray | M312088A-3 | 1 | 97 | B |
| N | 8 | 6923 6420 | Rubber button, White | M312125-3 | 2 | 67 | B |
| N | 9 | 6923 6410 | Rubber button, Gray | M312123-3 | 1 | 28 | B |
| N | 10 | 6923 6400 | Rubber button, Pink | M312122-3 | 1 | 28 | B |
| N | 11 | 3831 0357 | Speaker | 1221AF | 2 | 1,000 | B |
| N | 12 | 6923 6390 | Top panel | M140150-1 | 1 | 1,340 | C |
| N | 13 | 6923 6430 | Slide knob | M311860-2 | 1 | 13 | B |
| N | 14 | 6923 6381 | Display plate | M340172A-1 | 1 | 170 | C |
| | 15 | 6922 2840 | White key set, CEGB | M111723-1 | 5 | 100 | A |
| | 16 | 6922 2850 | White key set, DFA | M111724-1 | 4 | 100 | A |
| | 17 | 6922 2860 | White key set, DFAS | M111725-1 | 1 | 100 | A |
| | 18 | 6922 2740 | Black key set, 10-key | M111726-1 | 2 | 120 | A |
| N | 19 | 6922 2750 | Black key set, 5-key | M111726-2 | 1 | 86 | A |
| | 20 | 6906 7805 | Case | M111732E*3 | 1 | 1,340 | C |
| 20-1 | | 6902 6140 | Battery spring | M41226-1 | 1 | 27 | C |
| 20-2 | | 6903 2150 | Battery spring | M41330-1 | 1 | 18 | C |
| | 21 | 6922 2761 | Key contact rubber LT-CB | M211704A-1 | 4 | 89 | B |
| | 22 | 6922 2771 | Key contact rubber LT-CS | M211705A-1 | 1 | 91 | B |
| | 23 | 6922 2631 | Bottom plate | M211706A-1 | 1 | 360 | C |
| N | 24 | 6906 7876 | Battery cover | M311164F*9 | 1 | 180 | B |
| Accessory | | | | | | | |
| | | 6920 8691 | Music stand | M311760A-1 | 1 | 130 | B |

Notes: N – New parts
 M – Minimum order/supply quantity
 R – Rank

CASIO COMPUTER CO.,LTD.
Service Division

8-11-10, Nishi-Shinjuku
Shinjuku-ku, Tokyo 160, Japan
Telephone: 03-3347-4926

MA0800751A

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>